## **ASSEMBLY INSTRUCTIONS**

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Hammer (not provided).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	CHAIR FRAME	1 PC	
В	CHAIR LEG (L)	1 PC	
С	CHAIR LEG (R)	1 PC	
D	FRONT RAIL	1 PC	
Е	BACK RAIL	1 PC	

HARDWARE LIST			
ITEM	DESCRIPTION	QTY	
1	JCBC Bolt M6 x 20mm caucace €	2 PCS	
2	JCBC Bolt M6 x 30mm ammud	2 PCS	
3	JCBB Bolt M8 x 50mm www. €	4 PCS	
4	M6 FLAT WASHER	4 PCS	
5	M6 SPRING WASHER	4 PCS	
6	M8 SPRING WASHER	4 PCS	
7	WOOD DOWEL M8 x 30mm	8 PCS	
8	VMB 3017 "L" BRACKET (T2.5mm)(BLACK)	2 PCS	
9	M4 ALLEN KEY (BALL SHAPE)	1 PC	
10	M5 ALLEN KEY (BALL SHAPE)	1 PC	



