

ASSEMBLY INSTRUCTION

MODEL : 329C

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list


For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION :


1. Do not FULLY - TIGHTEN the nut or screw until all is ready to assemble.
2. Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.

NO	PART LIST	QTY	NO	DESCRIPTION	QTY
A	BACK REST	1 PC	1	JCBC SCREW M6 X 50MM	6 PCS
B	FRONT LEG	1 PC	2	WOOD DOWEL Ø8 x 30MM	4 PCS
C	SIDE RAIL	2 PCS	3	CSK SCREW M4 x 30MM	3 PCS
D	CUSHION SEAT	1 PC	4	SPRNG WASHER M6	6 PCS
			5	M4 ALLEN KEY	1 PC


STEP 1

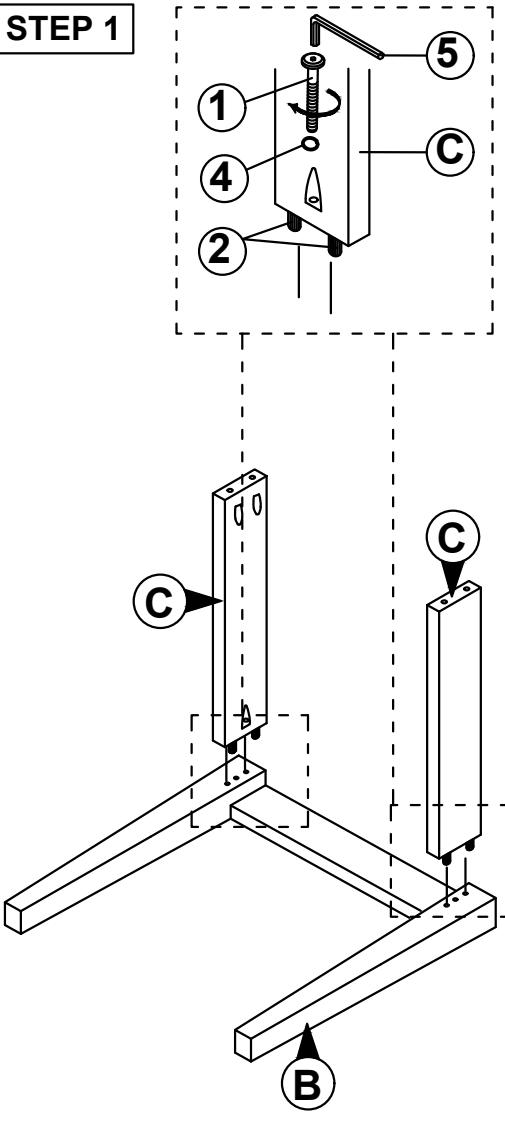


STEP 2

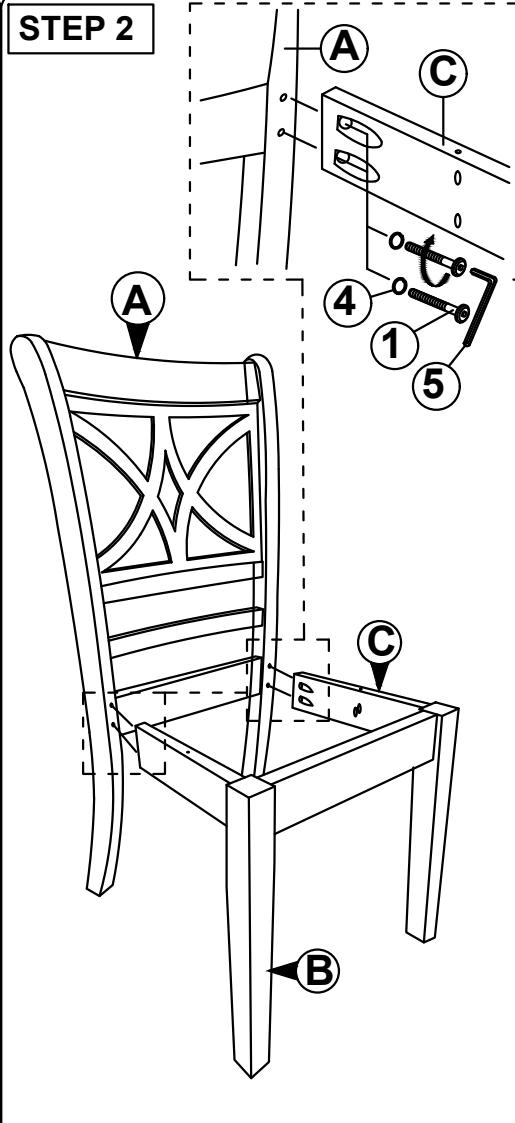

STEP 3

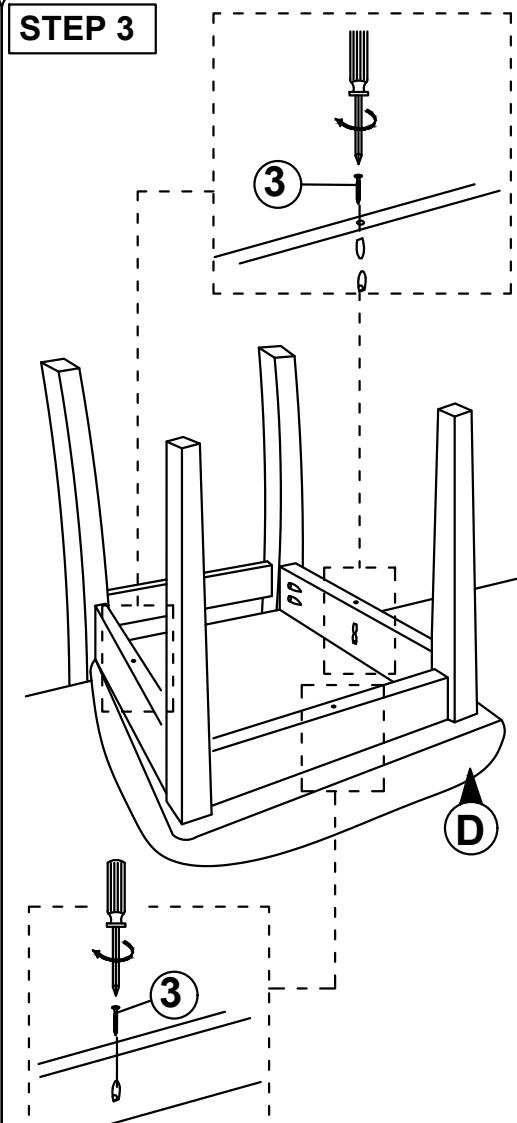

STEP 4

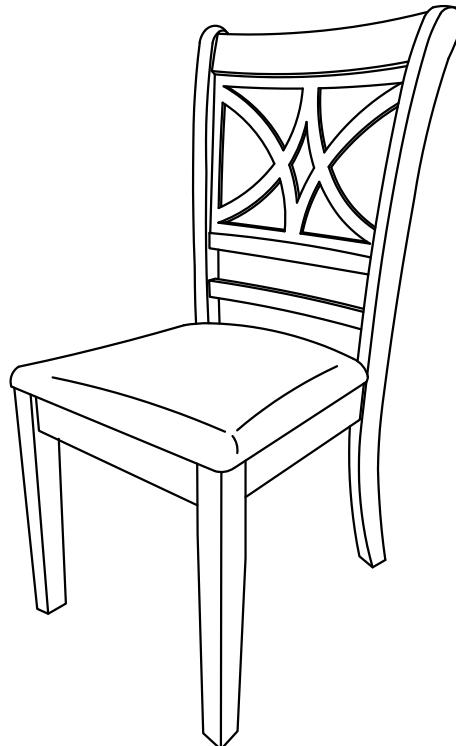

COMPLETE ASSEMBLE

ASSEMBLY INSTRUCTION

MODEL : 7028T / 7028-1T

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.


CAUTION :

1. Do not FULLY - TIGHTEN the nut or screw until all is ready to assemble.
2. Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.


NO	PART LIST	QTY
A	TABLE TOP	1 PC
B	PEDESTAL TABLE CENTER	1 PC
C	PEDESTAL LEGS	4 PCS
D	CROSS BAR 'X'	2 PCS

NO	DESCRIPTION	QTY
1	CSK SCREW M4 X 30MM	16 PCS
2	HEX. NUT	8 PCS
3	FLAT WASHER	8 PCS
4	SPANNAR	1 PC
5	ADJUSTER	4 PCS


STEP 1

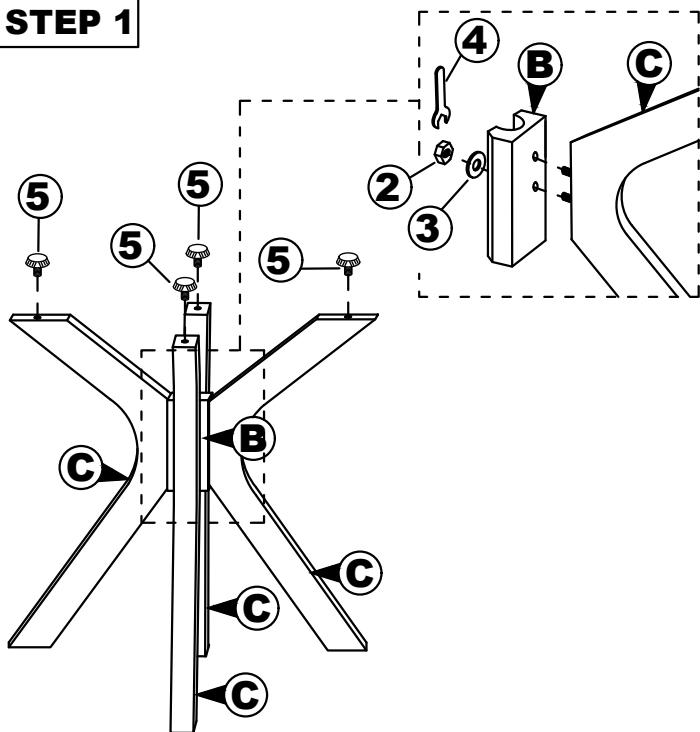


STEP 2

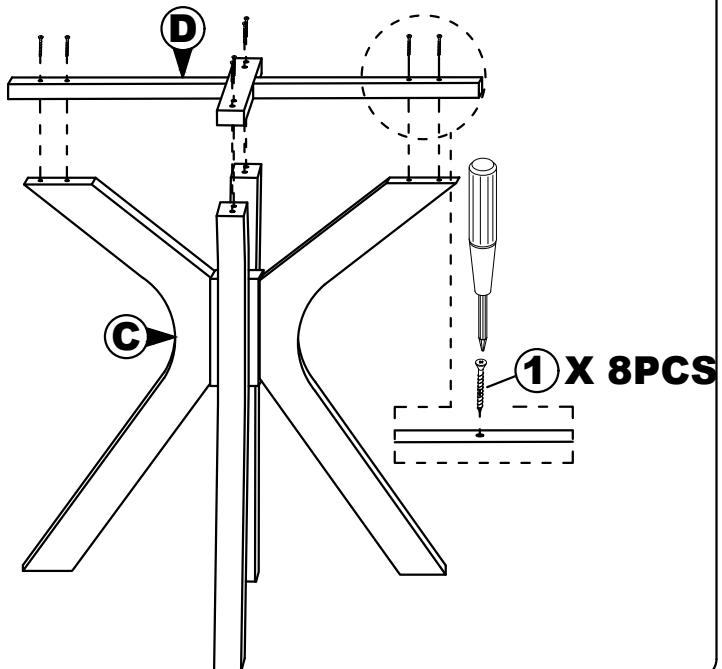

STEP 3

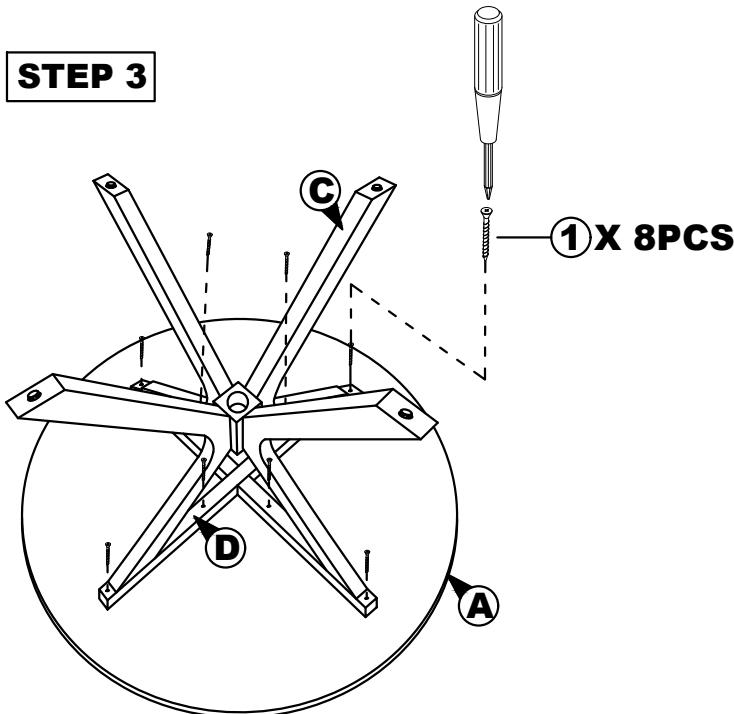

STEP 4

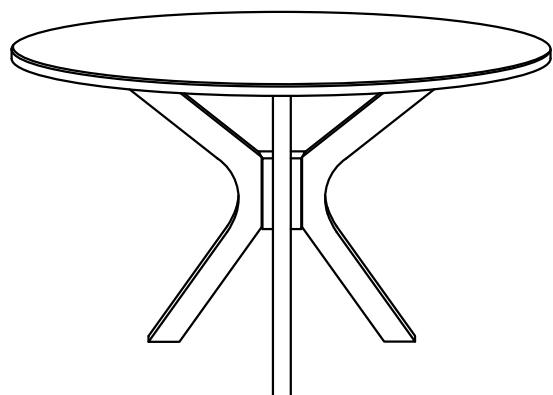

COMPLETE
ASSEMBLE