ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
Tool needed : Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	BOX	QTY
A	LEG FRONT	1	2 PCS
B	LEG BACK (L/R)	1	2 PCS
C	CUSHION	1	1 PC

HARDWARE LIST (BOX : 1)		
ITEM	DESCRIPTION	QTY
1	JCBB BOLT M8 x 50mm	8pcs
2	M8 FLAT WASHER	8pcs
3	M8 SPRING WASHER	8pcs
4	M5 ALLEN KEY (BALL SHAPE)	1PC


STEP 1

Take out LEG FRONT (A) , LEG BACK (B)
for the CUSHION BOTTOM (C).

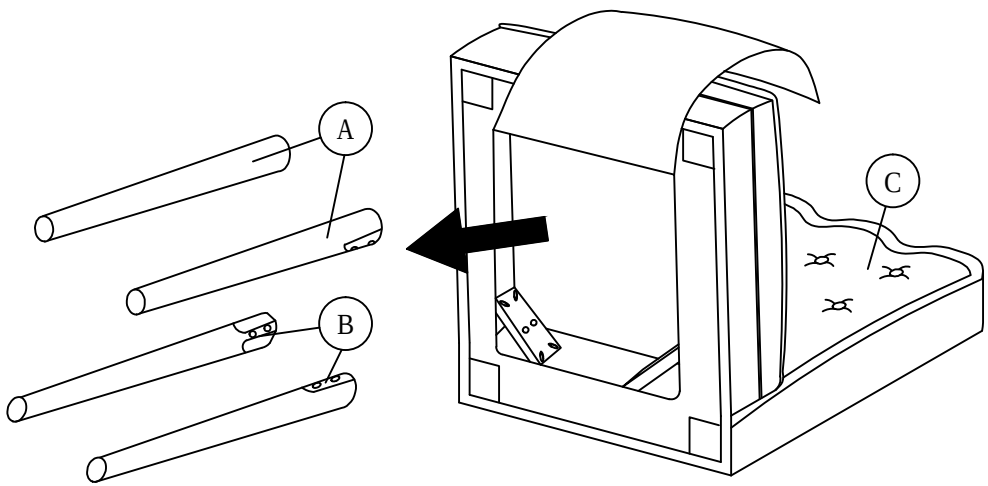


STEP 2

Assemble with the sticker.

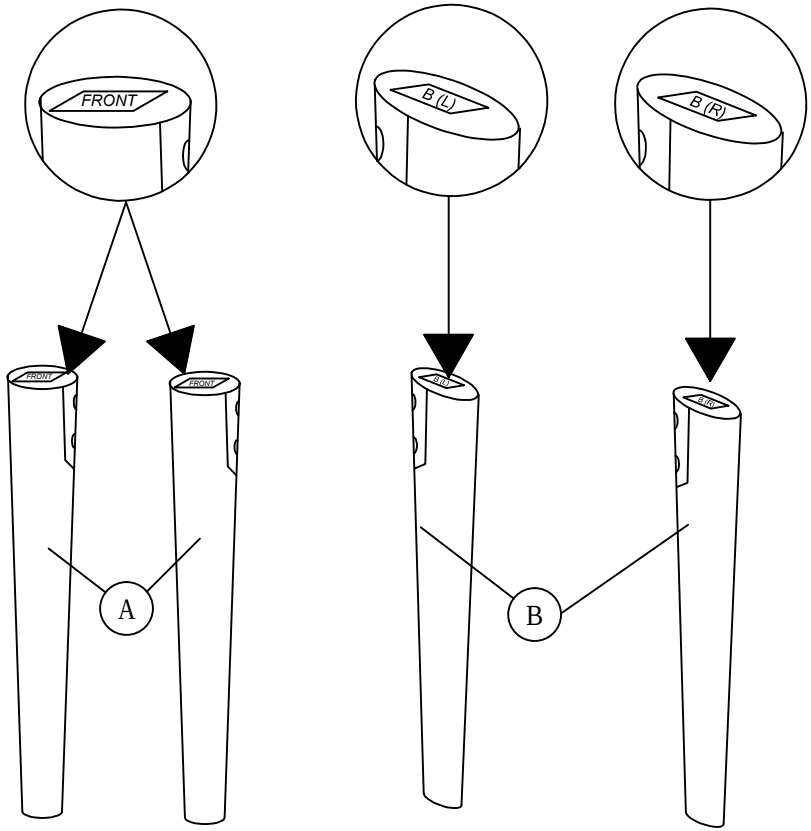


ASSEMBLY INSTRUCTIONS

STEP 3 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C).

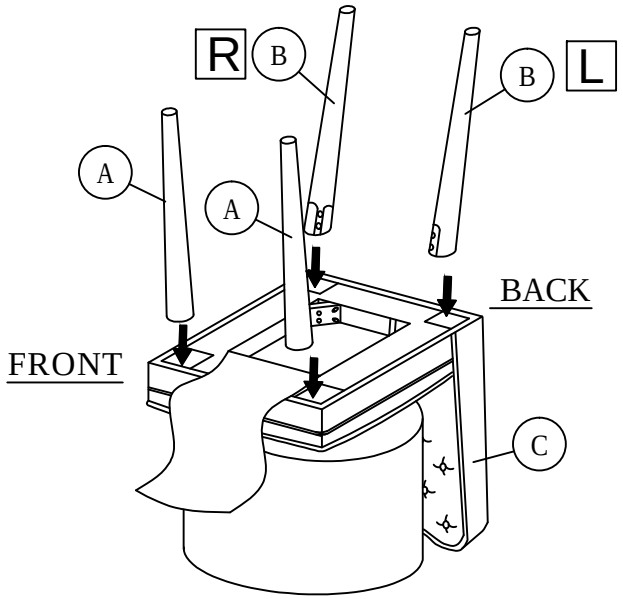

STEP 4 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C). Using hardware part 1,2,3,4.

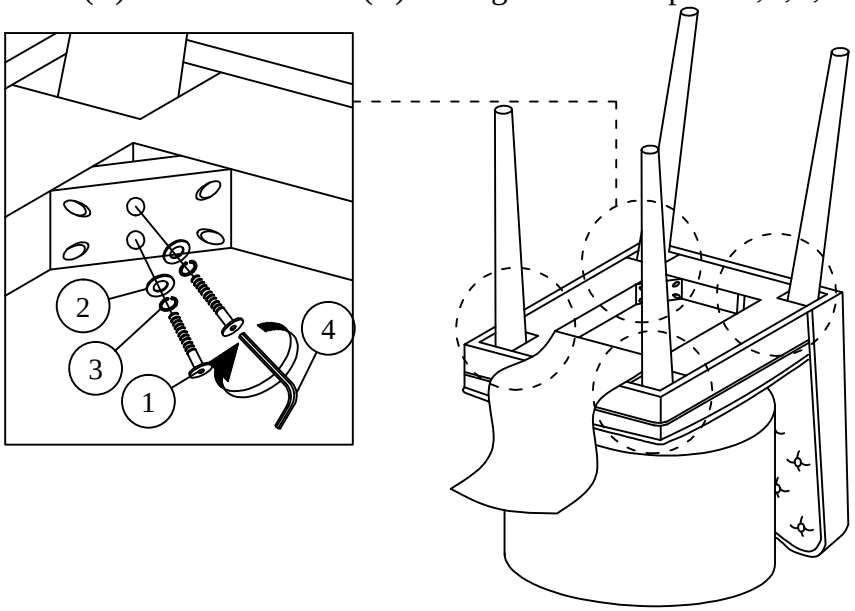

STEP 5

SOFA ASSEMBLY IS COMPLETE.

