


Assembly Instruction


Model : CB - 2224

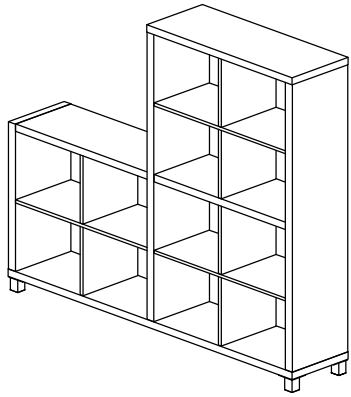


Seznam Delov			
Št	Oblika	Opis	Kol
1		8x25mm Wood Dowel	38Kos
2		8x50mm Wood Dowel	6Kos
3		15MM Titus Minifix	28Sets
4		M3.5x16mm Screw	15Kos
5		M4x65mm Screw	10Kos
6		15mm Minifix Cap	4Kos
7		15mm Minifix Cap	4Kos
8		Plastic Sofa Leg	5Kos
9		8x30mm Wood Dowel	4Kos

Dowel / Cam - Lock Installation	


Part List

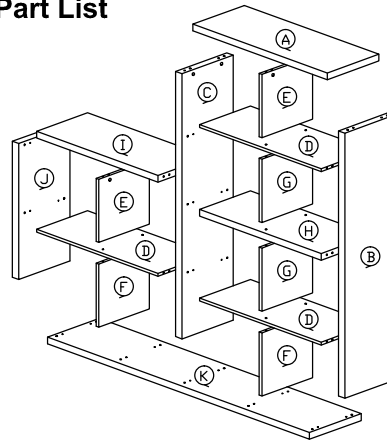


Step 1

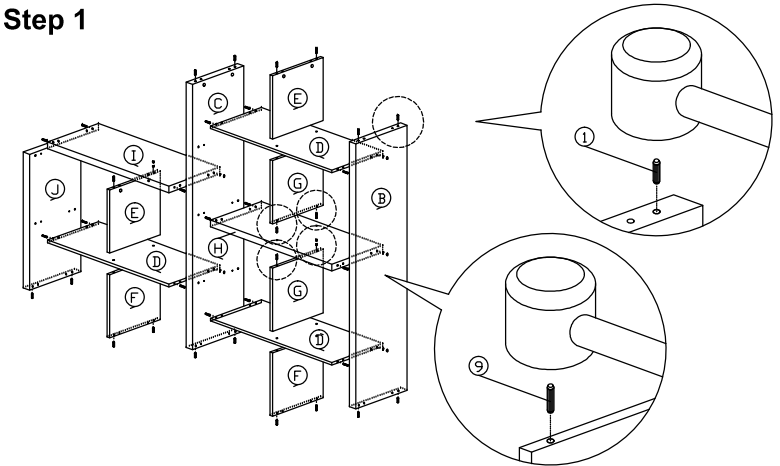


Step 2

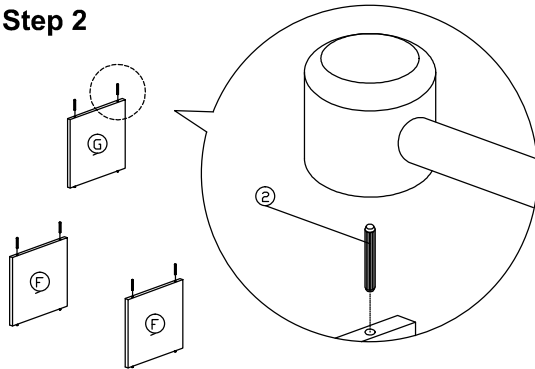


Step 3

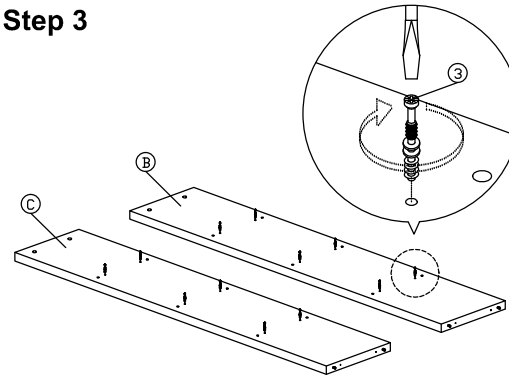


Step 4

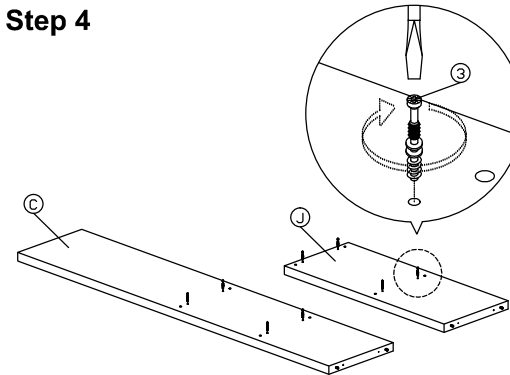


Korak 5

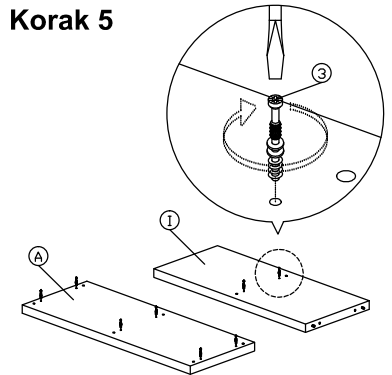


Step 6

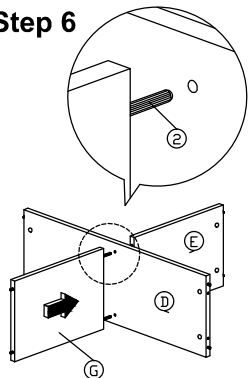


Step 7

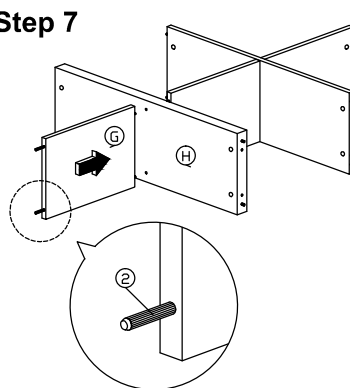

Step 8

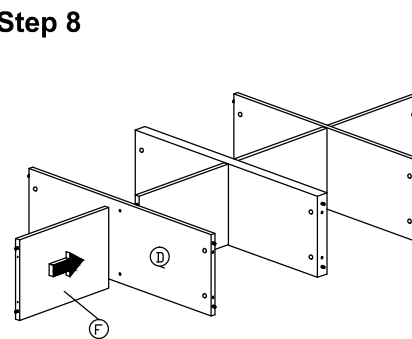


Step 9

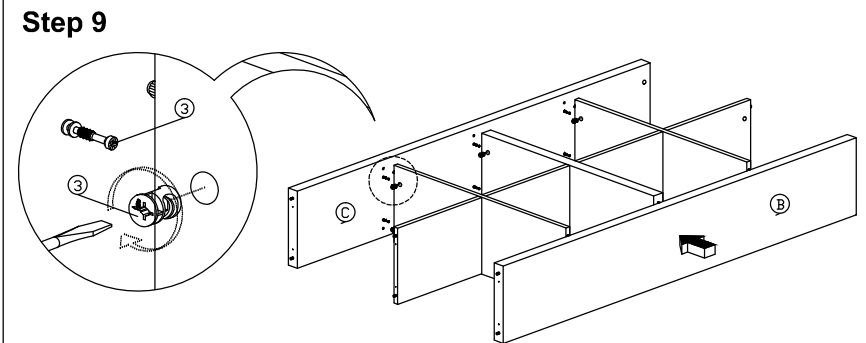


Assembly Instruction


Step 10

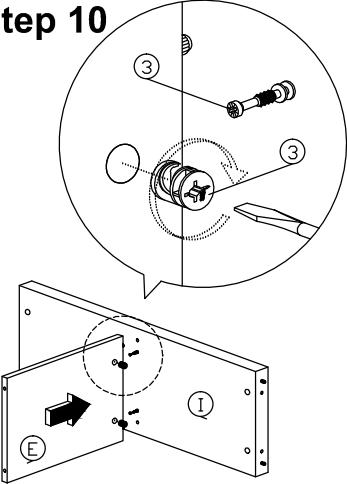


Step 11

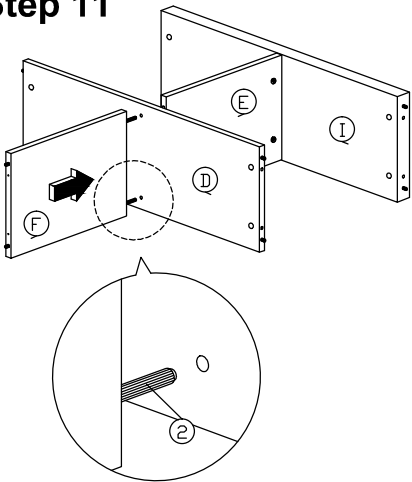


Step 12

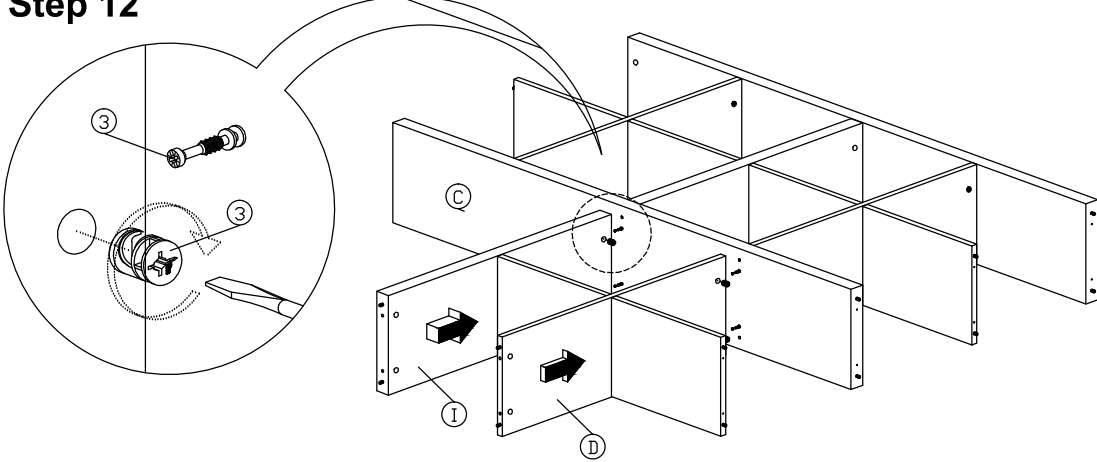

Step 13

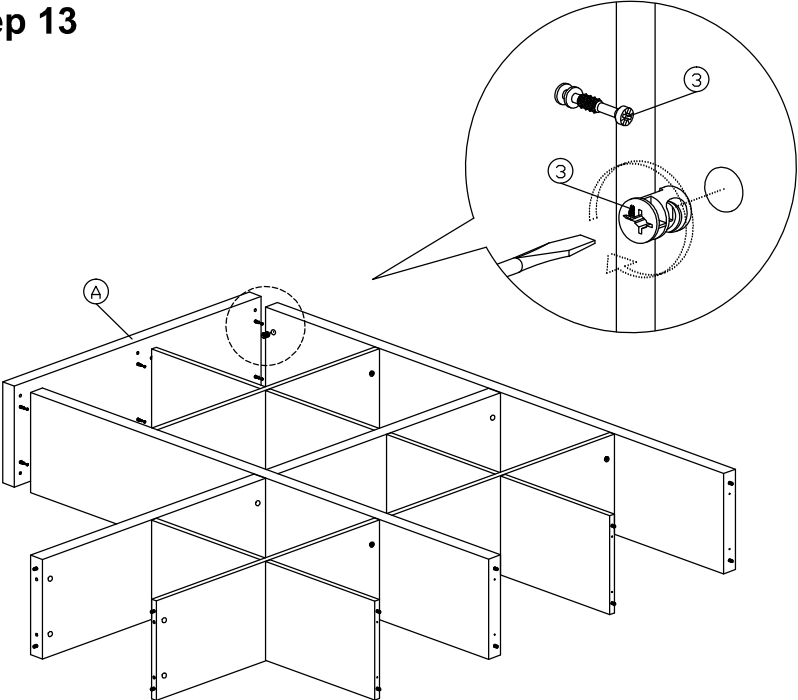


Step 14

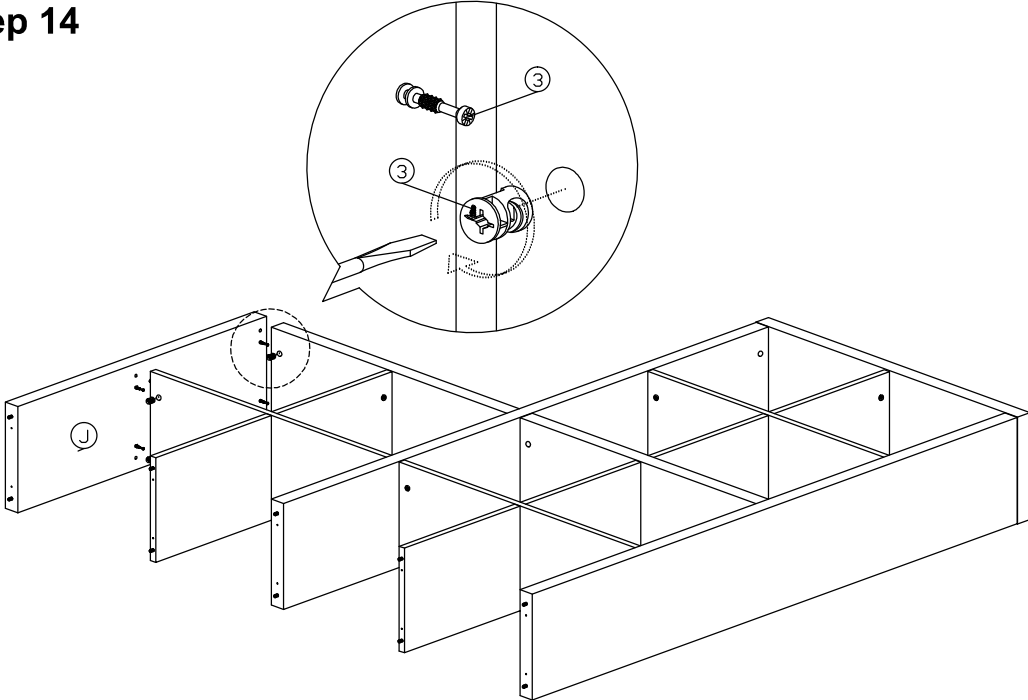


Assembly Instruction

Step 15


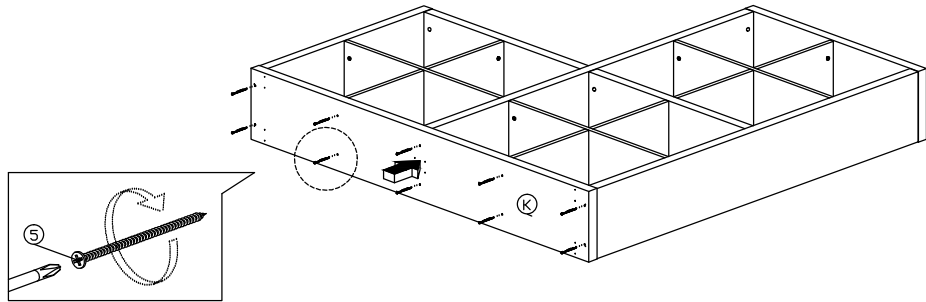


Step 16

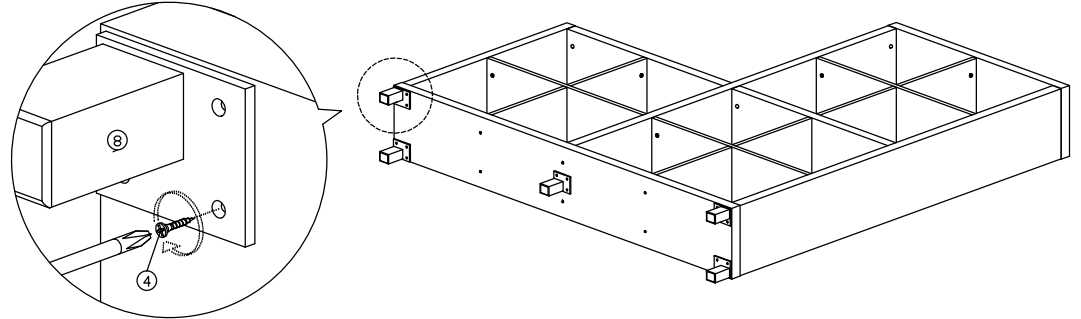



Step 17

**Ensure to fix all minifix cap on panel (E).*

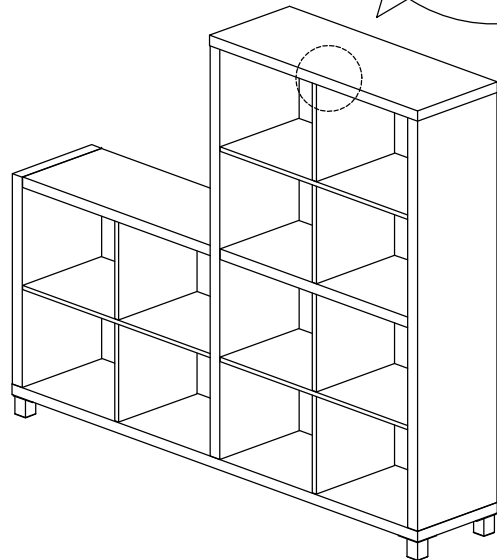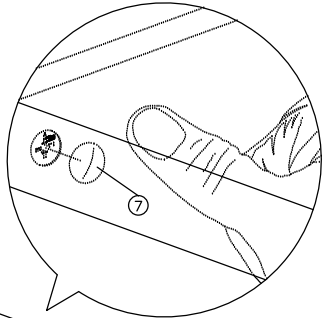

Step 18

**Ensure to fix all minifix cap on side panel (C) & (B).*

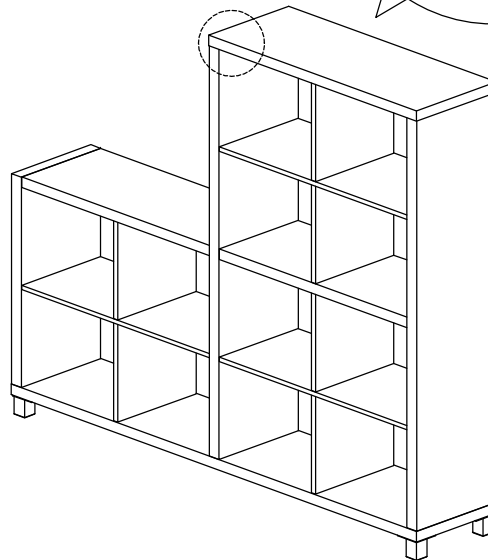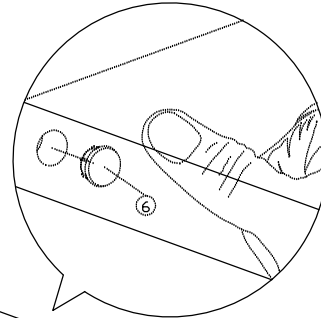

Complete

