













ASSEMBLY INSTRUCTIONS

MODEL: LW38

ITEM	PART NAME	QTY
1	Back Rest & Leg 	2 PCS
2	Back Cushion 	1 PC
3	Seat Cushion 	1 PC
4	Corner Block (Long) 	1 PC
5	Corner Block (Short) 	1 PC


ITEM	HARDWARE NAME	QTY
A	JCBC BOLT MG X 60mm 	4 PCS
B	CSK Screw 4 X 28mm 	8 PCS
C	JCBC BOLT MG X 40mm 	1 PC
D	ALLEN KEY 	1 PC
E	Wood Button 	4 PCS
F	JCBC BOLT MG X 28mm 	4 PCS
G	SPRING WASHER 	4 PCS




1 STEP 1, ATTACH BOTH BACK REST & LEGS TOGETHER



2 STEP 2, SCREW IN PARTS #1 ON THE SEAT CUSHION

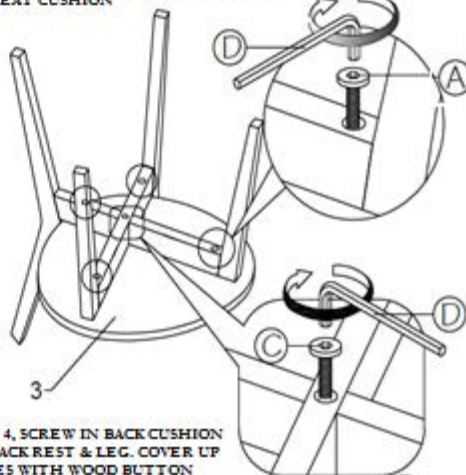

3 STEP 3, SCREW IN CORNER BLOCK (LONG) & CORNER BLOCK (SHORT) ON BACK REST & LEG

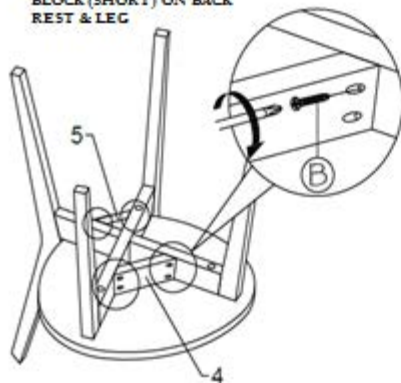

4 STEP 4, SCREW IN BACK CUSHION ON BACK REST & LEG. COVER UP HOLES WITH WOOD BUTTON

