





ASSEMBLY INSTRUCTION


ITEM DESCRIPTION : Loft - Walnut - BS Bar Stool

| PART LIST | NO | DESCRIPTION | QTY |
|-----------|----|--------------------------|-------|
| | 1 | CUSHION SEAT | 1 pc |
| | 2 | LEG FRAME (LEFT & RIGHT) | 2 pcs |
| | 3 | APRON | 2 pcs |
| | 4 | STRETCHER LONG | 1 pcs |
| | 5 | STRETCHER SHORT | 1 pcs |


| HARDWARE LIST | NO | DESCRIPTION | QTY |
|---------------|----|---|-------|
| | A | JCBC W BOLT M7 x 40mm  | 8 pc |
| | B | JCBC BOLT M6 x 45 mm  | 4 pcs |
| | C | ALLEN KEY M4  | 1 pcs |

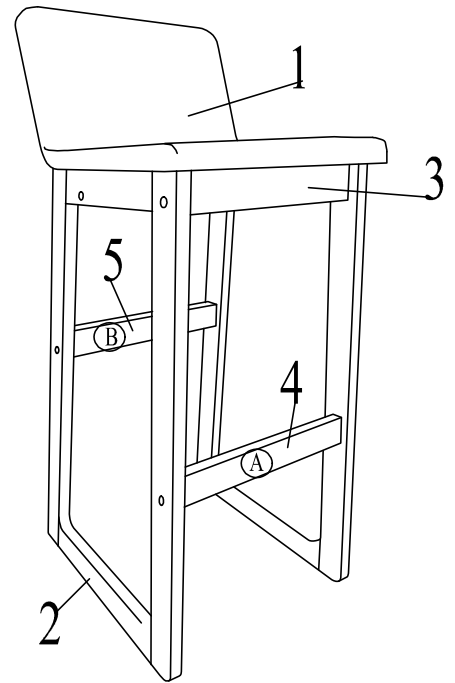


STEP 1

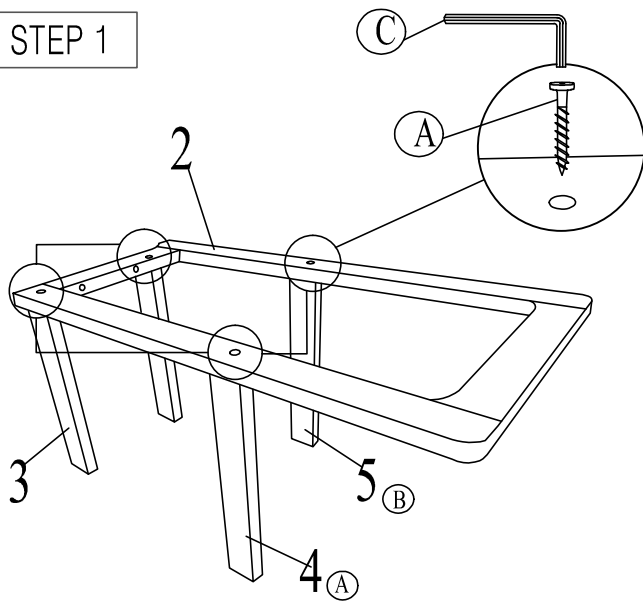

STEP 2

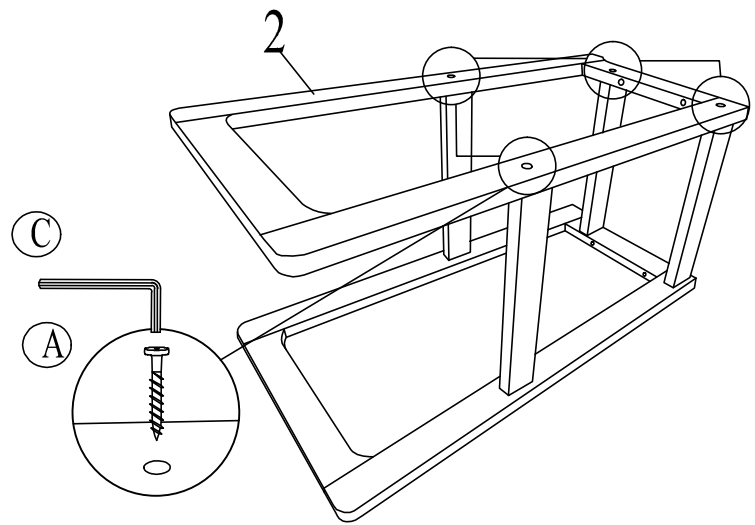

STEP 3

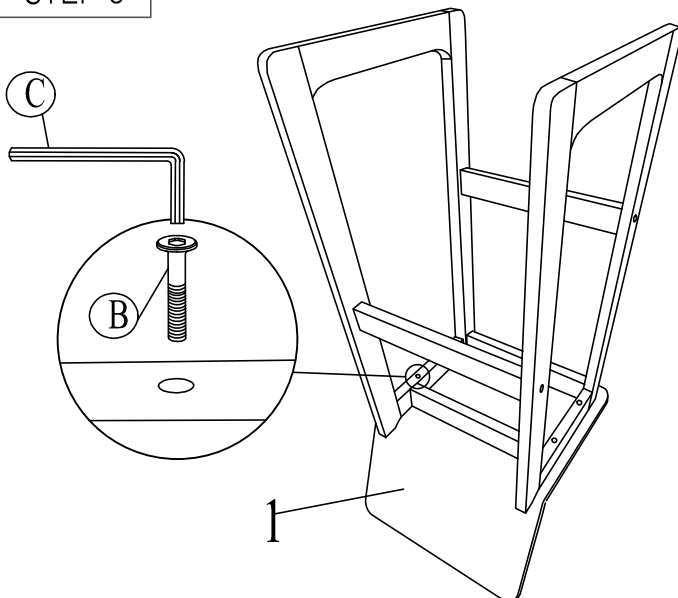

COMPLETED

