
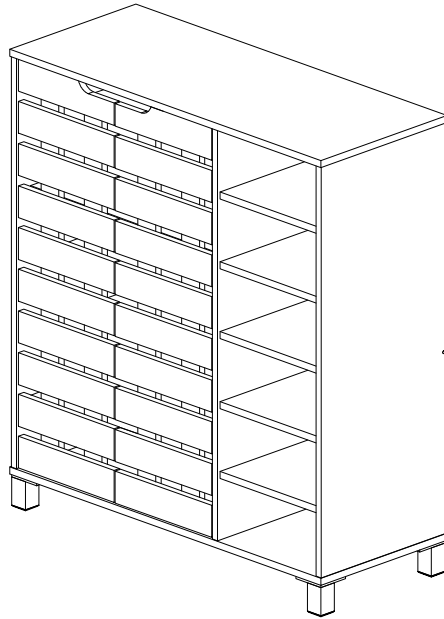


# Assembly Instruction

Model : WI6477




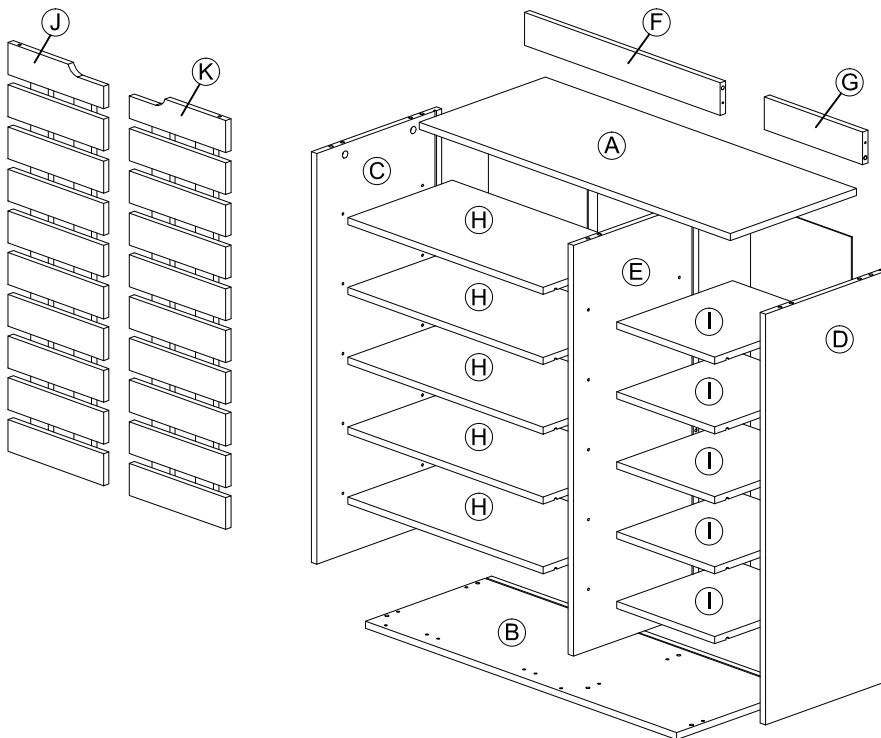










## Part List




# Assembly Instruction

## Hardware List


No.	SHAPE	DESCRIPTION	Qty.
1		<b>8x25mm Wood Dowel</b>	16Pcs
2		<b>15MM Myfix Minifix</b>	6Sets
3		<b>M3x16mm Screw</b>	12Pcs
4		<b>M5x38mm Screw</b>	10Pcs
5		<b>M3.5x15mm Screw</b>	15Pcs
6		<b>Shelf Support</b>	40Pcs
7		<b>15mm Minifix Cap</b>	6Pcs
8		<b>Screw Cap</b>	2Pcs
9		<b>Door Support Metal</b>	4Pcs

10		<b>Brown Magnet 2 Pin</b> Flat Head Tapping Screw M6x10mm ZB	4Sets
11		<b>Z Bracket (Big)</b>	6Pcs
12		<b>PVC Sofa leg (H70mm)</b>	5Pcs

## Dowel / Cam - Lock Installation

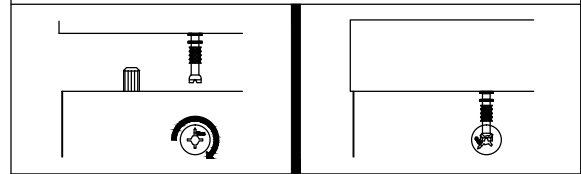


## STEP 1

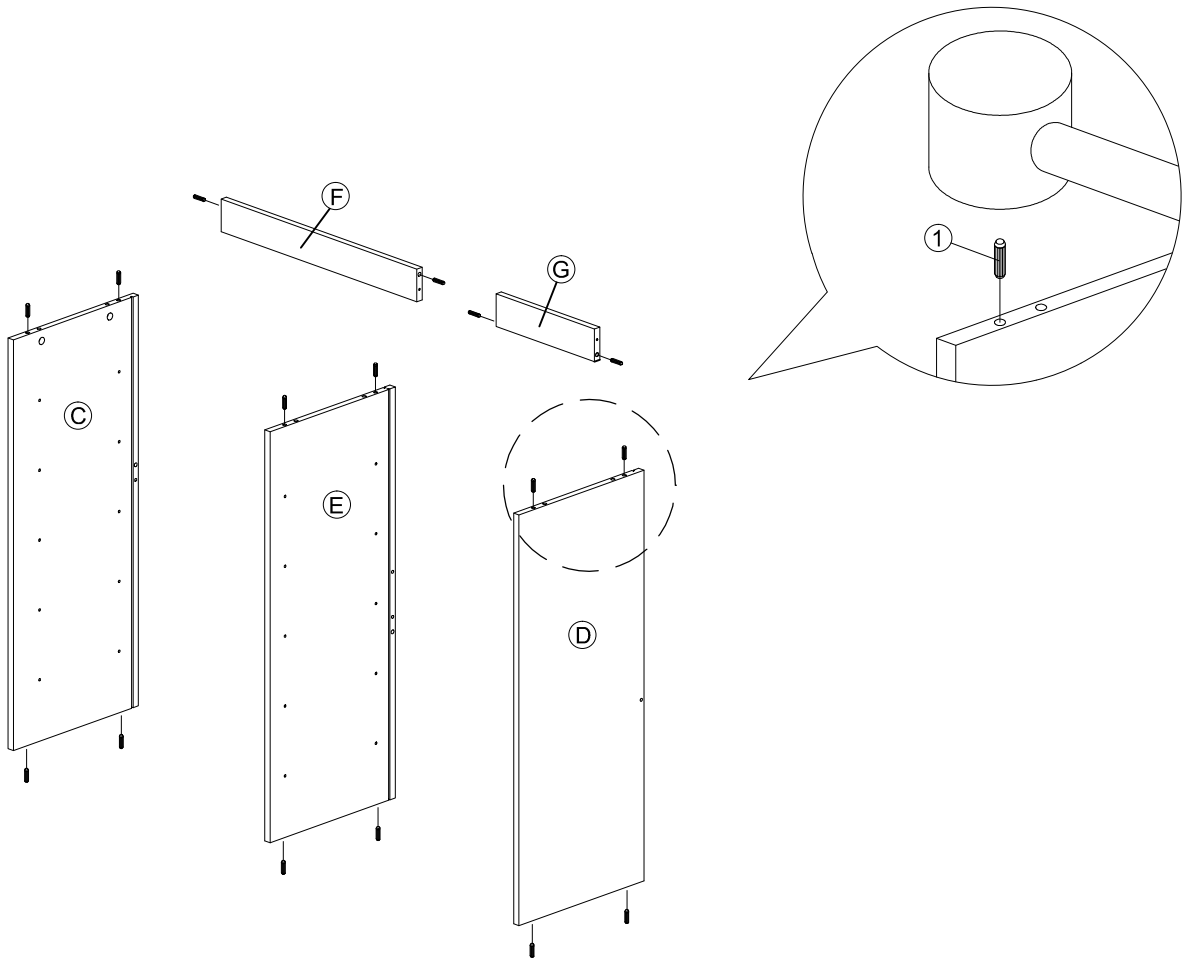


# Assembly Instruction

## STEP 2

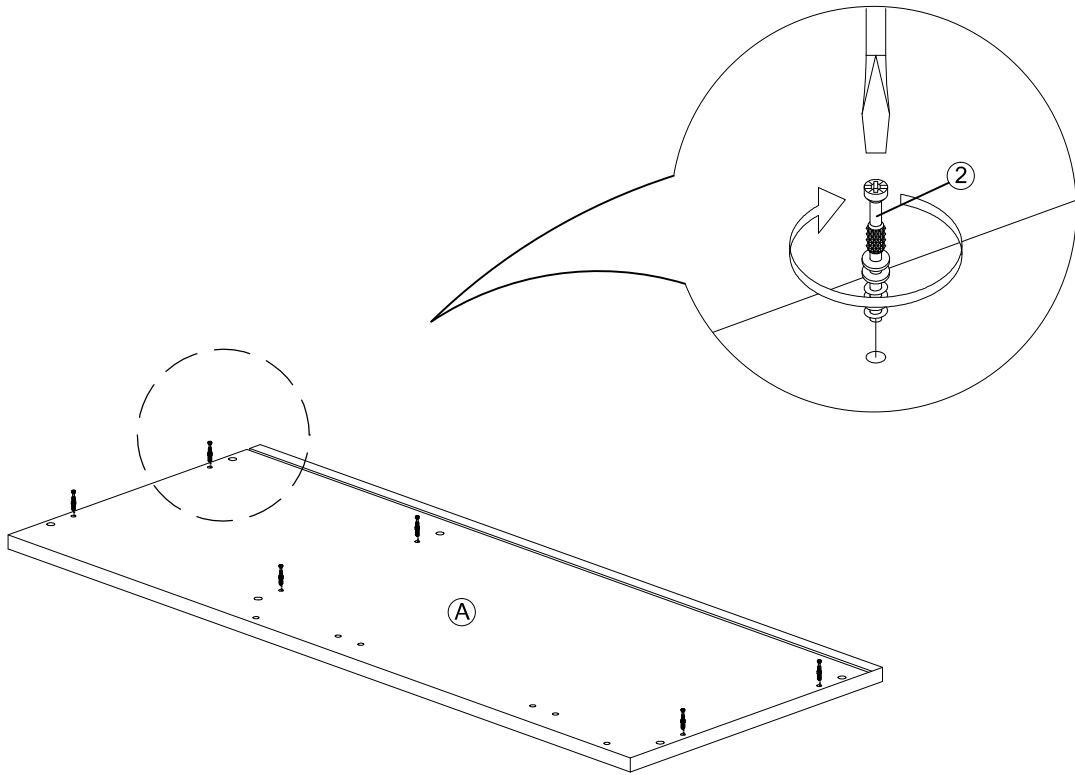


## STEP 3

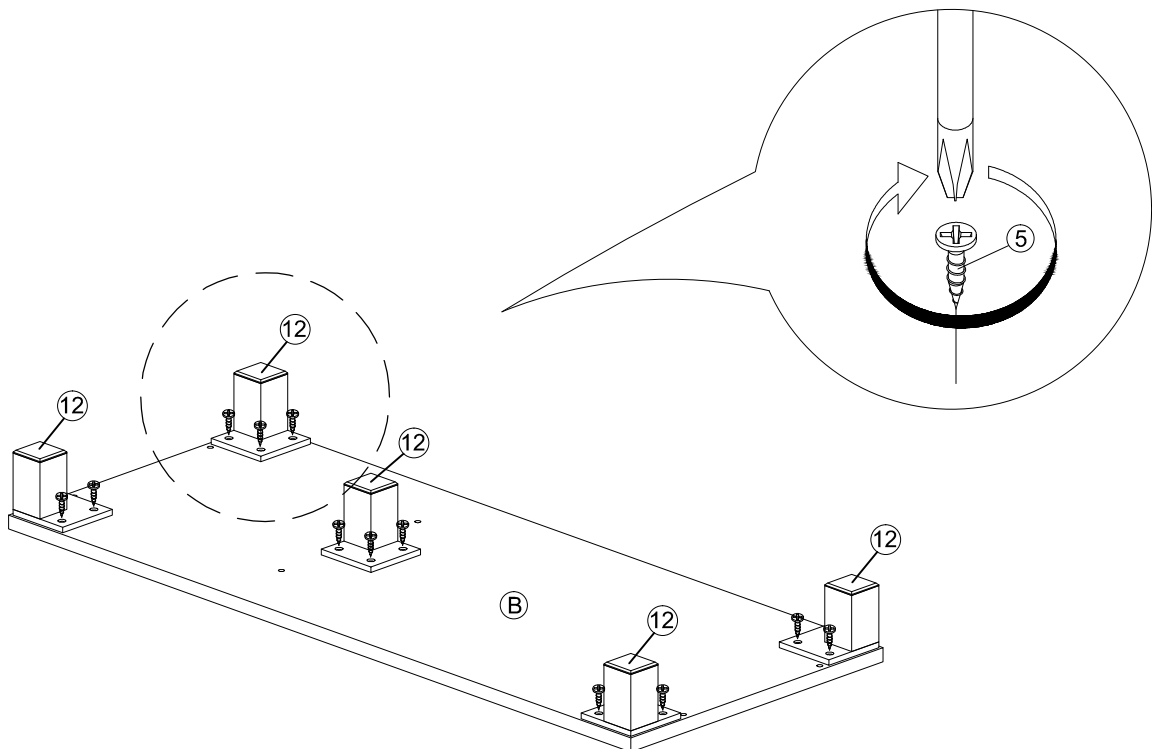


# Assembly Instruction

## STEP 4

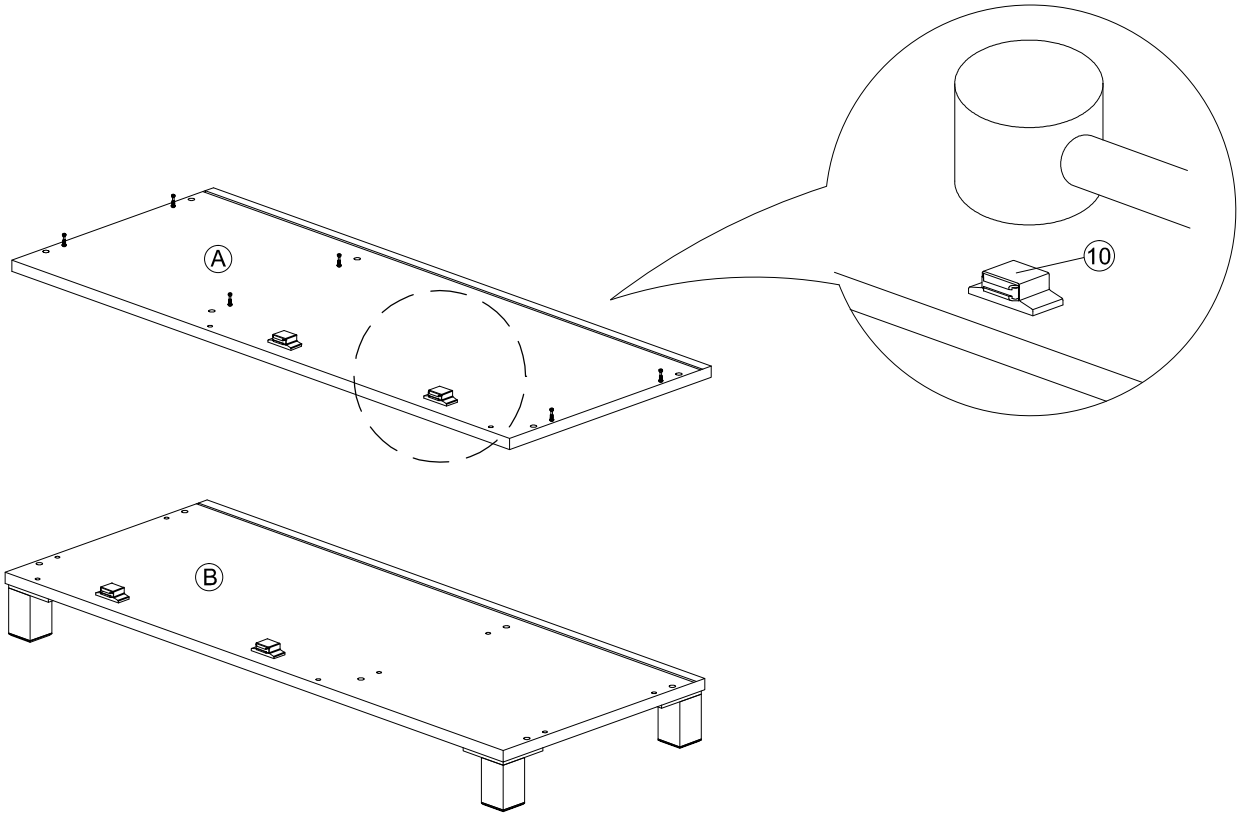


## STEP 5

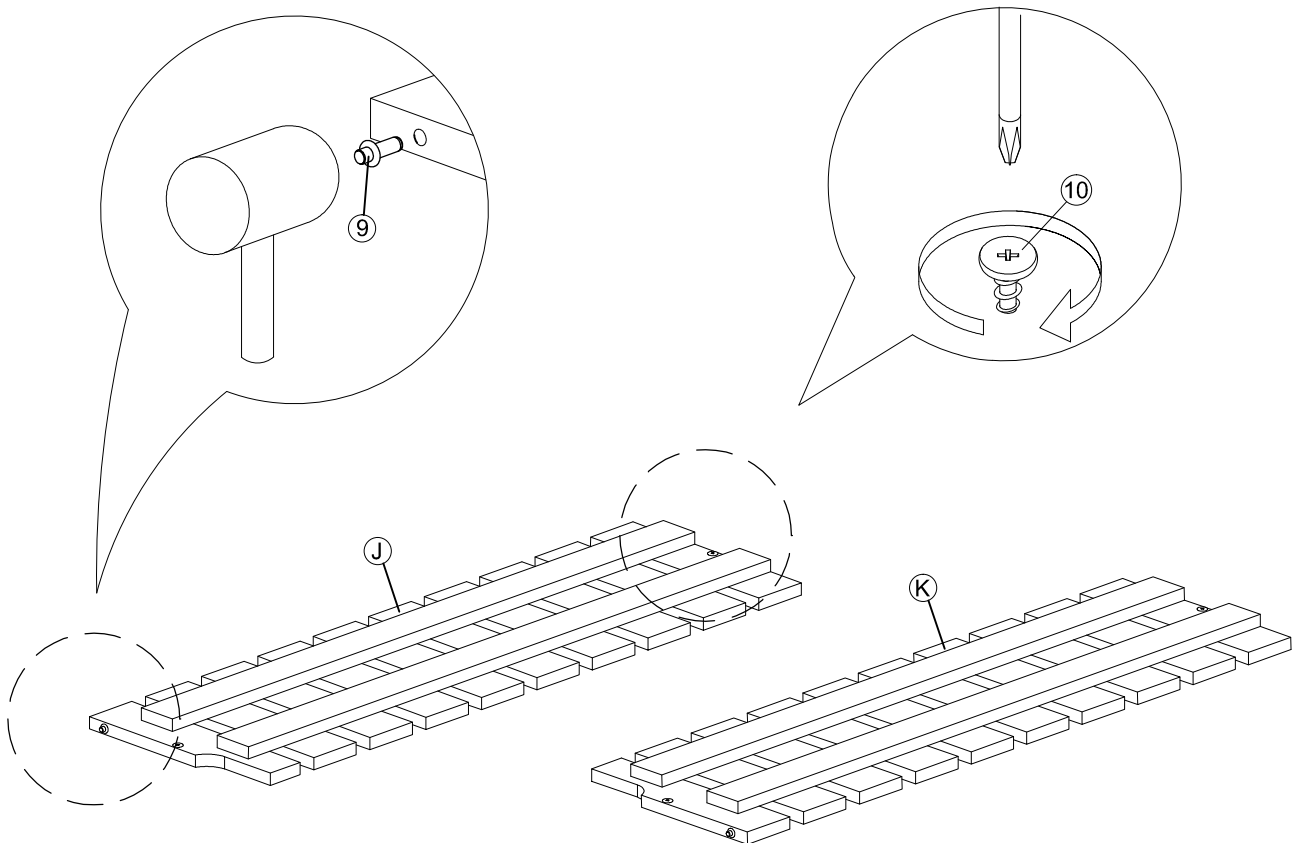


# Assembly Instruction

## STEP 6

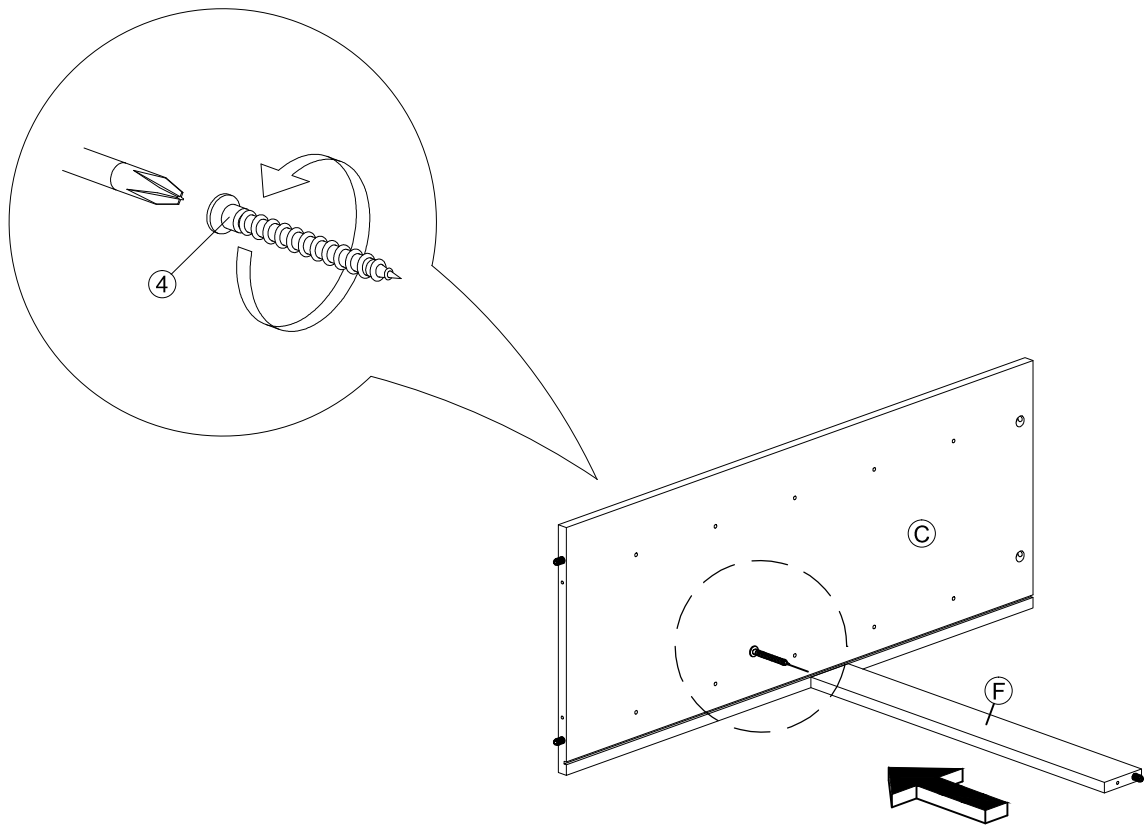


## STEP 7

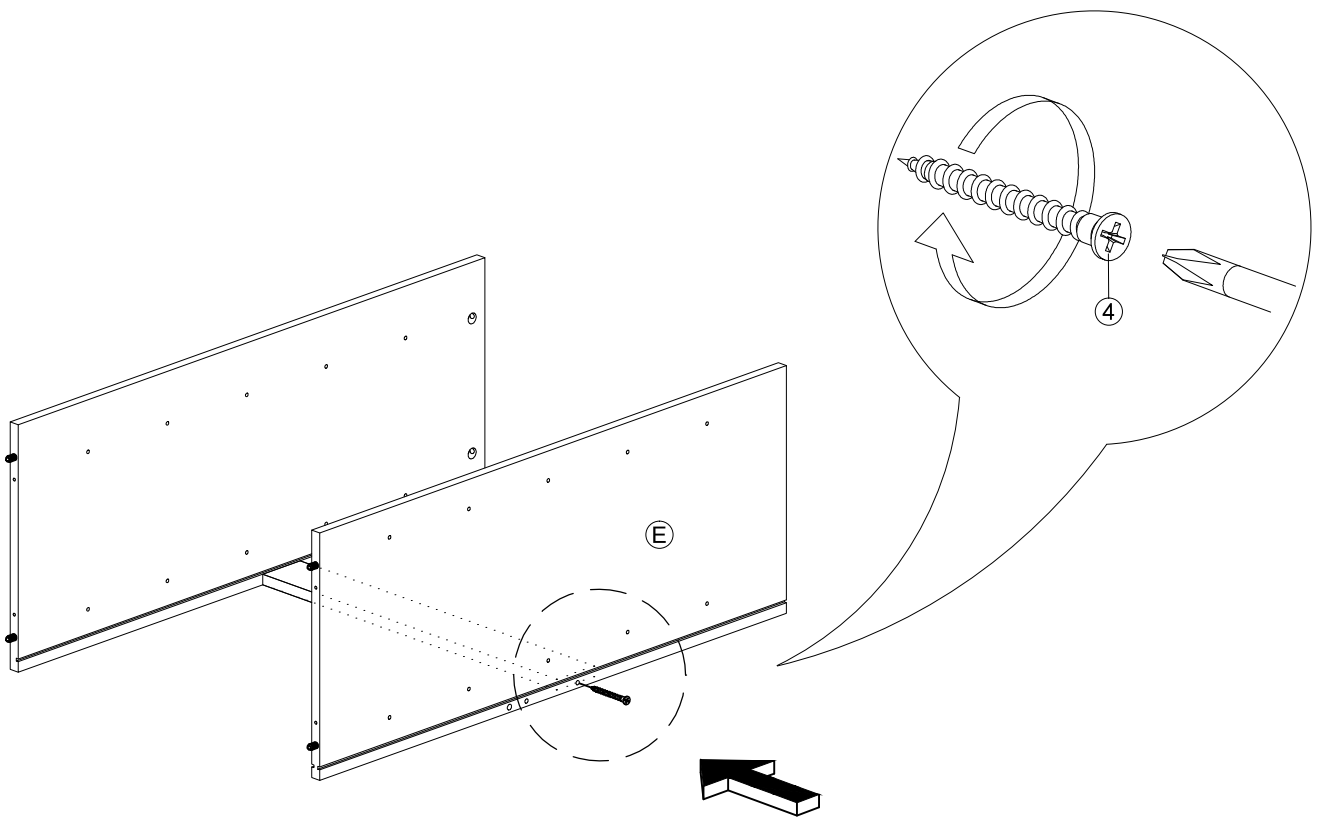


# Assembly Instruction

## STEP 8

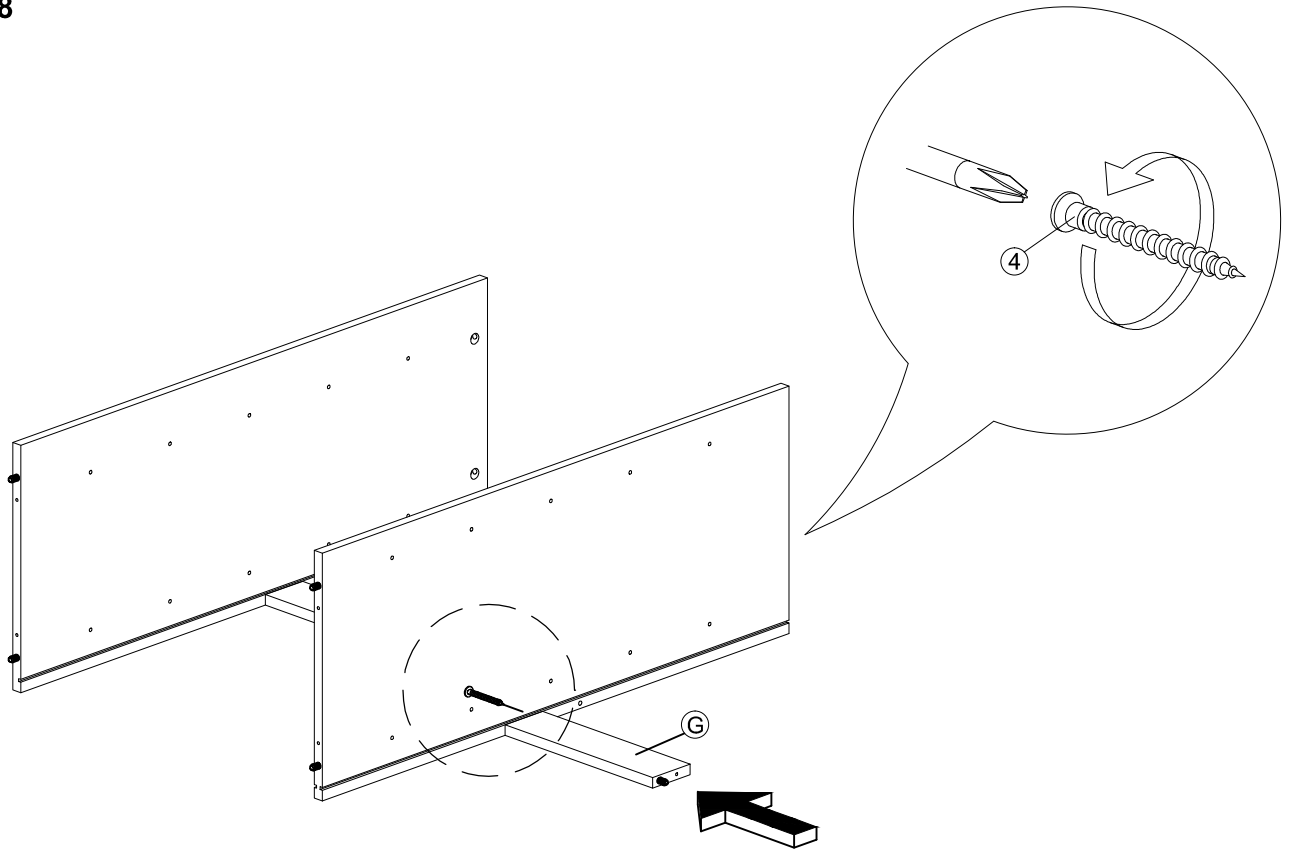


## STEP 9

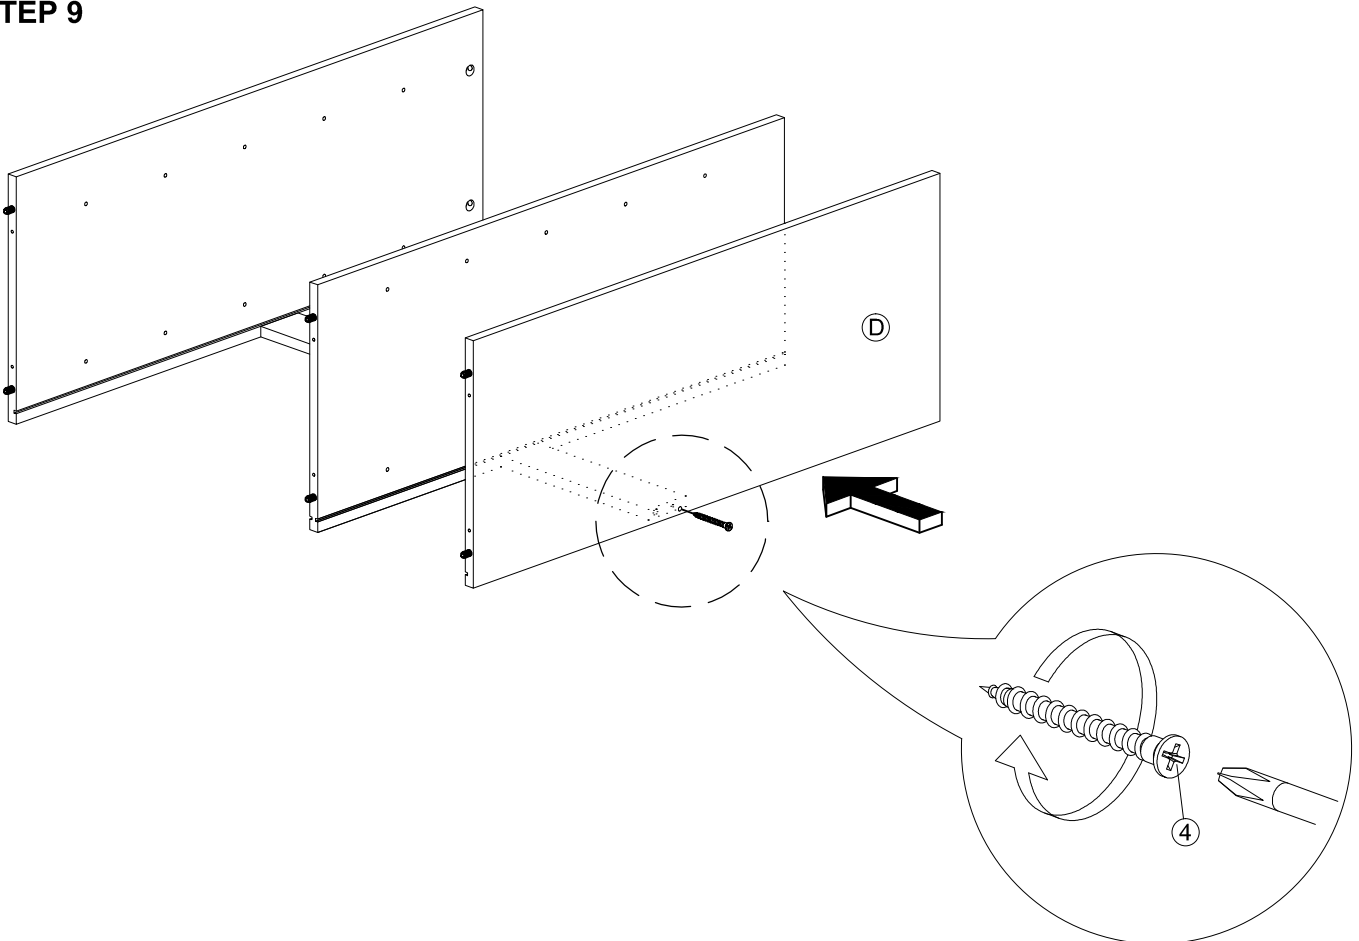


# Assembly Instruction

## STEP 10

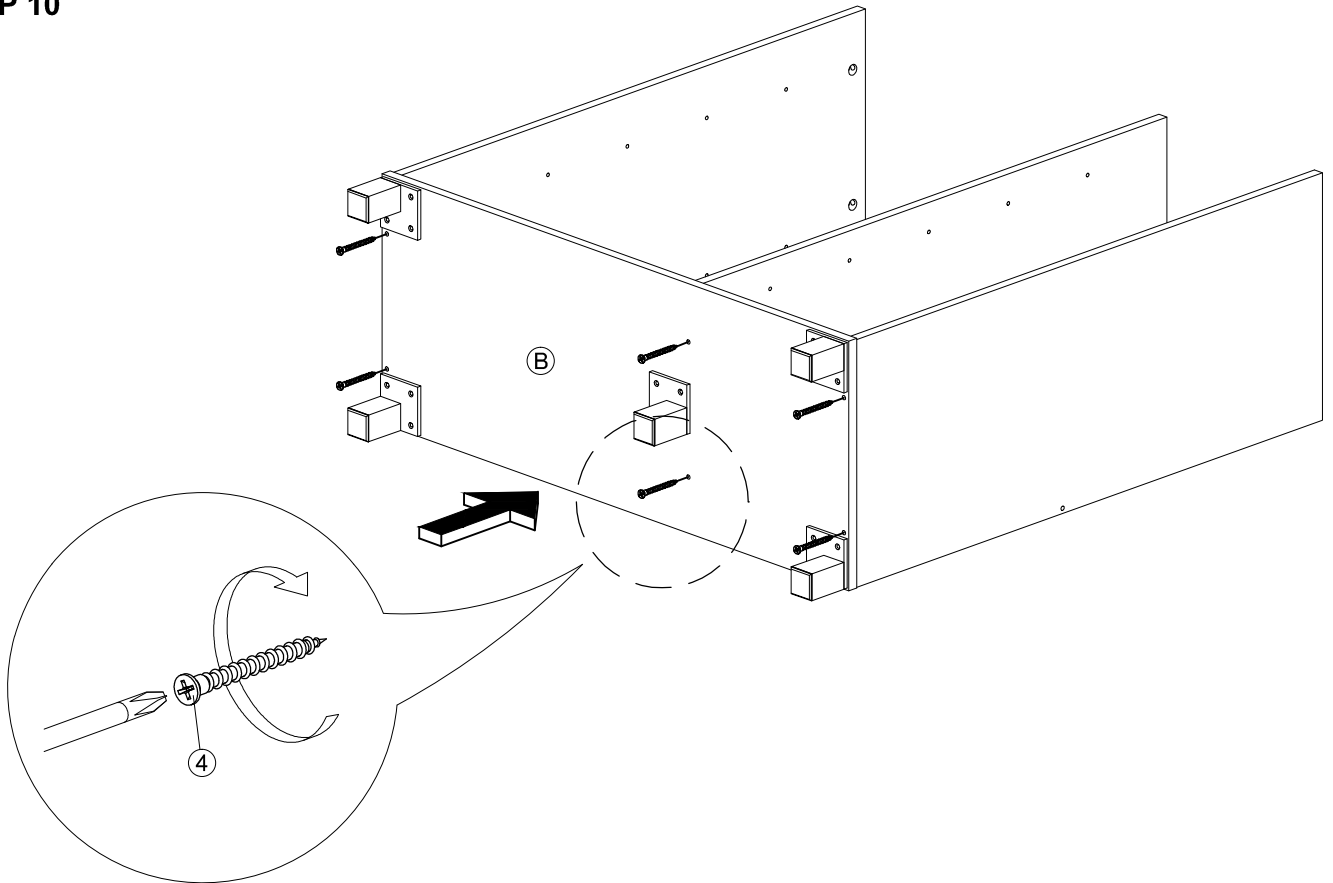


## STEP 11

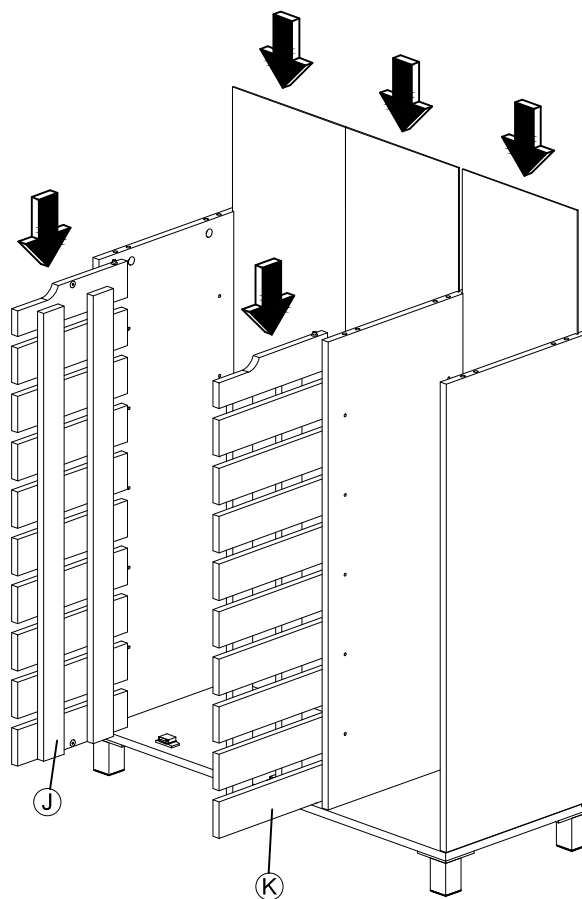


# Assembly Instruction

## STEP 12

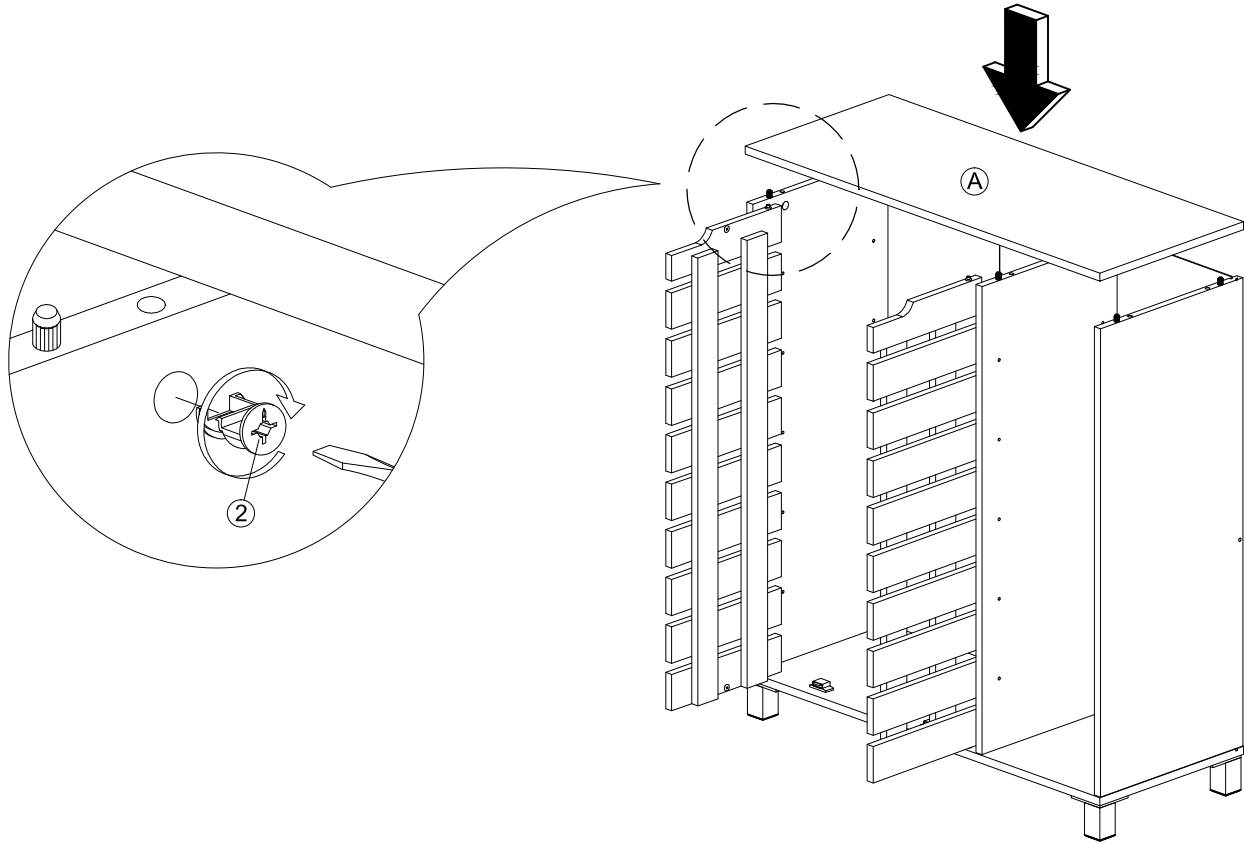


## STEP 13

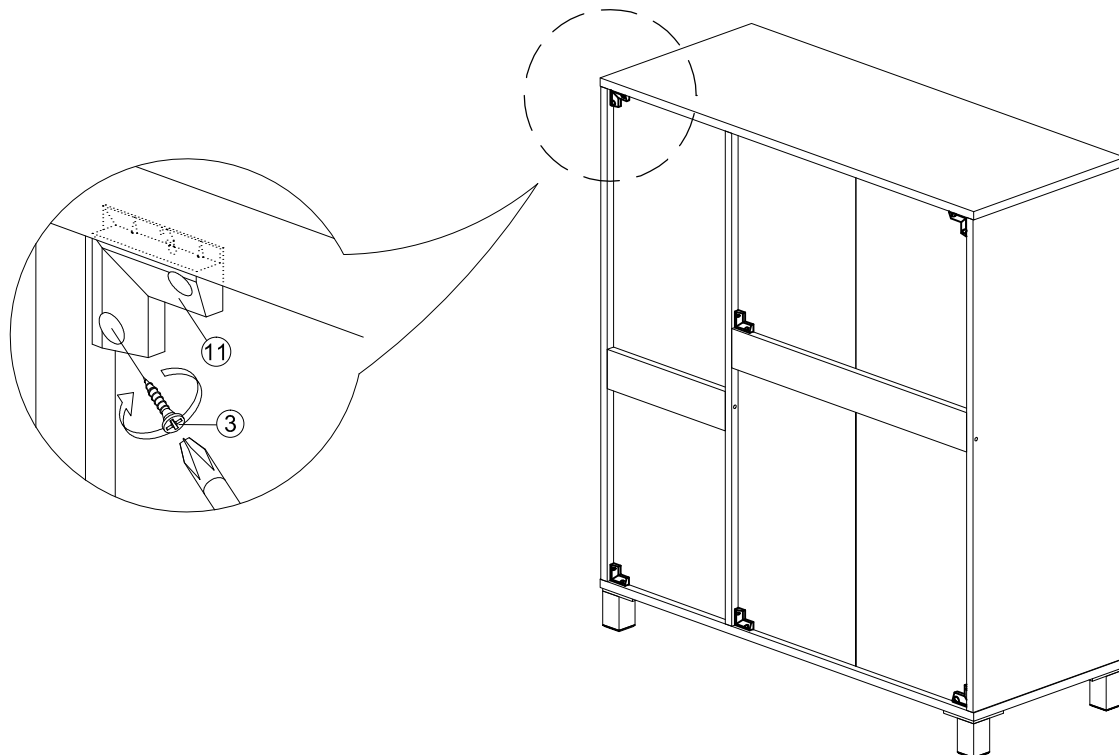



# Assembly Instruction

## STEP 14

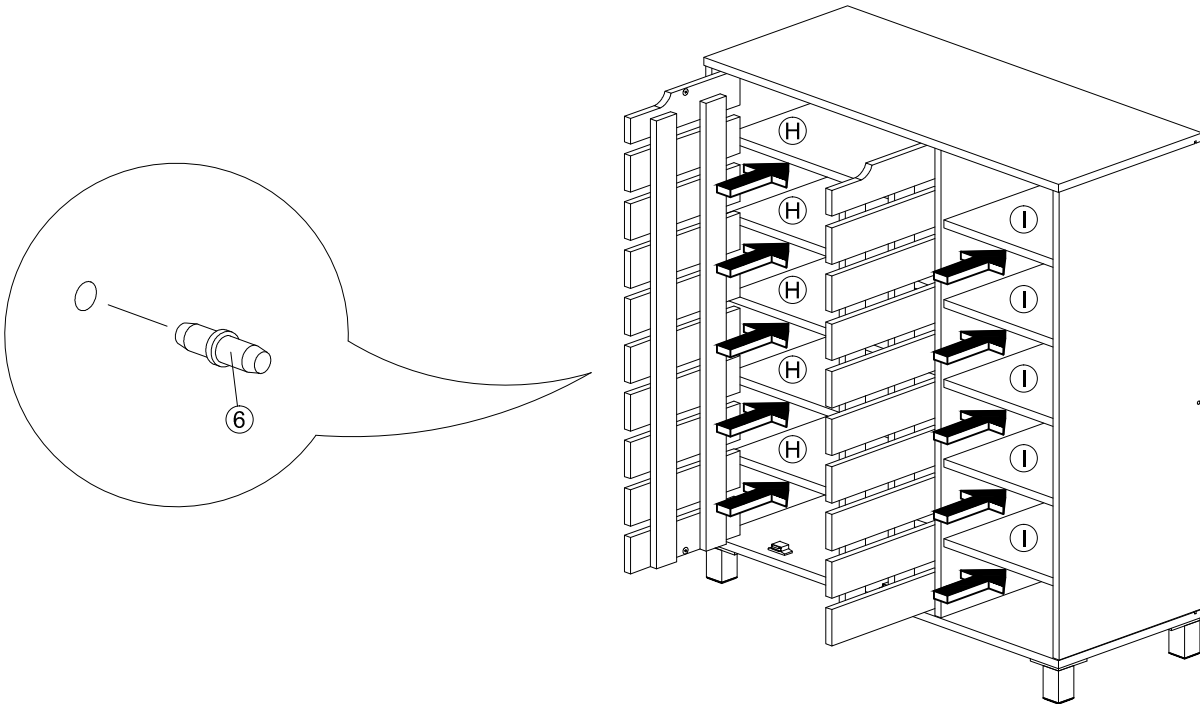

## STEP 15

