
## SW 8065 - F/Q/K

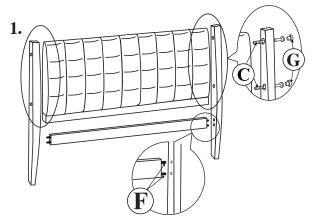


Attach the headboard post (P1) to the headboard (P2).

You will need to use hardware:

4pcs

F = 4pcs

4pcs

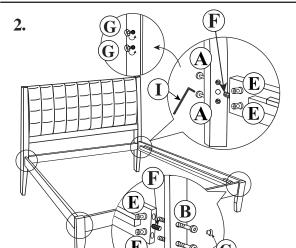

Attach the side rail (P3) to the headboard using hardware:

A = 4pcs

E = 4pcs

F = 2pcs

G = 4pcs

I = 1pcs

Attach the side rail (P3) to the footboard (P4) using hardware:


B = 4pcs

E = 4pcs

F = 2pcs

G = 4pcs

I = 1pcs

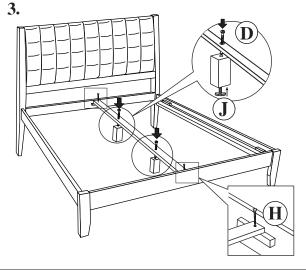

Fix the adjuster (J) to the support leg (P6) using hardware:


J = 2pcs

Attach the support legs (P6) to the centre rail (P5) using hardware:

D = 2pcs

Attach the centre rail (P5) to the headboard (P2) and footboard (P4) using hardware:

H = 2pcs

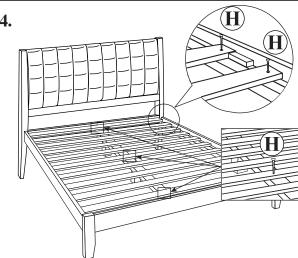

Lay the slats (P7) between the side rail (P3) using hardware:

H = 28pcs(F)

H = 30pcs (Q/K)

Attach the slats (P7) to the centre rail (P5) using hardware:


H = 3pcs

## **WARNING!!**

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two
- Do not use any power tools as this may damage the frame and will invalidate any claim.

## **PART LIST**

P1 Headboard Post = 2pcs

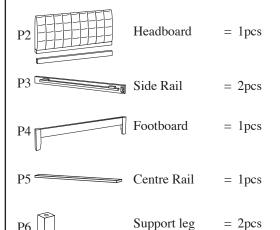

## HARDWARE LIST

Bed Slats (F)

Bed Slats (Q/K) = 15pcs

= 14pcs

HARDWAKE EIST			
A	()	M6 x 100mm JCBC	4pcs
В		M6 x 90mm JCBC	4pcs
C	<u> </u>	M6 x 60mm JCBC	4pcs
D		M6 x 50mm JCBC	2pcs
E		BARREL NUT	8pcs
F		Ø8 x 35mm WOOD DOWEL	8pcs
G		WOODEN PLUG	12pcs
Н	D <i></i>	M4 X 25mm SCREW (F) M4 X 25mm SCREW (Q/K)	33pcs 35pcs
I		ALLEN KEY M4	1pcs
J		ADJUSTER	2pcs

