

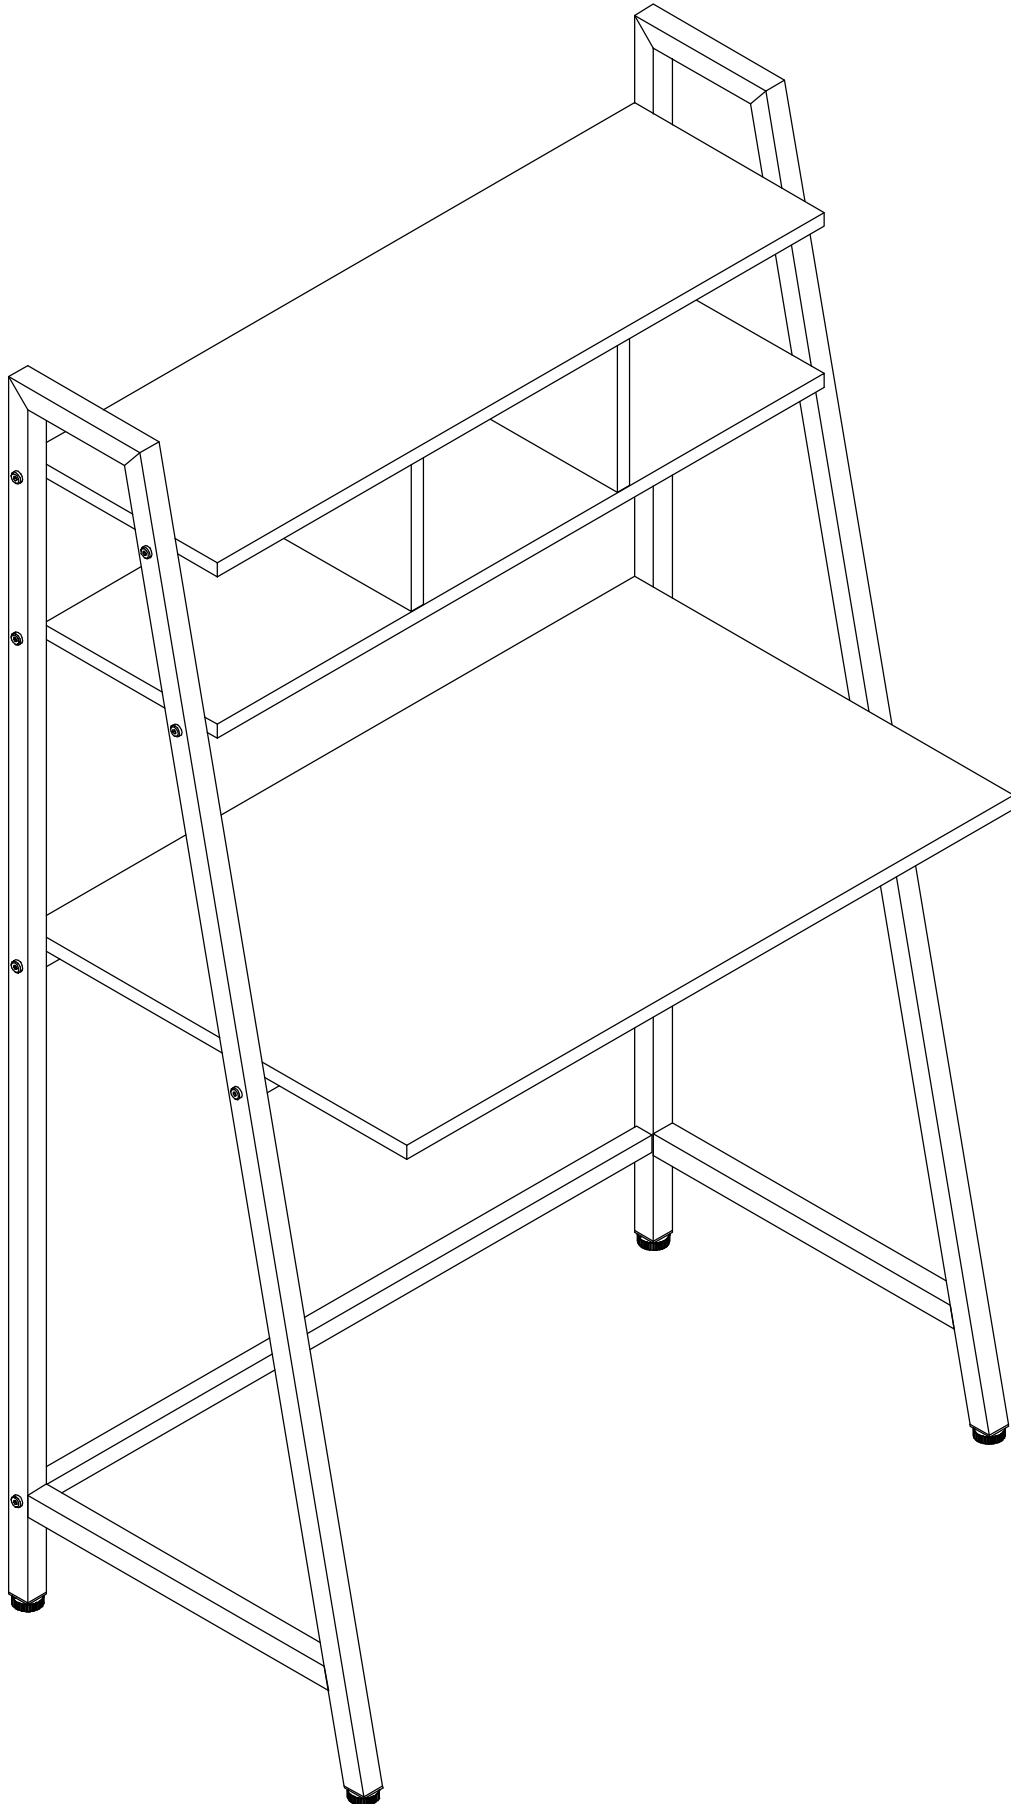
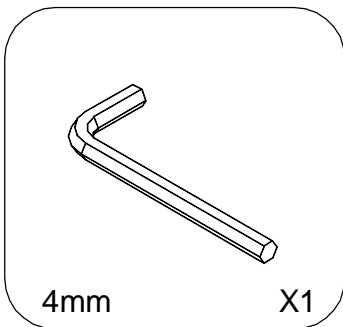
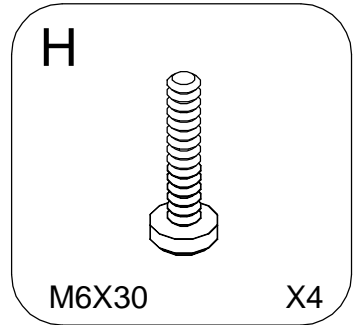
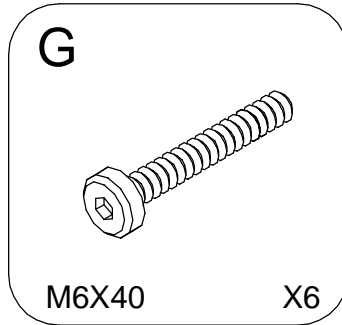
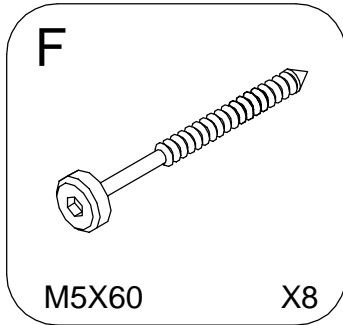
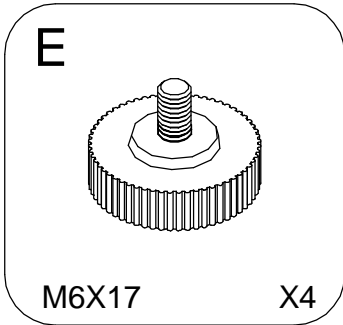
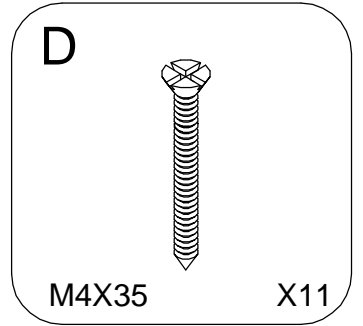
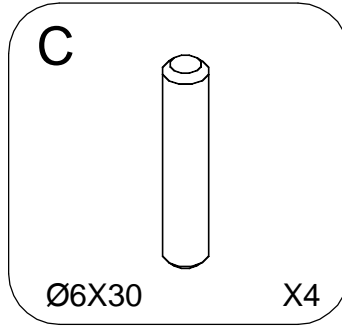
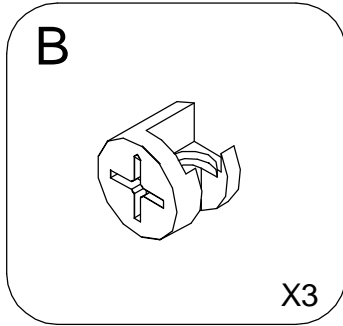
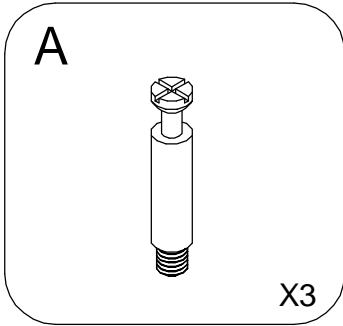
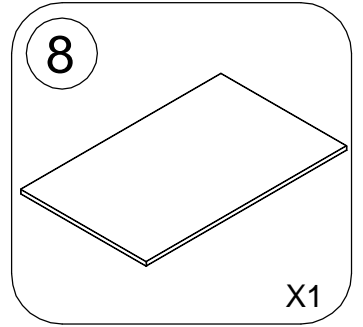
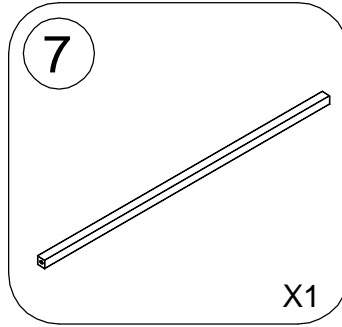
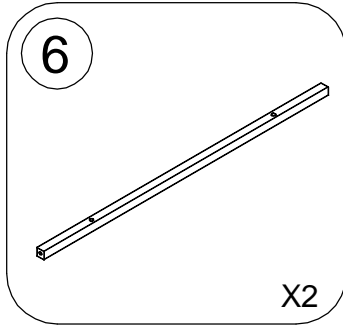
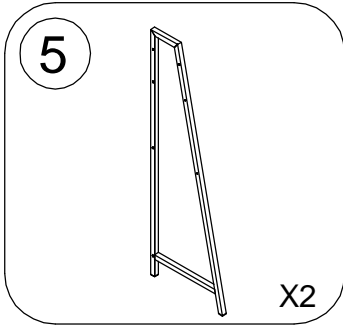
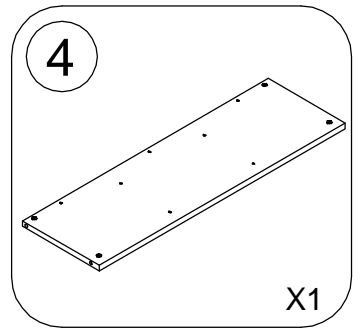
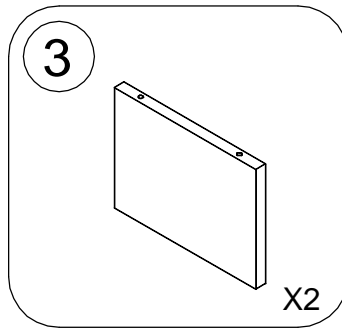


Assembling Instruction



ITEM# WS-12201

Attention: Do not tighten the screws until all of them are in right positions


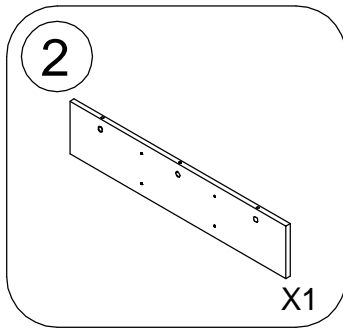


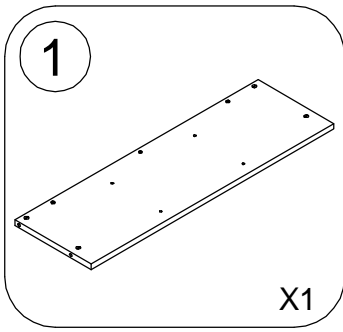


1

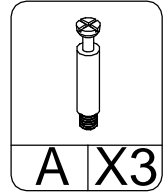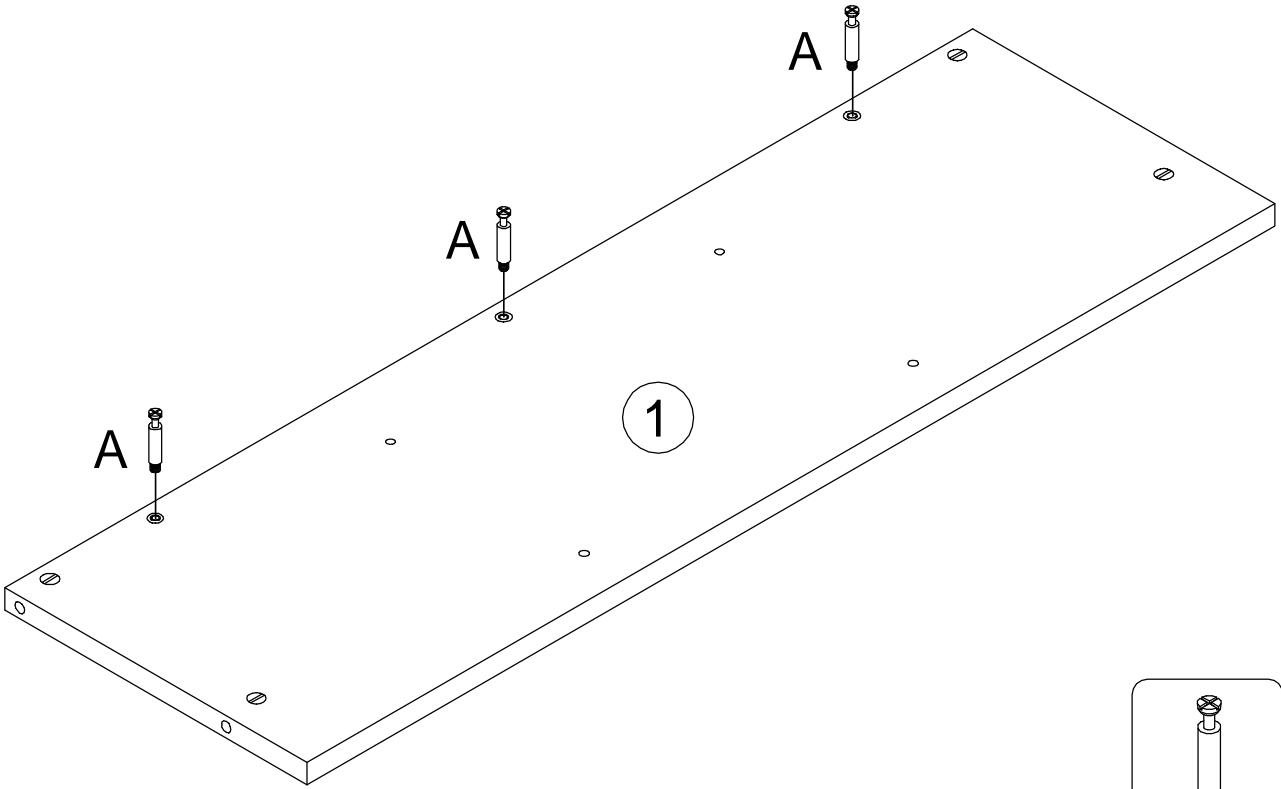


2

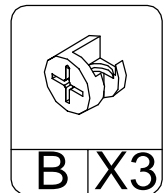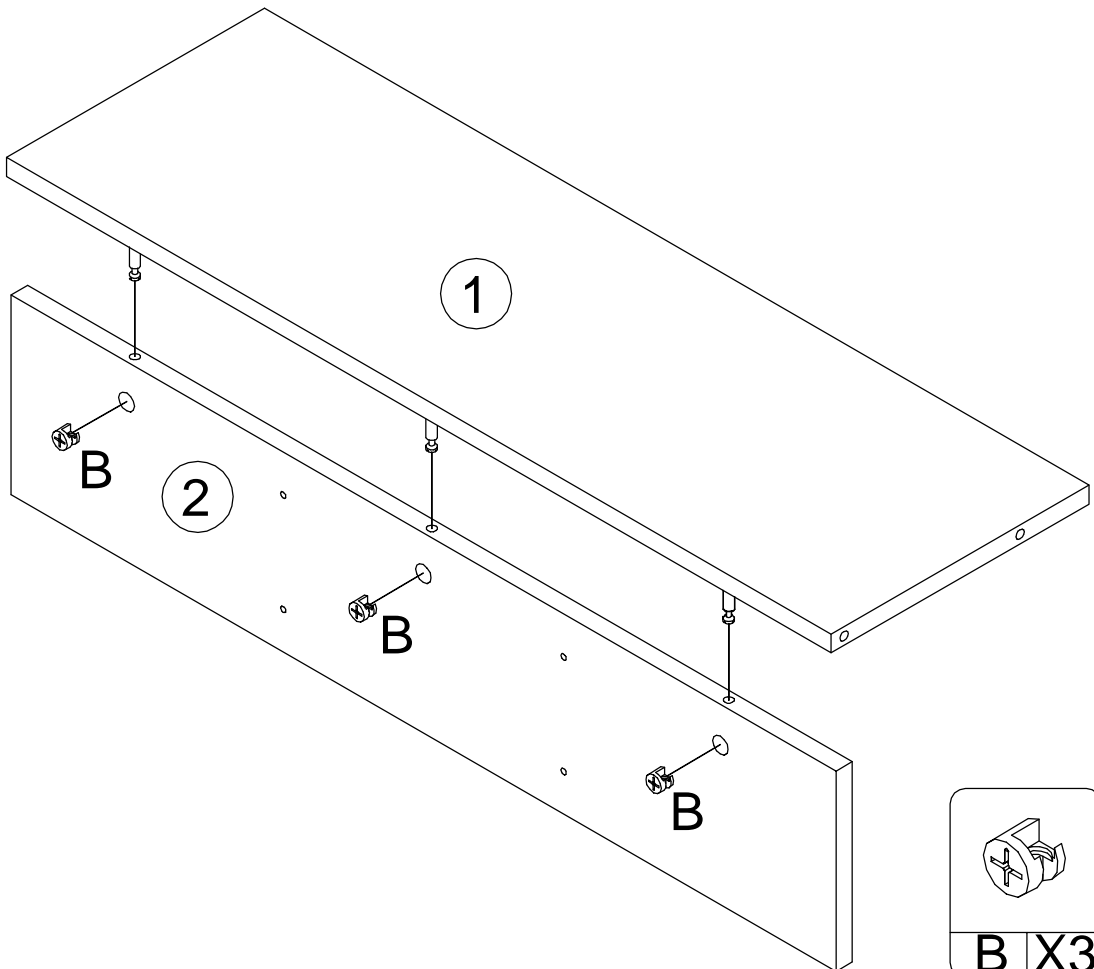



3

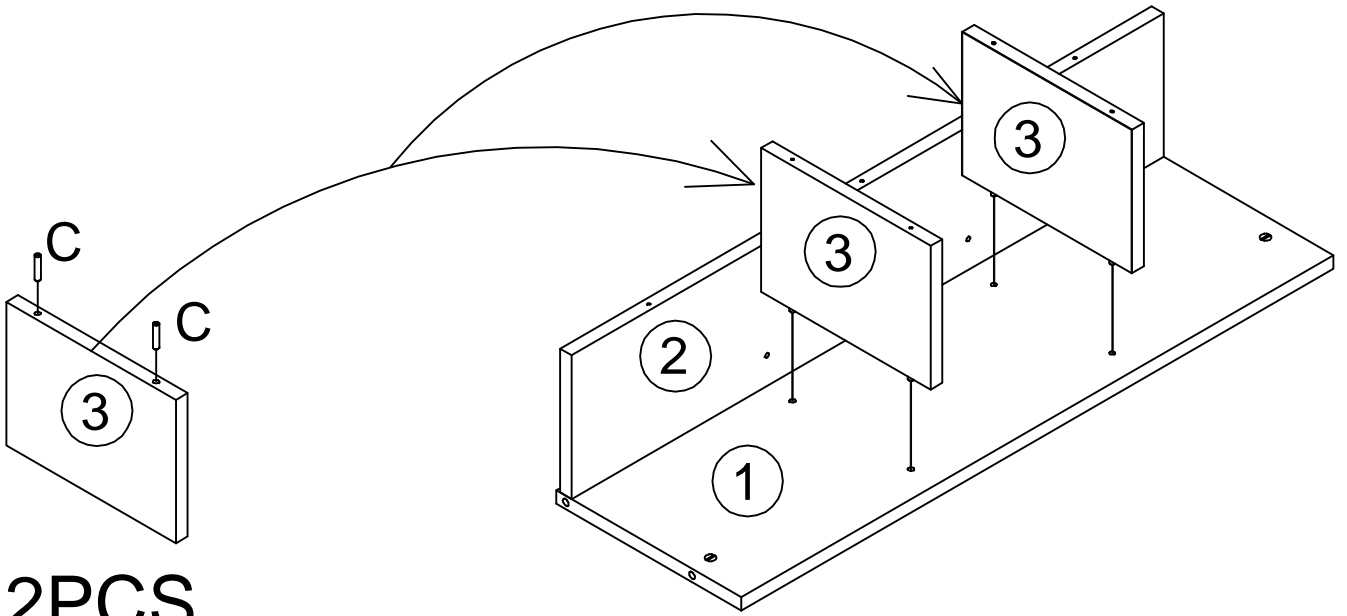


2PCS

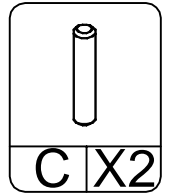



4

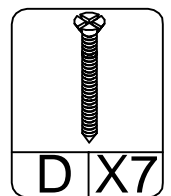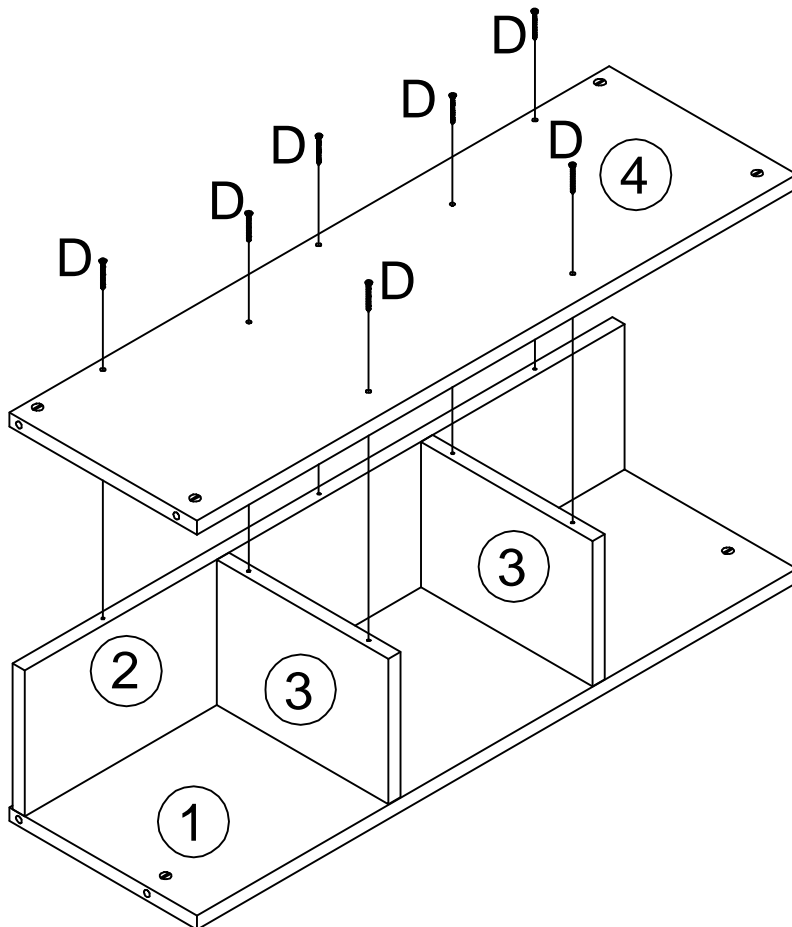

5



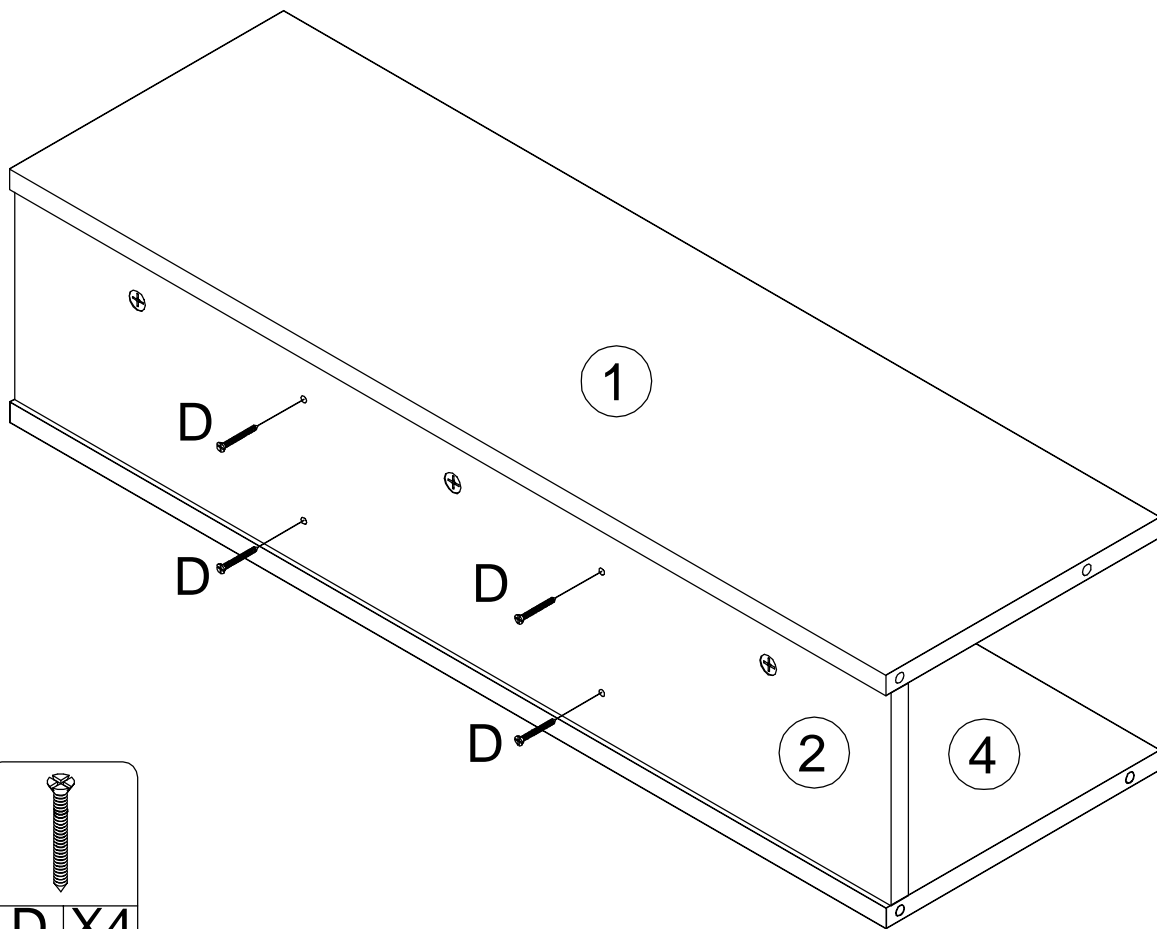


6

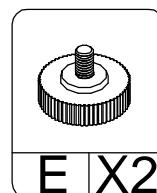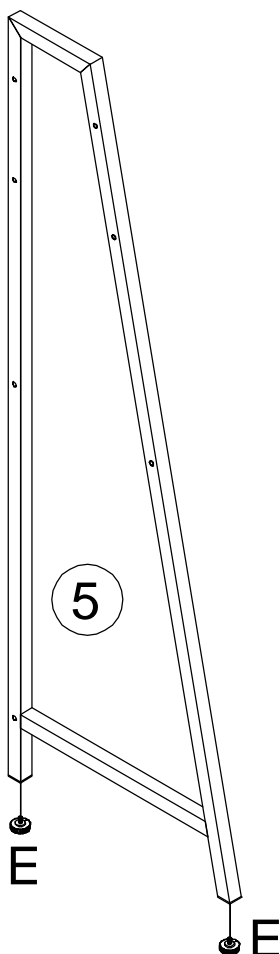

2PCS

7

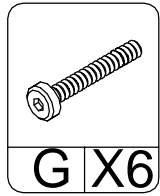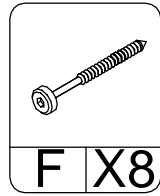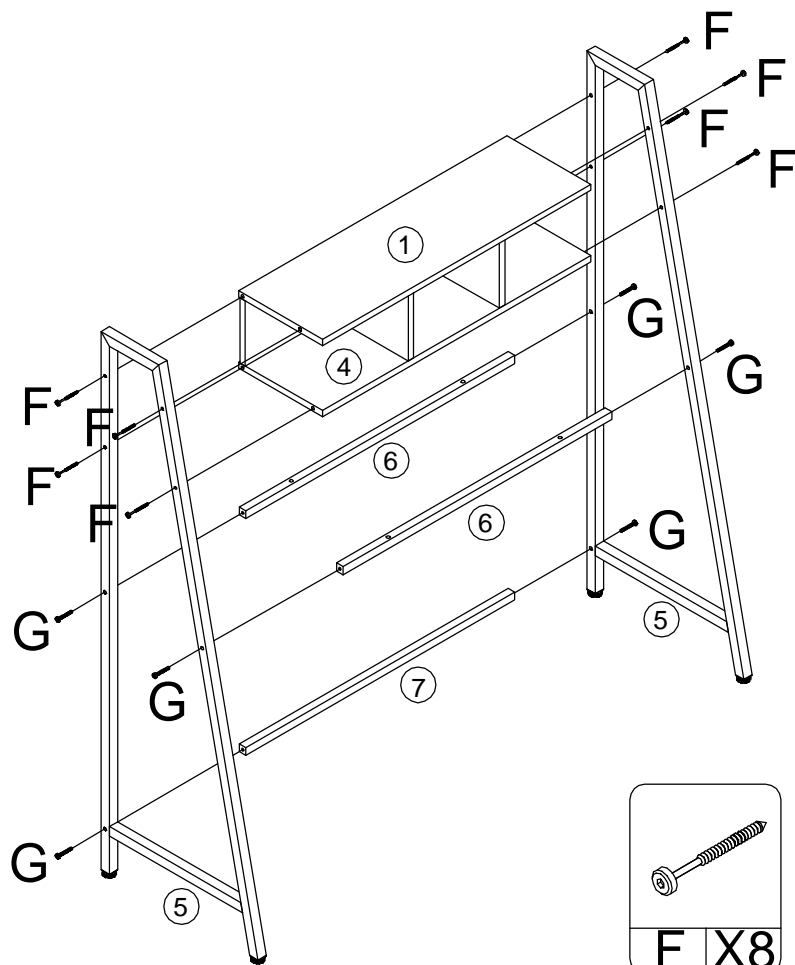

8

