





# MODEL : SE SC 7008WI - HO

## PANEL POSITION

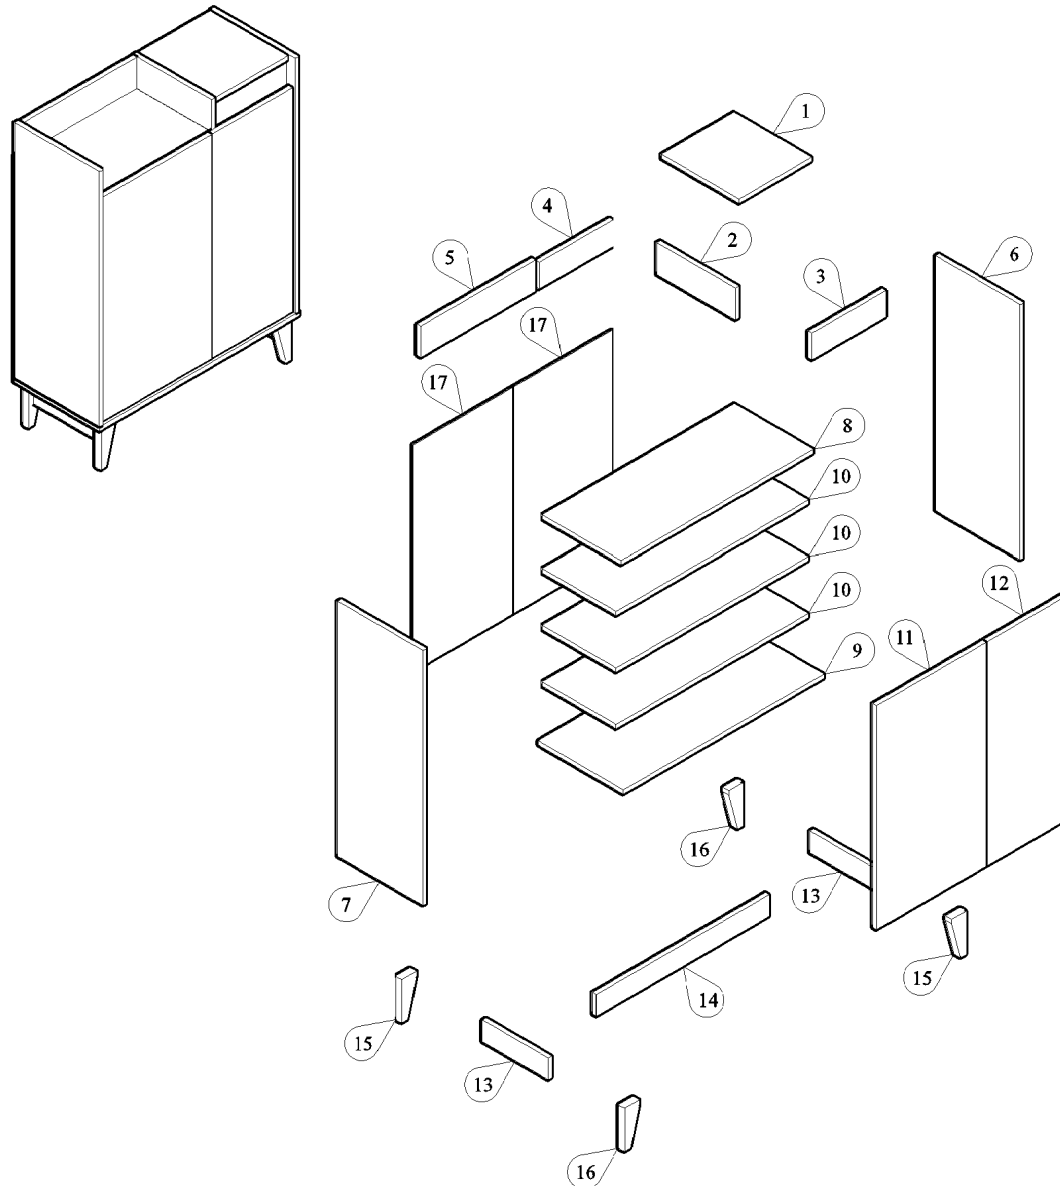


	ACCESSORIES	QUANTITY
A	MINIFIX M5 x 24MM	8 PCS
B	MINIFIX CASING	8 PCS
C	WOOD DOWEL M8 x 30MM	20 PCS
D	IRON SHELF SUPPORT	12 PCS
E	SCREW M6 x 50MM	6 PCS
F	SCREW M7 x 40MM	6 PCS
G	LEG NAIL WHITE PIN	4 PCS
H	POWER PIN	30 PCS
I	PVC "H" RAIL	1 PC
J	HINGES 5/8" SCREW M3.5 x 16MM	2 PCS 12 PCS
K	HINGES 7/8" SCREW M3.5 x 16MM	4 PCS 24 PCS
L	ALLEN KEY	1 PC
M	NYLON CABLE (BLACK)	1 PC
N	WALL PLUG	1 PC
O	SCREW M4x28MM	1 PC
P	WOSE	2 PCS
Q	SCREW M3.5x16MM	1 PC
R	BUFFER	4 PCS






# START ASSEMBLY


## STEP 1

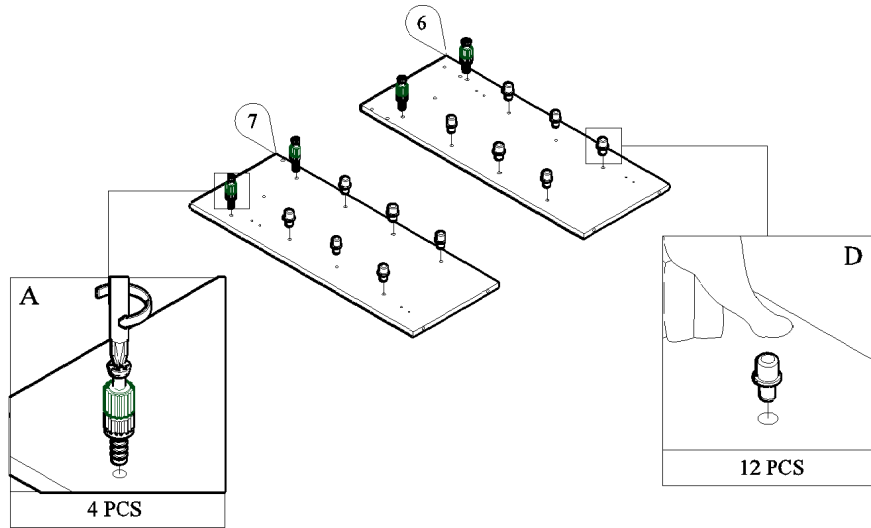


## STEP 2

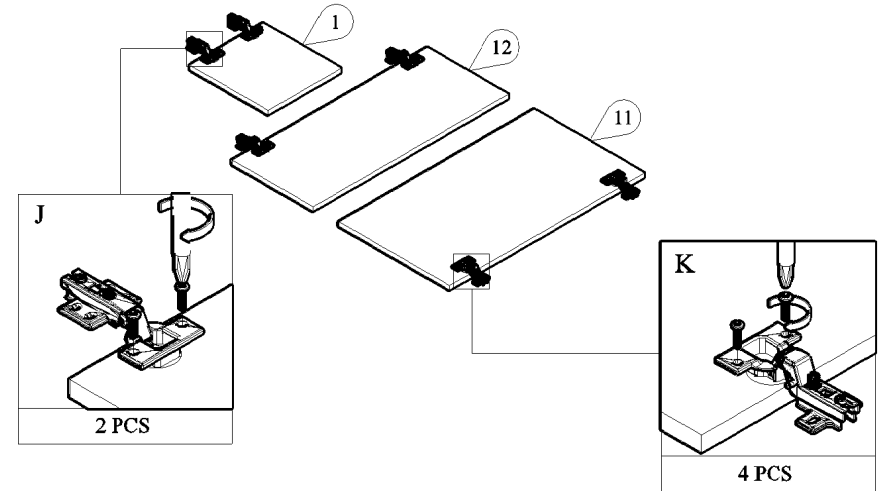


## STEP 3

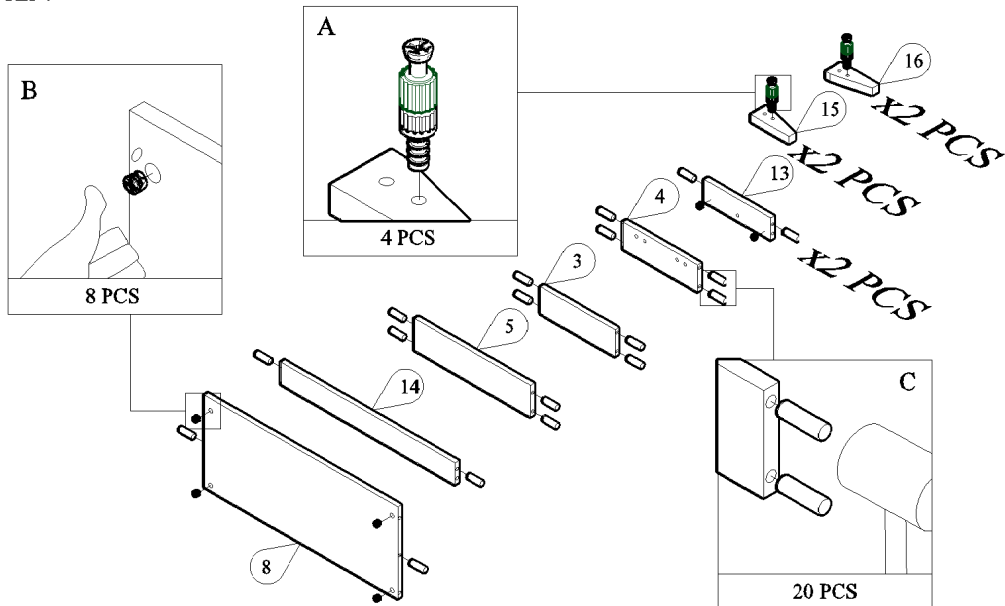


## STEP 4

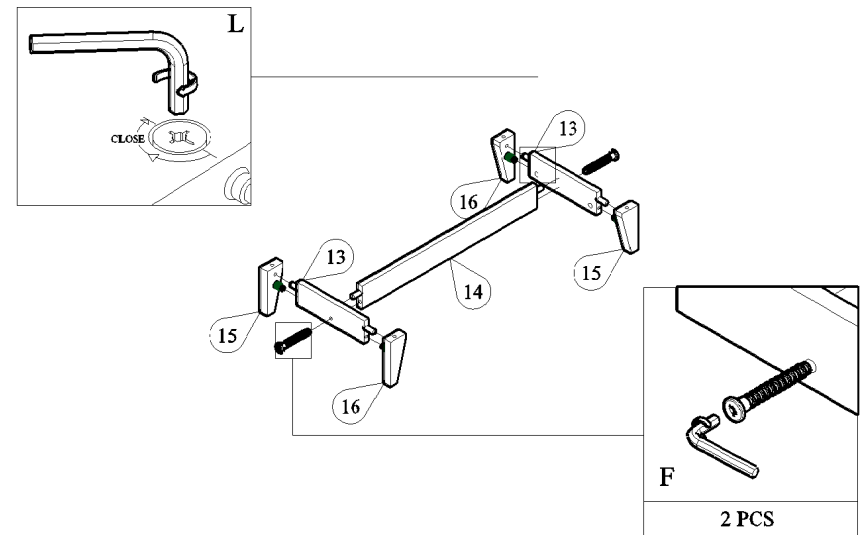


STEP 5

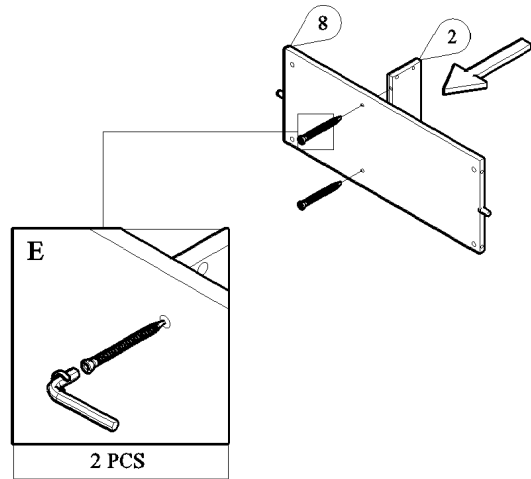


STEP 6

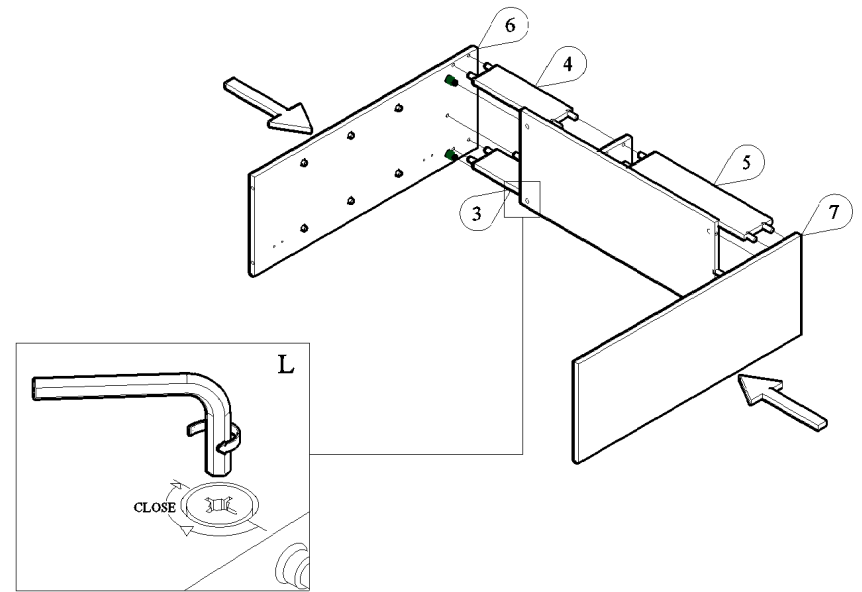


STEP 7

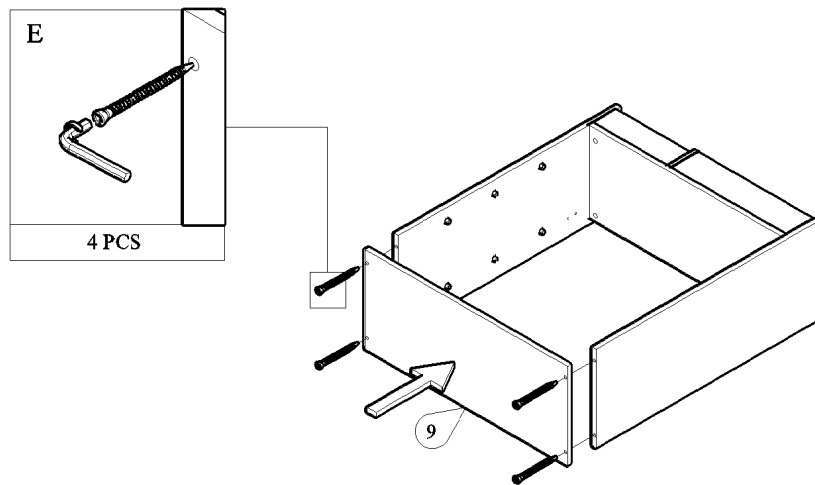


STEP 8

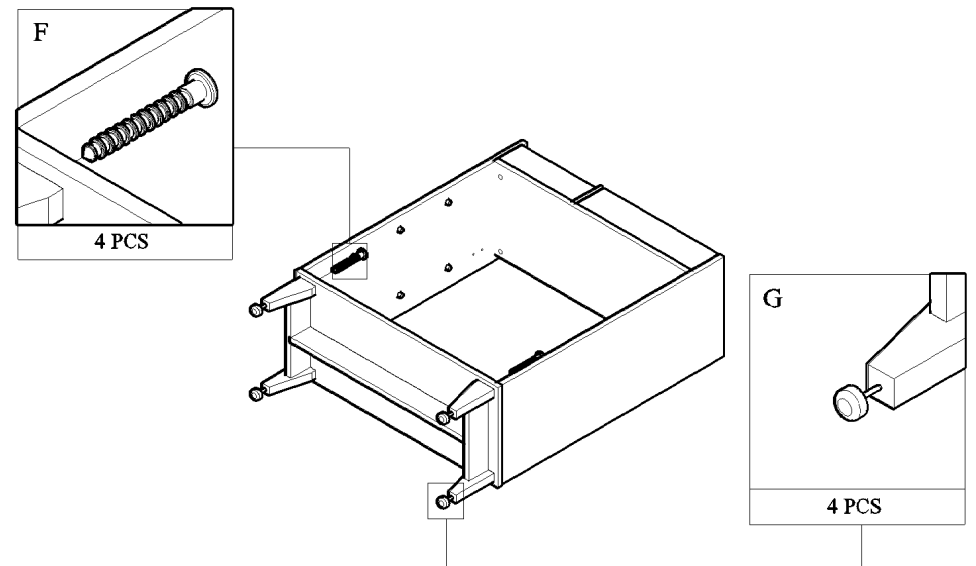


STEP 9

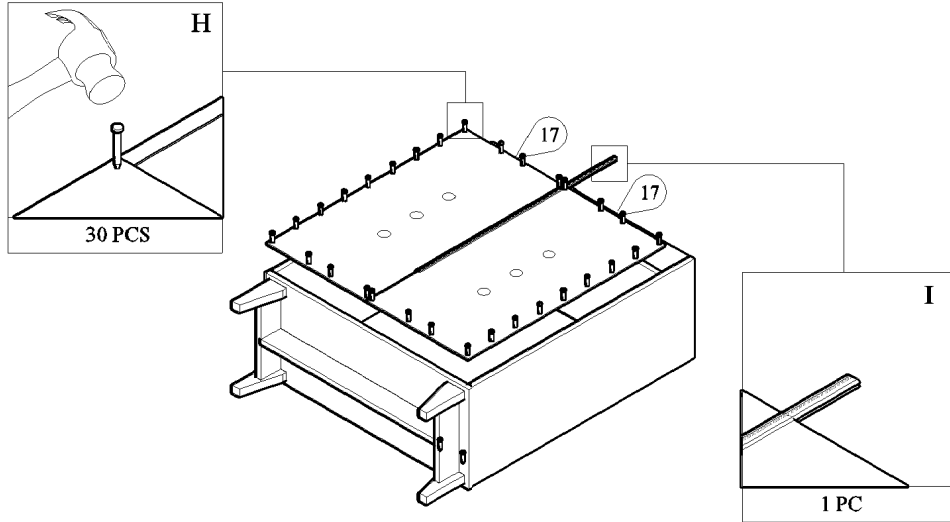


STEP 10

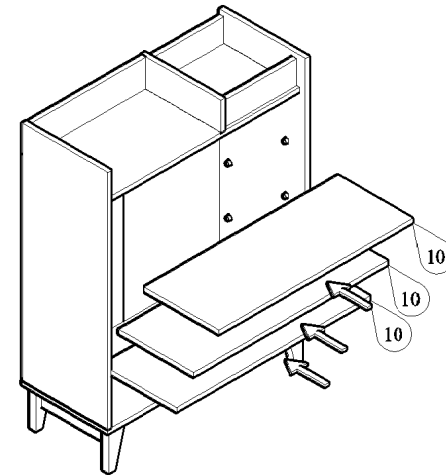


STEP 11

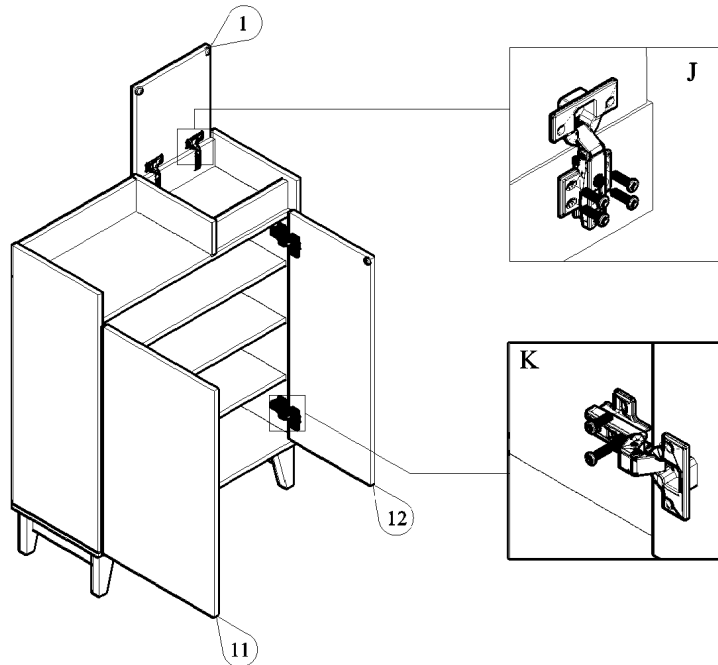


STEP 12

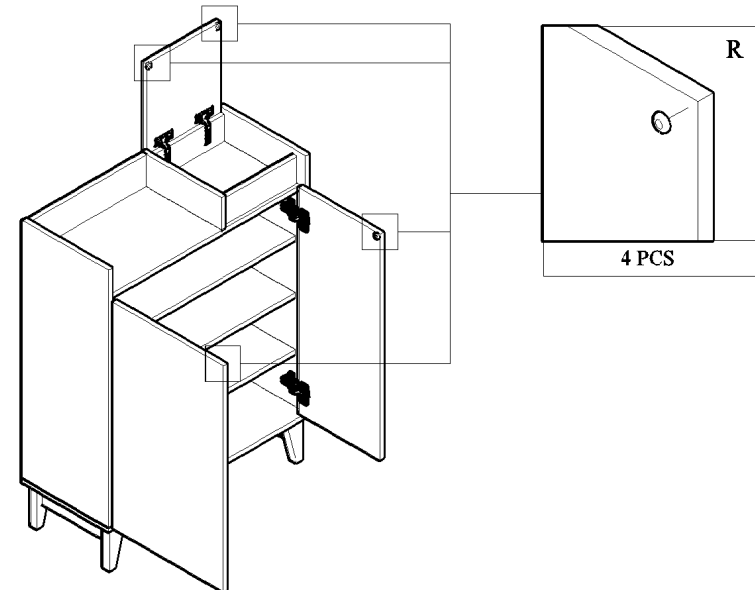


STEP 13

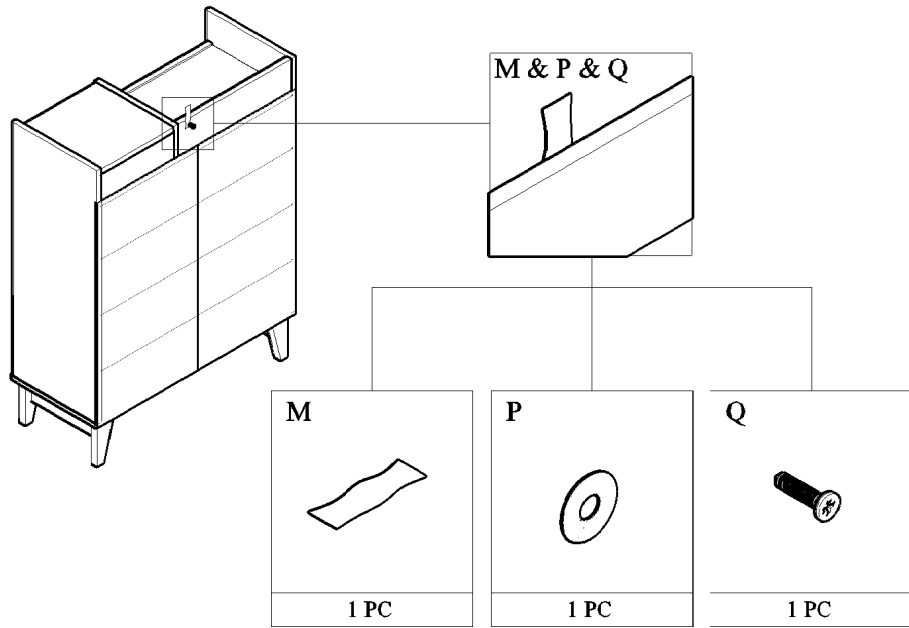

STEP 14

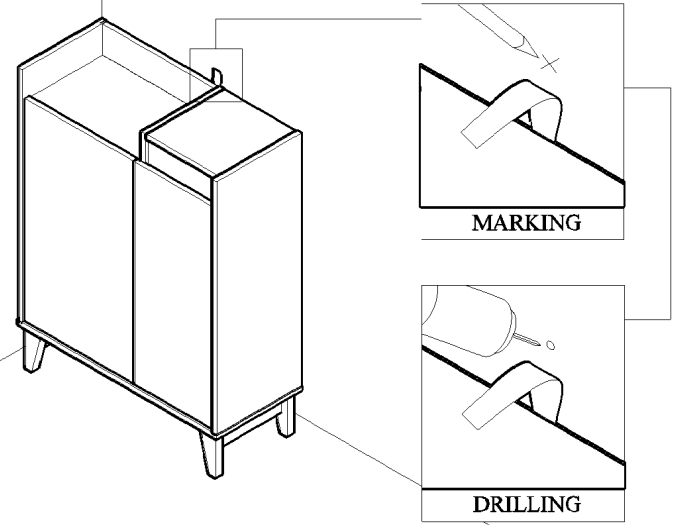

STEP 15

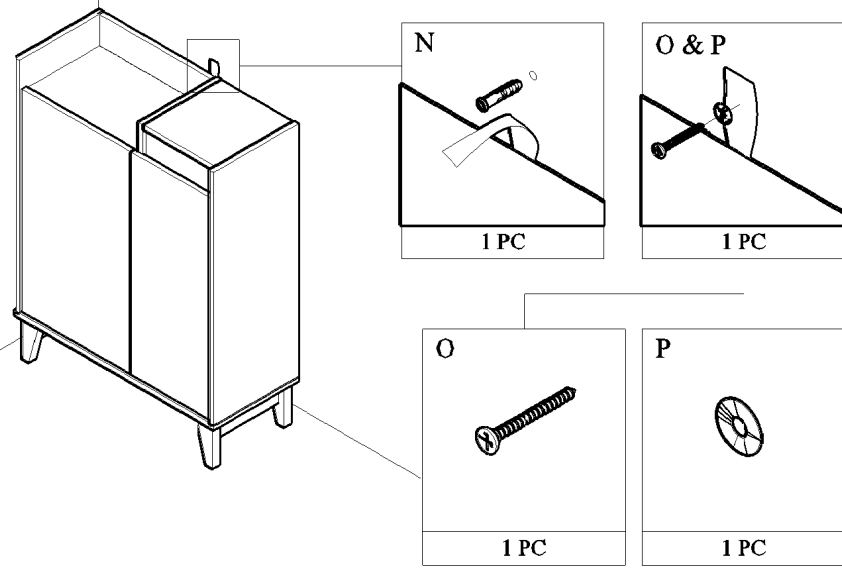

COMPLETED

