
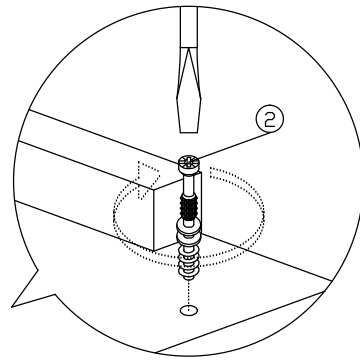



Assembly Instruction

Step 3

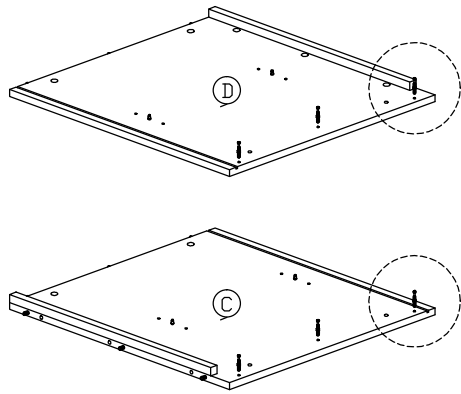


**Attach 6pcs Minifix Bolt to side panels as shown.*


Step 4

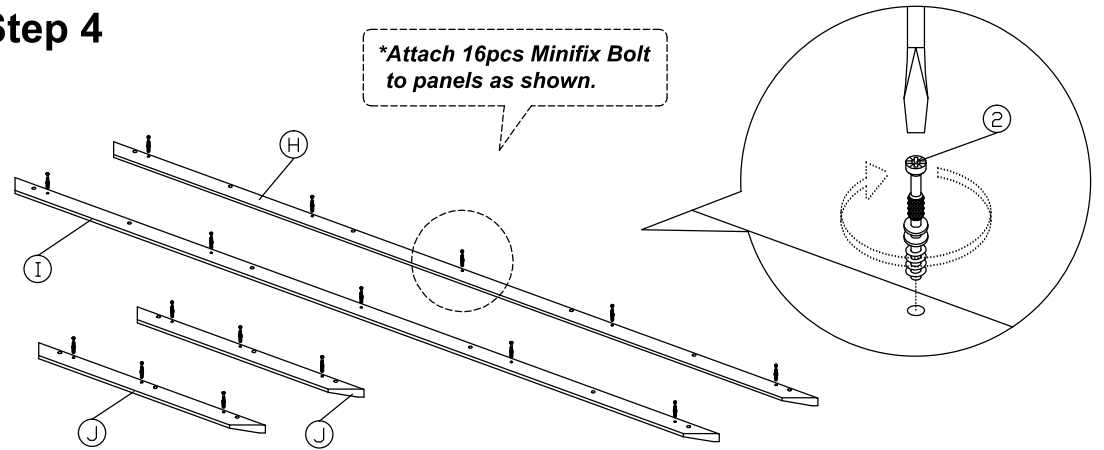


**Attach 16pcs Minifix Bolt to panels as shown.*

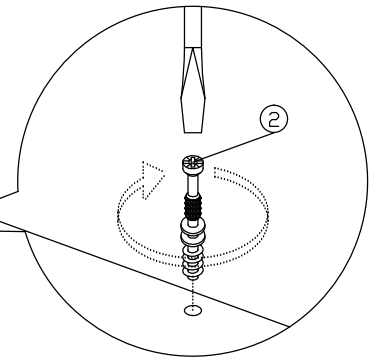


Step 5

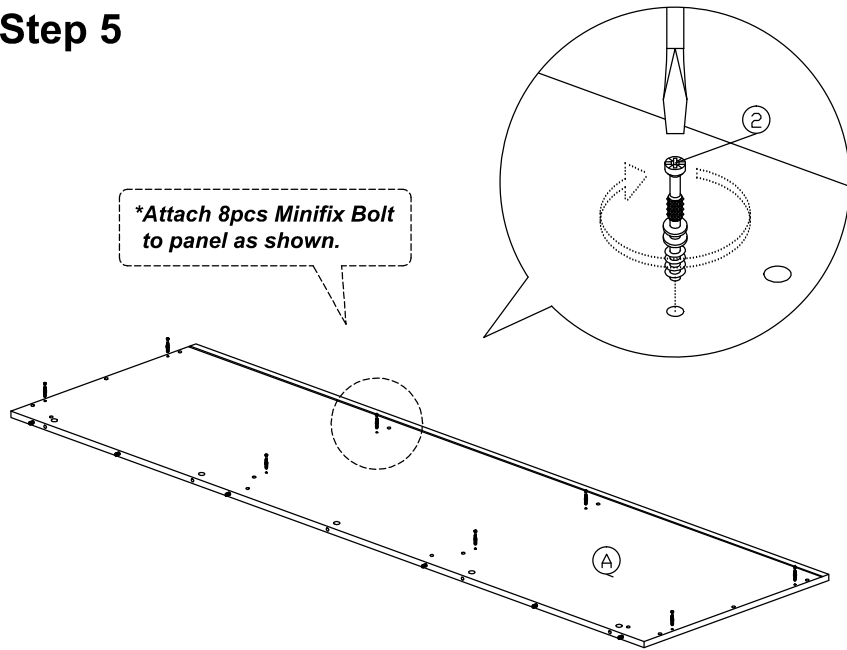

**Attach 8pcs Minifix Bolt to panel as shown.*

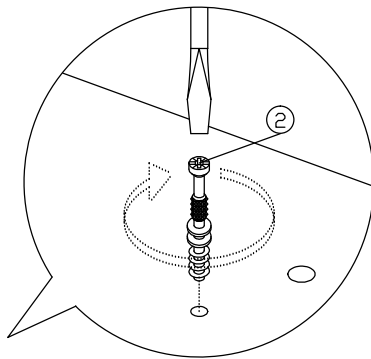


Step 6

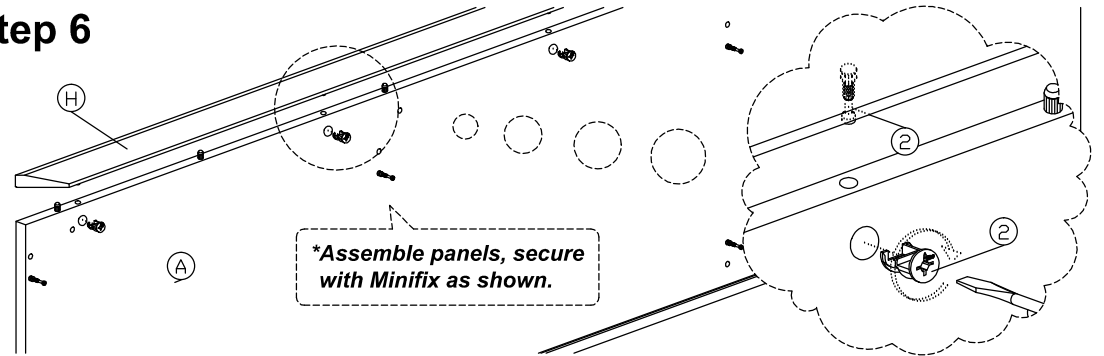

**Assemble panels, secure with Minifix as shown.*

Step 7

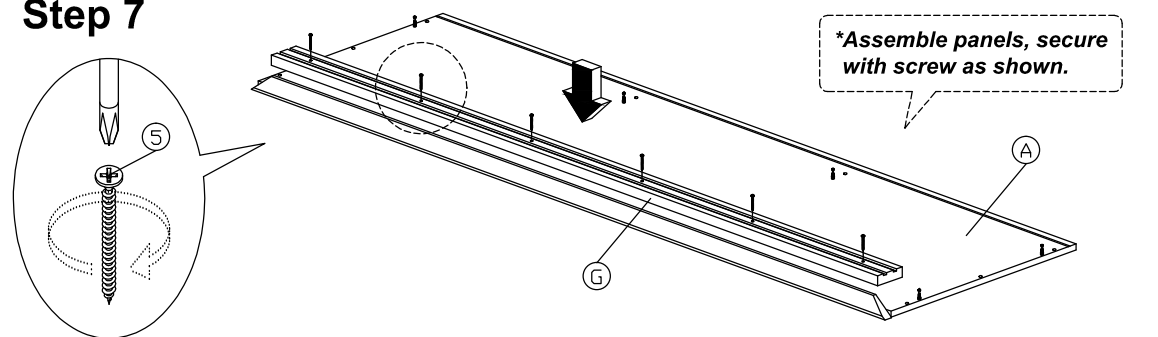

**Assemble panels, secure with screw as shown.*