

STOP!

Before you start...




2



Lay out all components on a soft surface
as if you were preparing to do a jigsaw puzzle.

Read Instructions carefully.

3

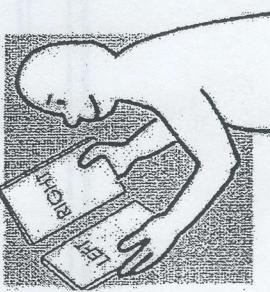


Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

5




DO NOT over-tighten screws


What You Need

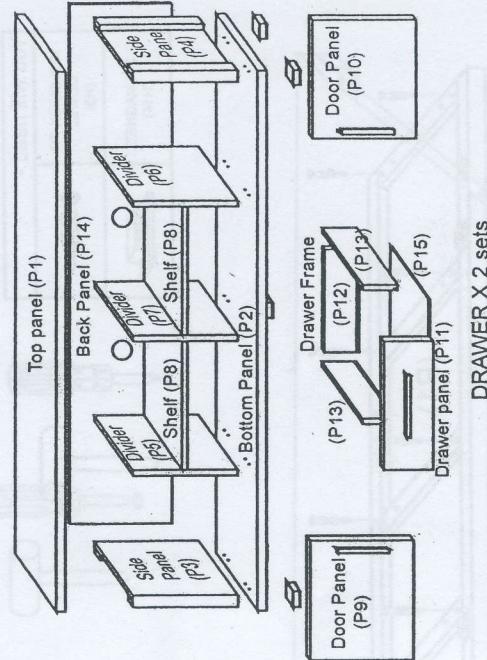

DR_AMER X 2 sets

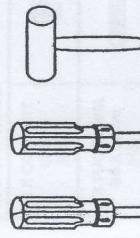

- Phillips Head Screwdriver
 - Flat Head Screwdriver
 - Mallet
- (Please be remind that tools are not provided)

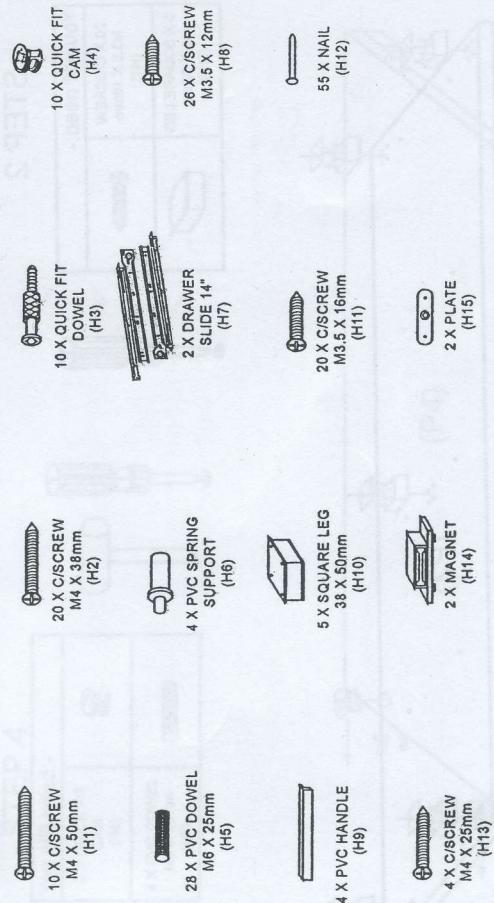


DO NOT set glue until you are certain that the parts belong together.





Separate and identify each component from the hardware pack and rest each one on its proper location before fastening.

6

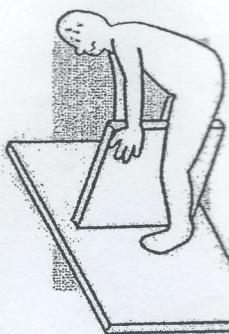



STEP 1

You will need:-	
10 X QUICK FIT DOWEL (H3)	
2 X MAGNET (H14)	

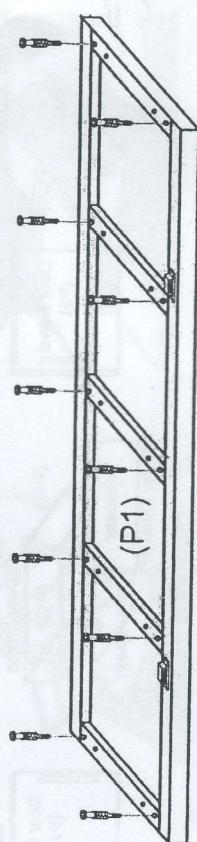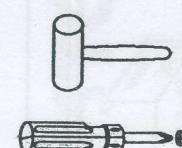



STEP 3

You will need:-	
2 X QUICK FIT CAM (H4)	
4 X PVC DOWEL M6 X 25mm (H5)	

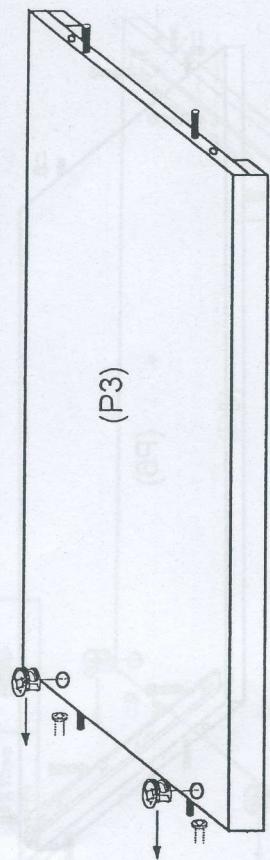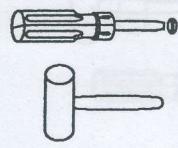



STEP 2

You will need:-	
20 X C/S CREW M3.5 X 16mm (H11)	
5 X SQUARE LEG 45 X 50mm (H10)	

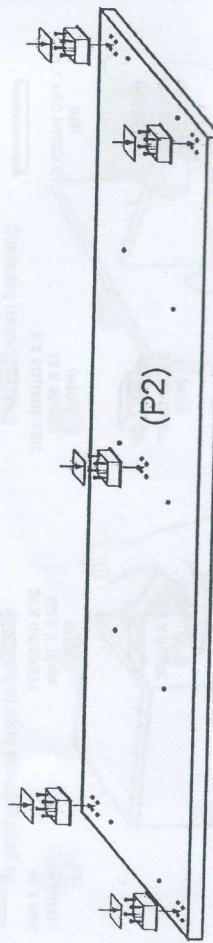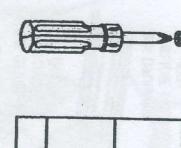

STEP 4


You will need:-	
2 X QUICK FIT CAM (H4)	
4 X PVC DOWEL M6 X 25mm (H5)	

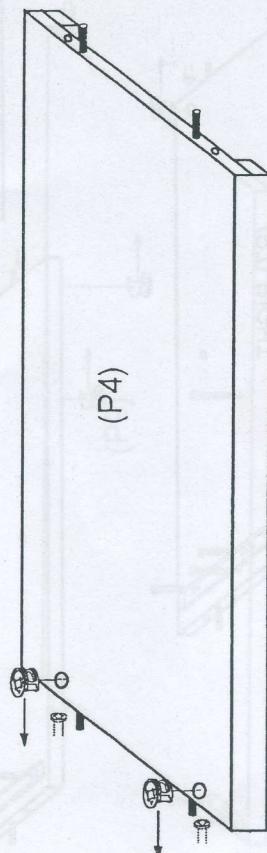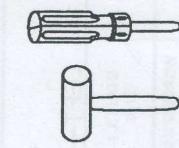


STEP 5

You will need:-

2 X QUICK FIT CAM (H4)	
4 X PVC DOWEL M6 X 25mm (H5)	
1 X DRAWER SLIDE 14" (H7)	
3 X C/SCREW M3.5 X 12mm (H8)	

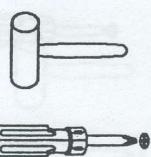


(P6)

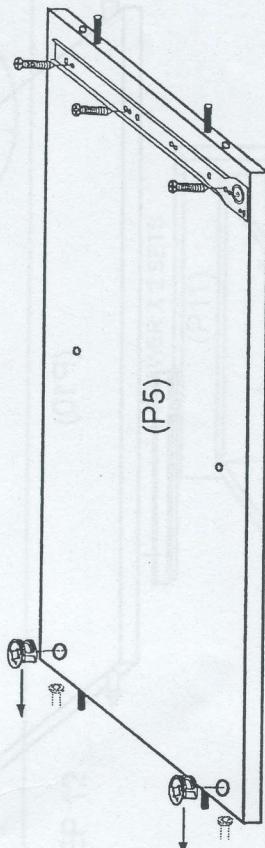


STEP 7

You will need:-

2 X QUICK FIT CAM (H4)	
4 X PVC DOWEL M6 X 25mm (H5)	
1 X DRAWER SLIDE 14" (H7)	
3 X C/SCREW M3.5 X 12mm (H8)	

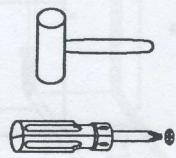


(P5)

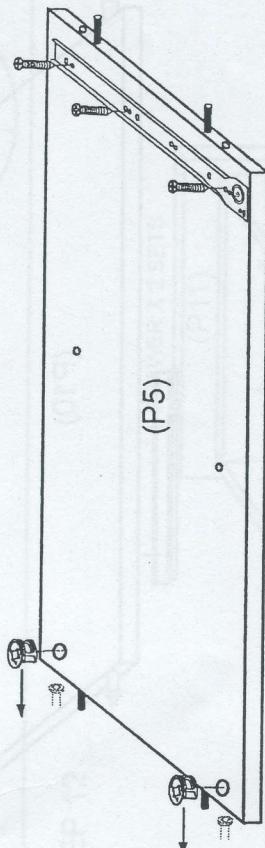


STEP 6

You will need:-


2 X QUICK FIT CAM (H4)	
4 X PVC DOWEL M6 X 25mm (H5)	
2 X DRAWER SLIDE 14" (H7)	
6 X C/SCREW M3.5 X 12mm (H8)	

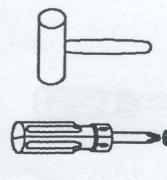

(P7)-LEFT

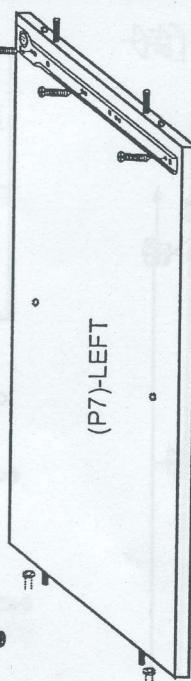


(P7)-RIGHT

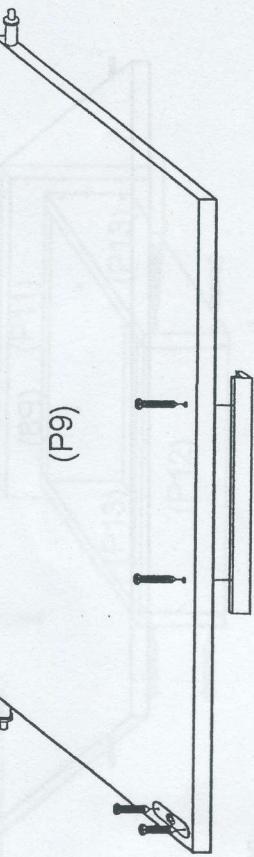


STEP 8

You will need:-

2 X PVC SPRING SUPPORT (H6)	
1 X PLATE (H15)	
2 X C/SCREW M3.5 X 12mm (H8)	




(P9)

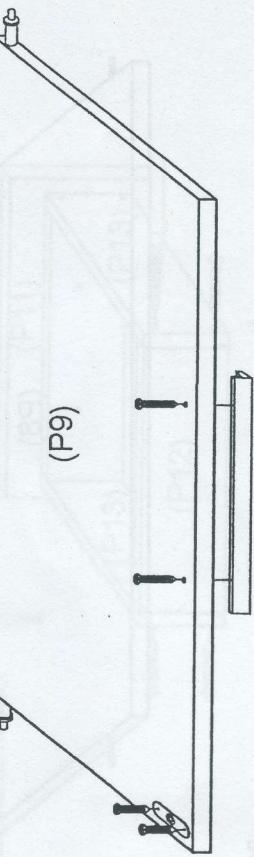


STEP 9

You will need:-
2 X PVC SPRING SUPPORT (H6)
1 X PVC HANDLE (H9)
2 X C/S SCREW M4 X 25mm (H13)
1 X PLATE (H15)
2 X C/S SCREW M3.5 X 12mm (H8)

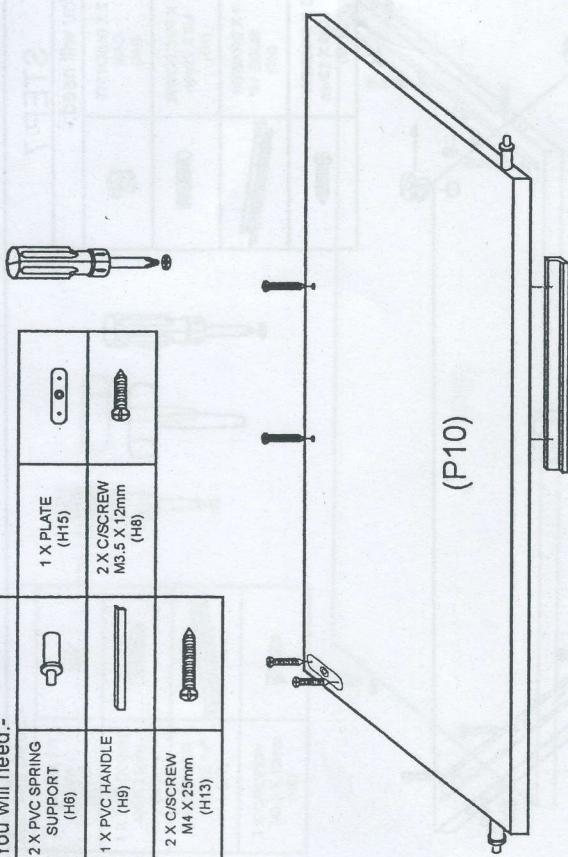


STEP 11


You will need:-
8 X C/S SCREW M4 X 38mm (H2)

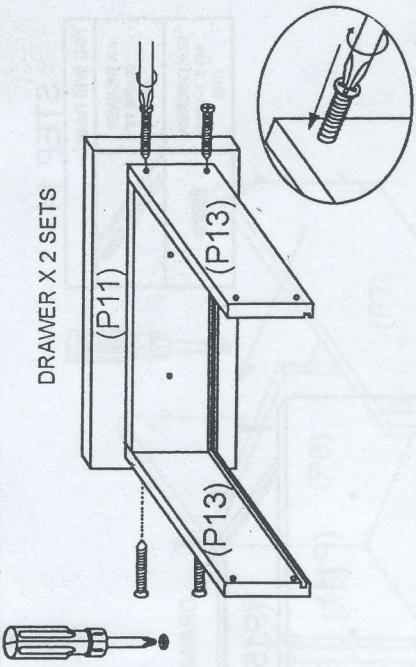

STEP 12

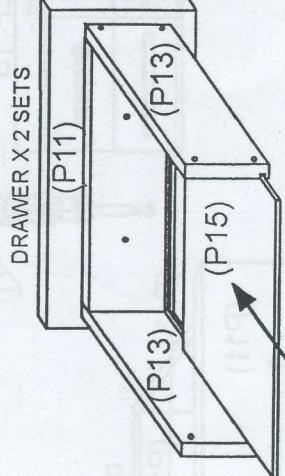


DRAWER X 2 SETS

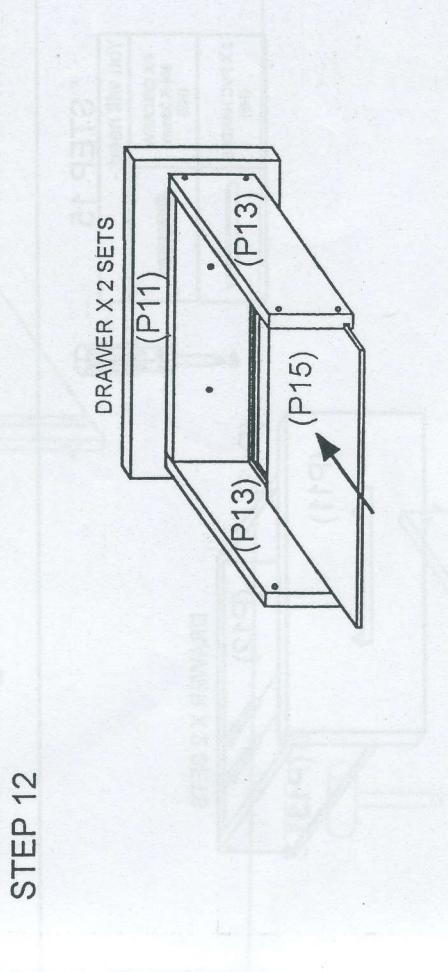


STEP 13



You will need:-
8 X C/S SCREW M4 X 38mm (H2)

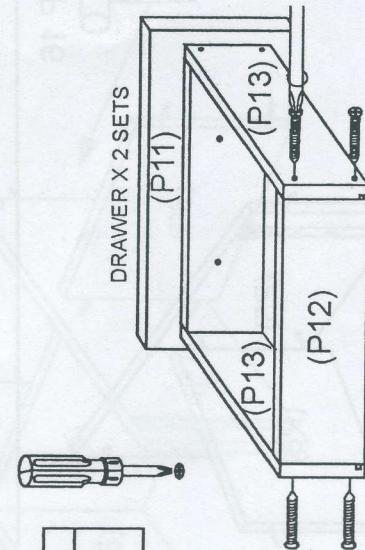

DRAWER X 2 SETS

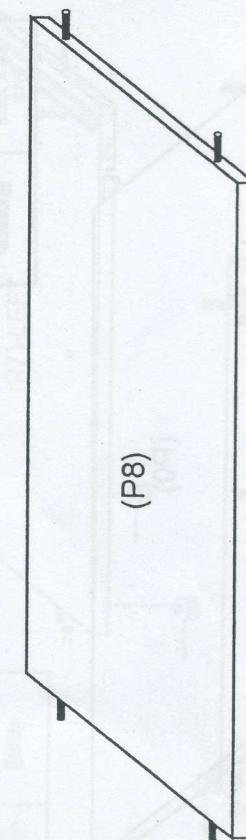


STEP 17

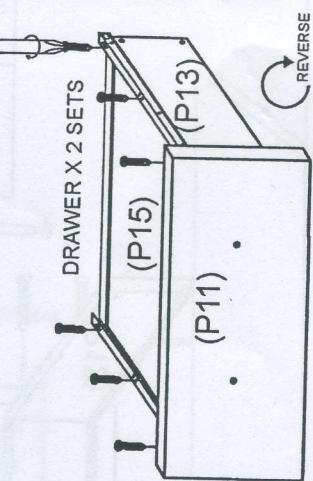



STEP 14

You will need:-	
4 X DRAWER SLIDE 14"	(H7)
12 X C/S SCREW M3.5 X 12mm	(H8)

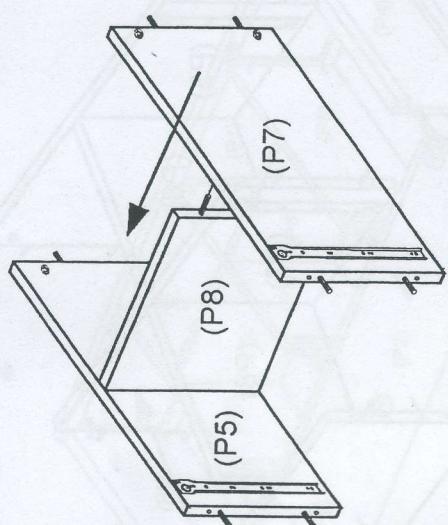


STEP 18

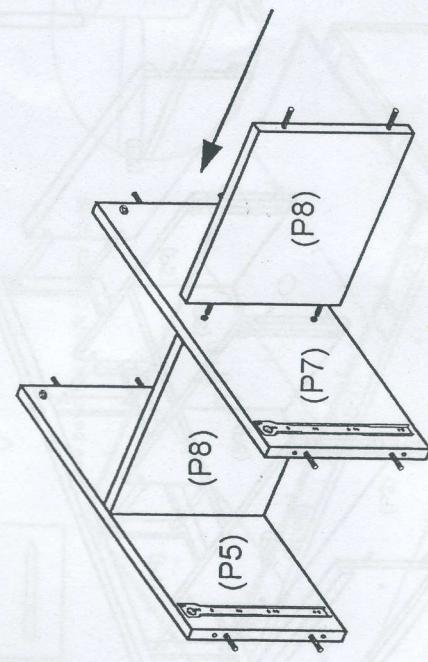



STEP 15


You will need:-	
4 X C/S SCREW M4 X 38mm	(H2)
2 X PVC HANDLE (H9)	

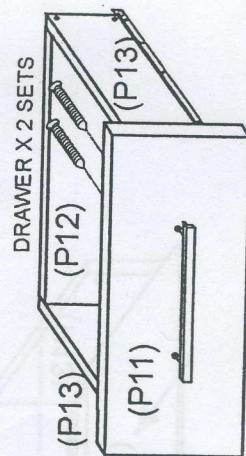


STEP 16

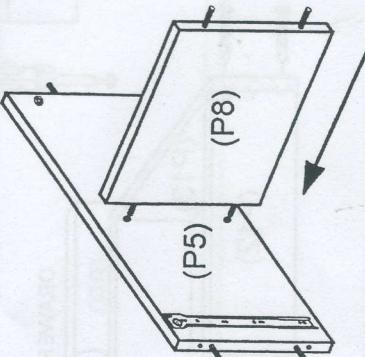

STEP 19

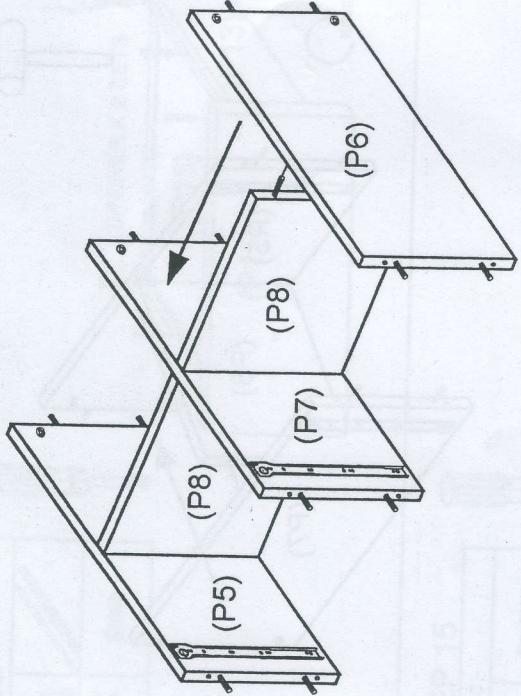


STEP 21


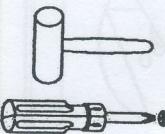


You will need:-


10 X CSCREW M4 X 50mm (H1)	
----------------------------------	--

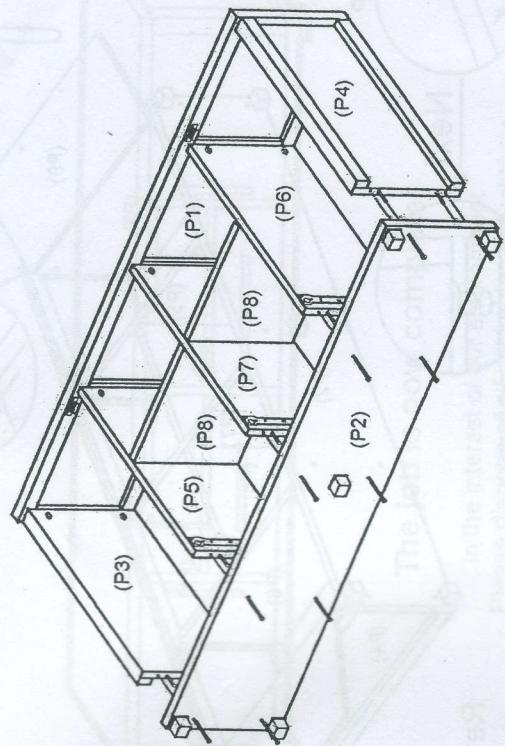

STEP 20

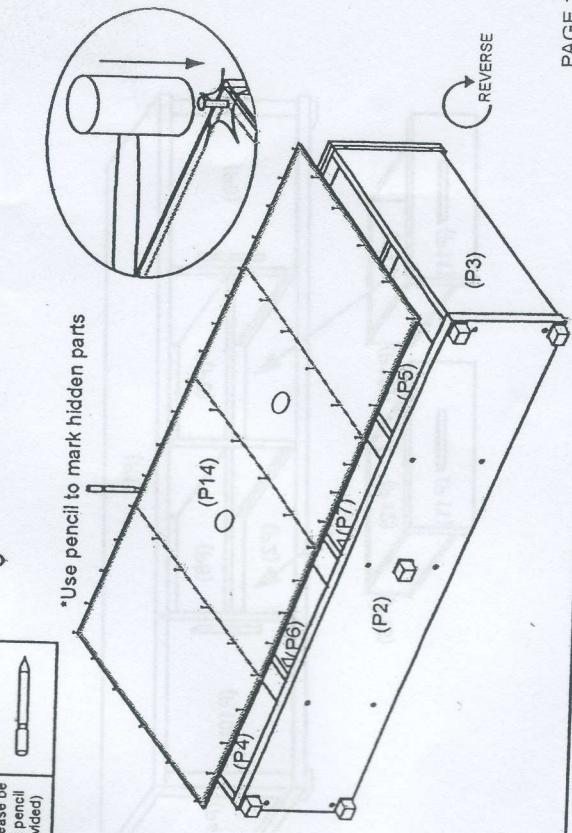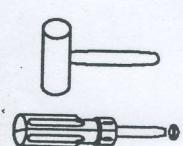

STEP 22




You will need:-

55 X NAIL (H16)	
PENCIL (Please be remind that pencil are not provided)	

*Use pencil to mark hidden parts

STEP 25

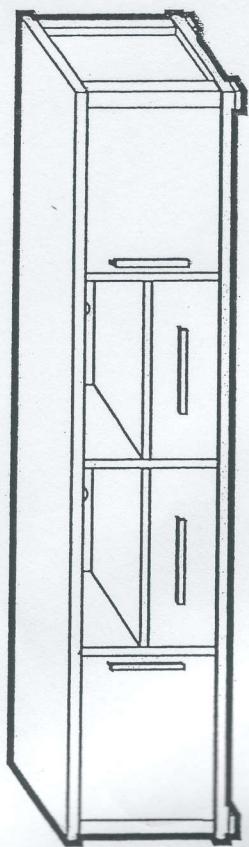


The job is now complete!

In the interest of our environment
Please dispose of all packaging thoughtfully.

DISPOSE OF ALL
PACKAGING
PROPERLY

STEP 23

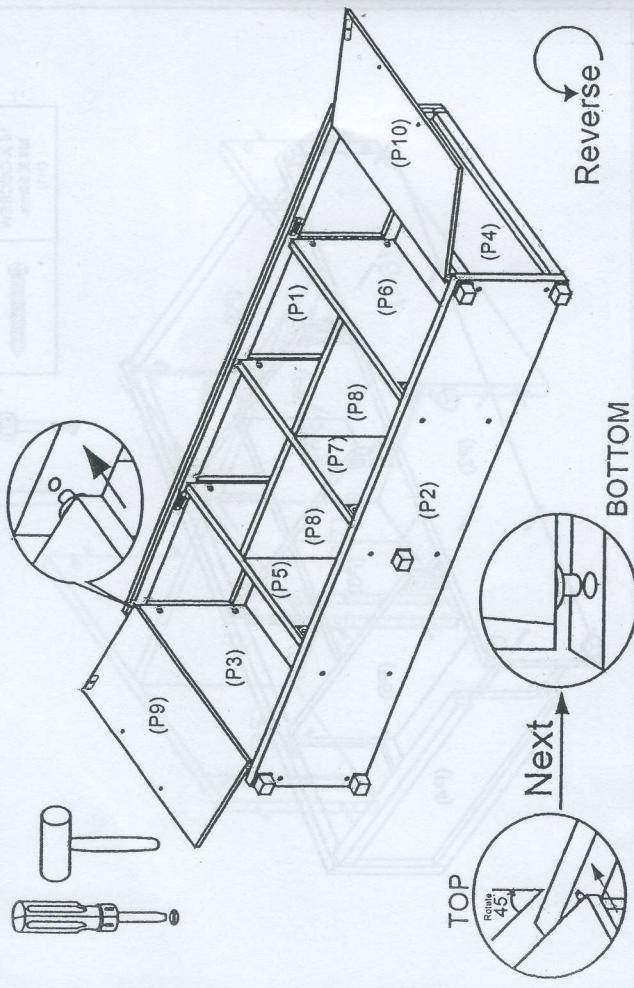

STEP 24

