
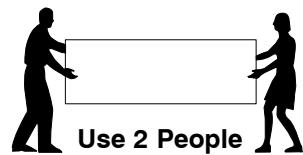


0016-1 Daybed Trundle

Assembly Instructions


WII-0120

1 Assembled View

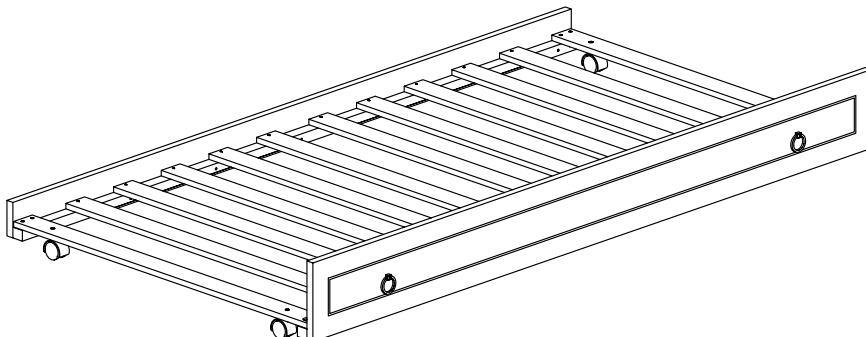

Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List




A Trundle Front Panel **x 1**



C Trundle Support Rail **x 2**



B Trundle Rear Panel **x 1**

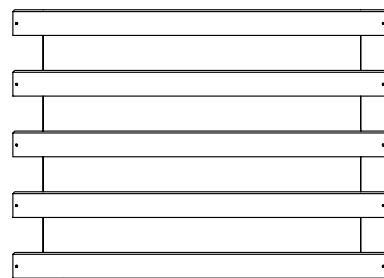


D Set of Slats **x 2**


3 Hardware List



1 M6 x 40mm JCB
x 8



2 Wood Screw
(M4 x 32mm)
x 20



3 Wood Screw
(M4 x 22mm)
x 2



4 Allen Key
x 1



5 Handle
x 2




6 Wheels
x 4

0016-1 Daybed Trundle


Assembly Instructions

WII-0120

4 Fit the Wheels (6) to the Trundle Support Rail (C).

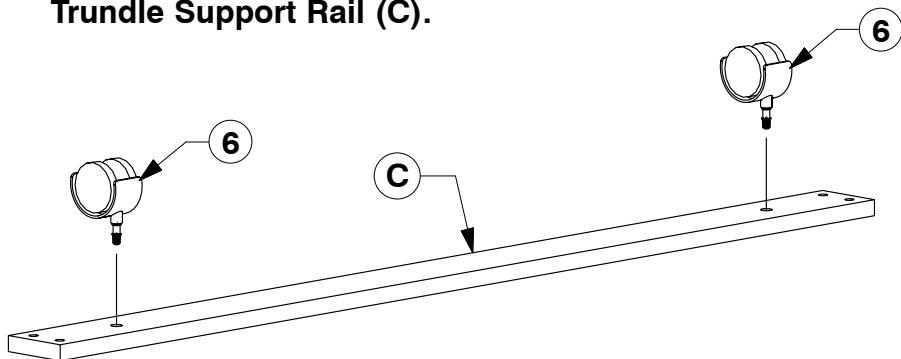

5 Assemble the Set of Slats (D) & Trundle Support Rail (C) to the Trundle Front Panel (A) & Trundle Rear Panel (B).

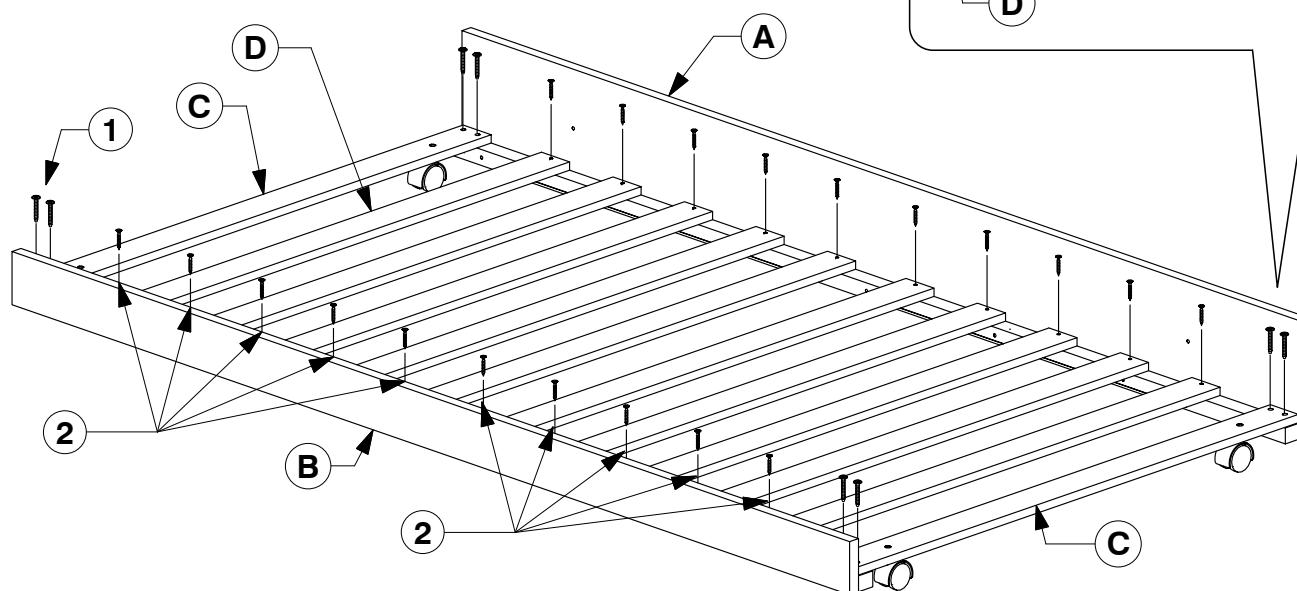

6 Fit the Handle (5) to the Trundle Front Panel (A).

