
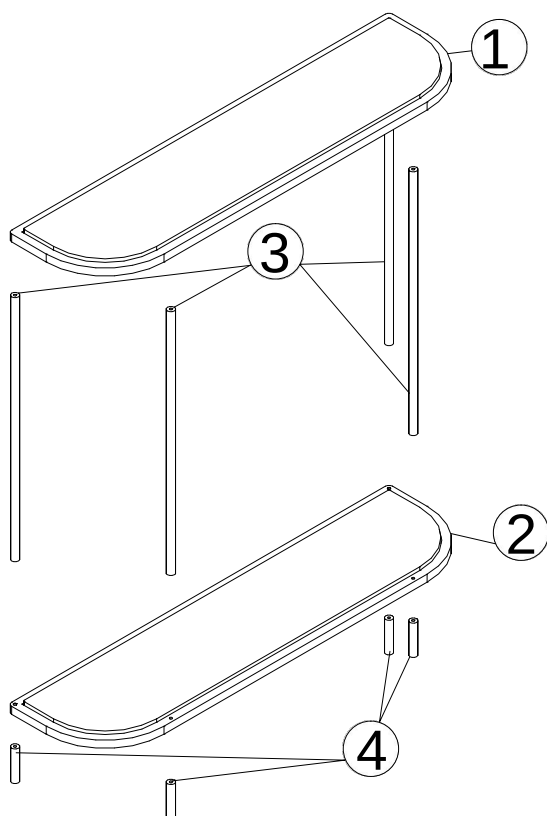


Assembling Instruction

ITEM#: WS-12219

Attention: Do not tighten the screws until all of them are in right positions

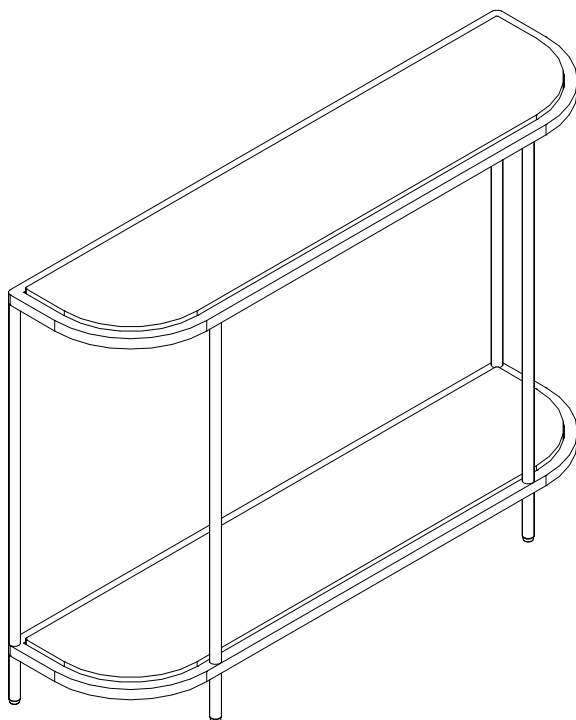

A x 4



B x 8



M6x50

C x 1



ST4X14

D x 1




Ø6



4mm


1

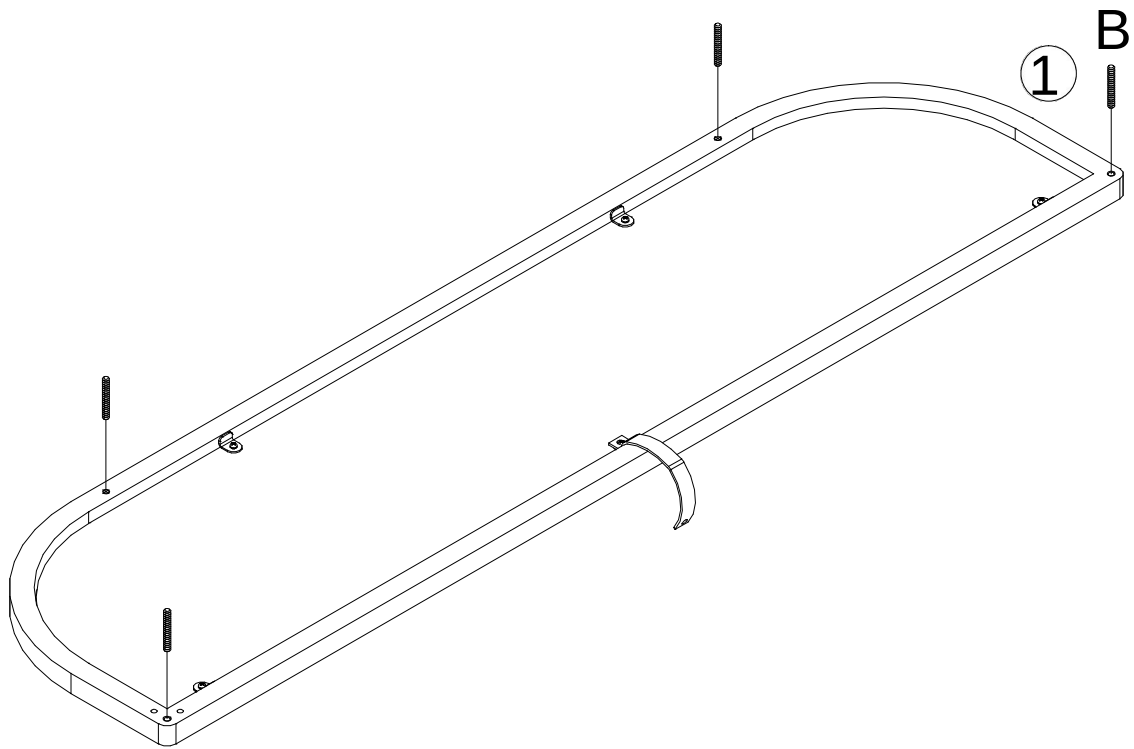

B x4




2

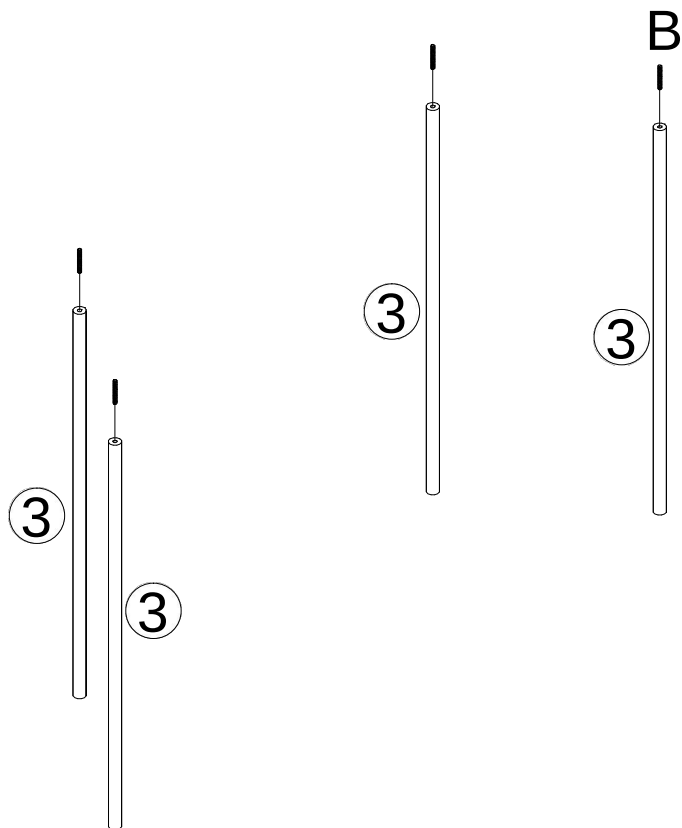


B x4




3

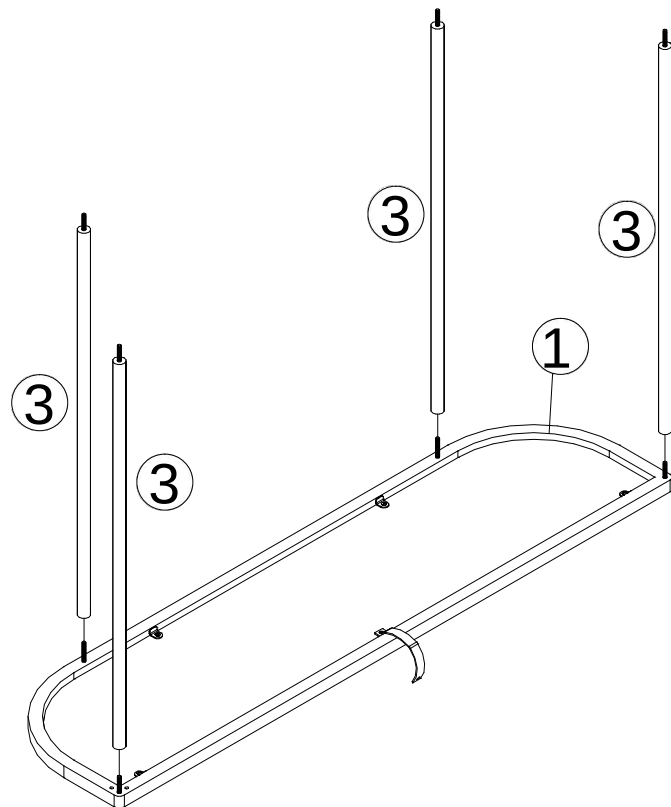


4

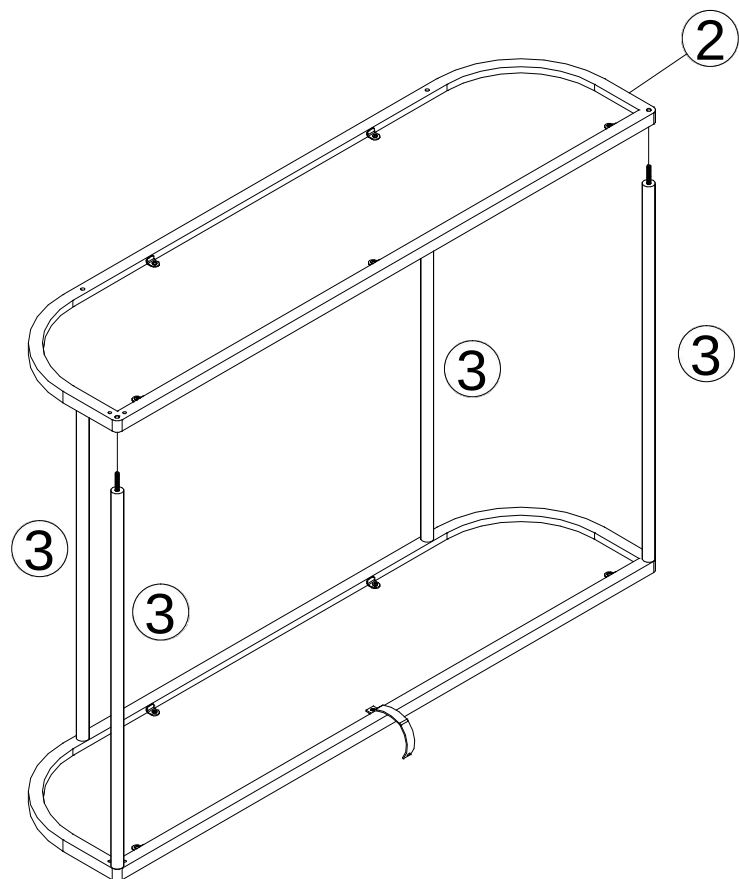

5

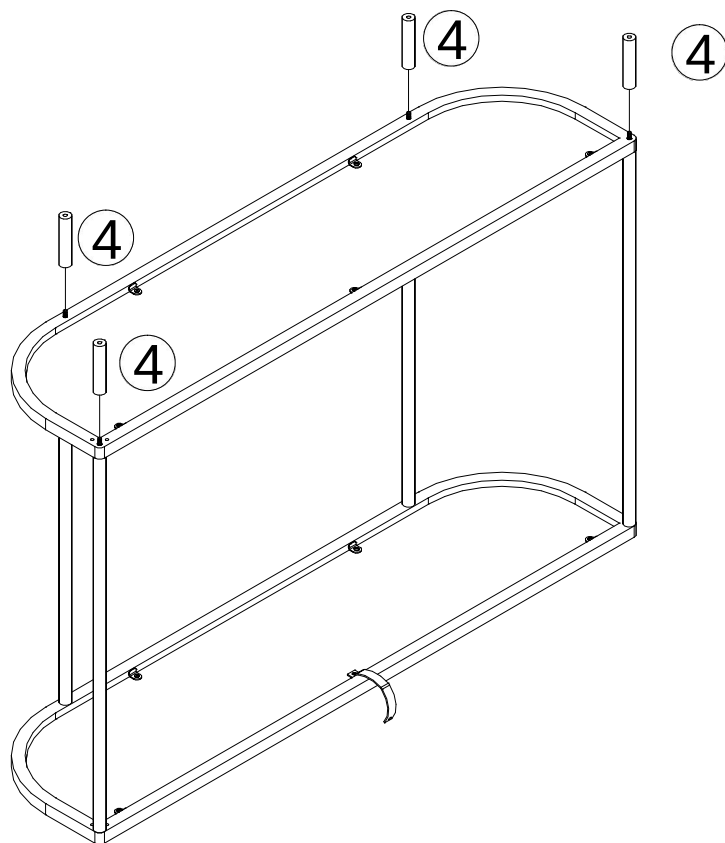


6

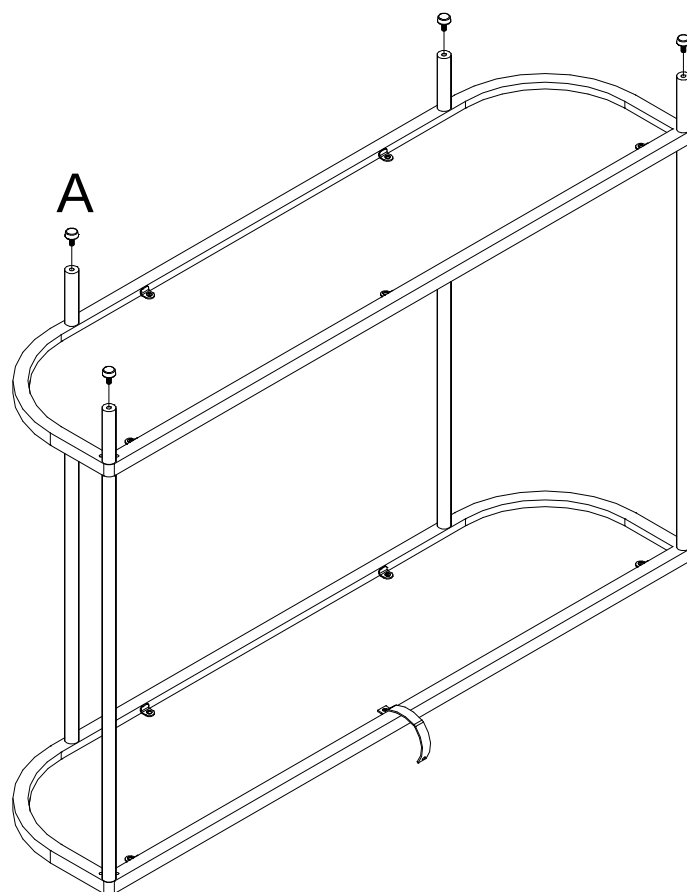

A x4



7

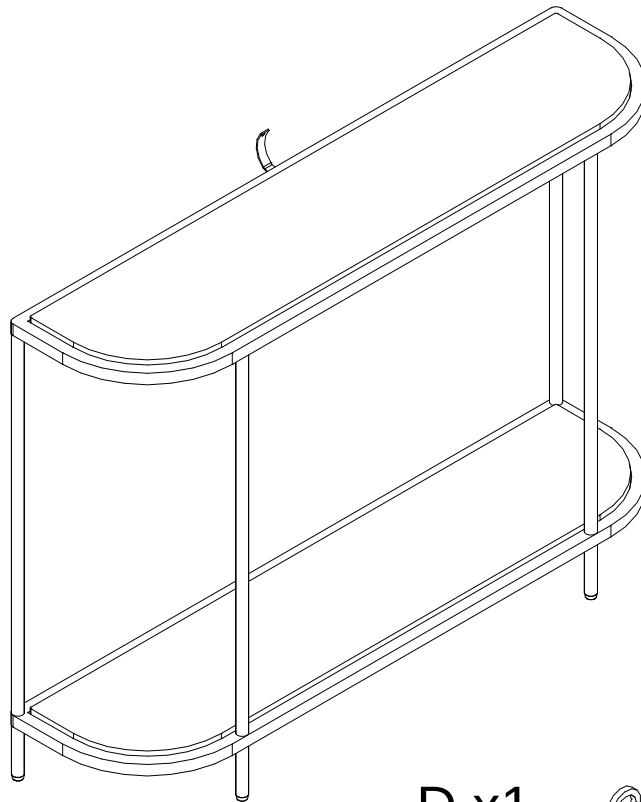

D x1



C x1

