
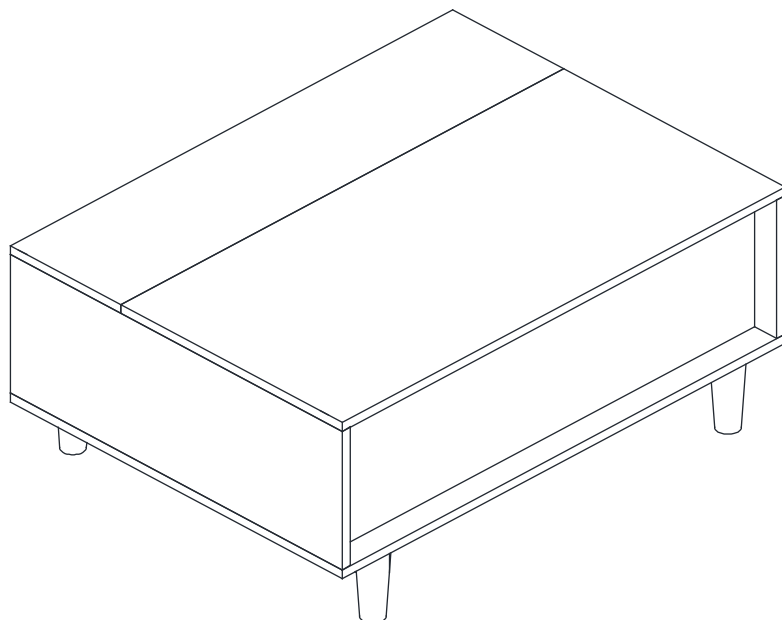

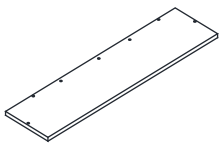

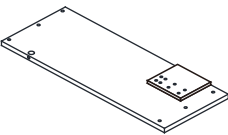
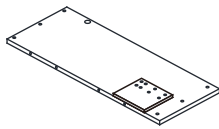
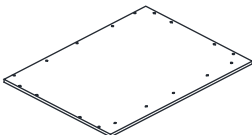
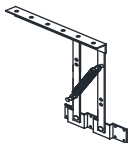




W11251

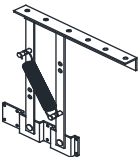

①		x1	②		x1	③		x1
④		x1	⑤		x1	⑥		x1
⑦		x1	⑧		x4			

A	x13	D	x10	G	x1
 35X6mm		 4X35mm			
B	x13	E	x32	H	x4
 15X12mm		 4X12mm			
C	x18	F	x1	J	x16
 5.8X30mm				 4X20mm	


1

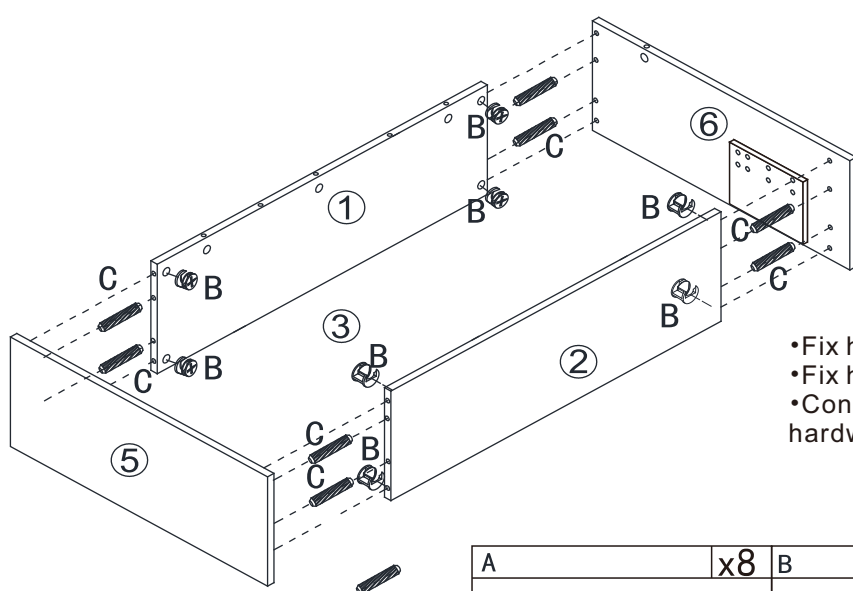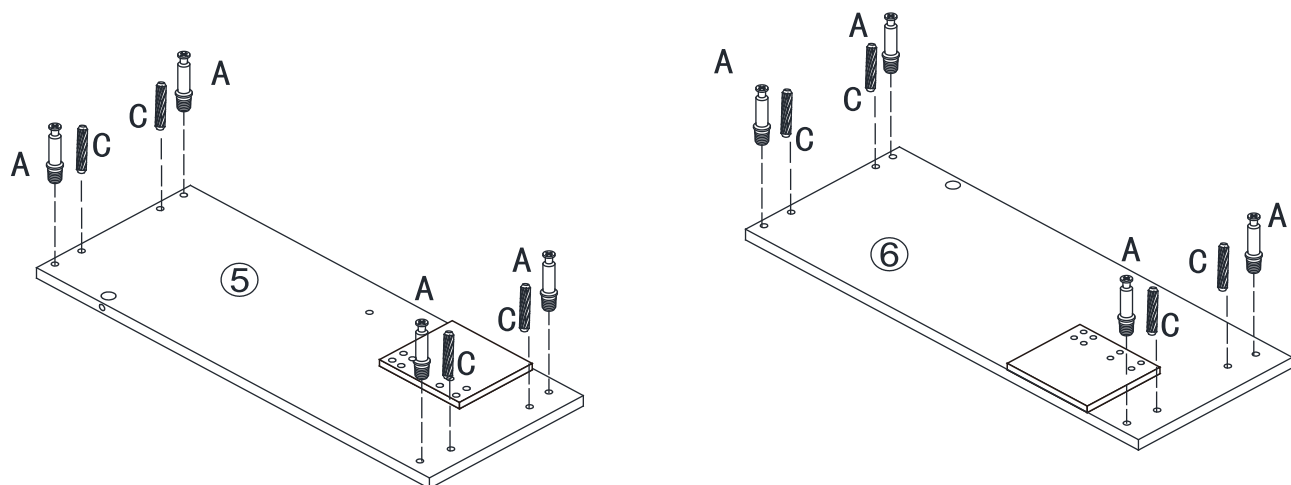

- Fix hardware A and C to Part 5.
- Fix hardware A and C to Part 6.
- Connect Part 5 and 6 to Part 1 and 2, then fix hardware B to Part 1 and 2 and screw them.

A	x8	B	x8	C	x8
					
35X6mm		15X12mm		5.8X30mm	


2

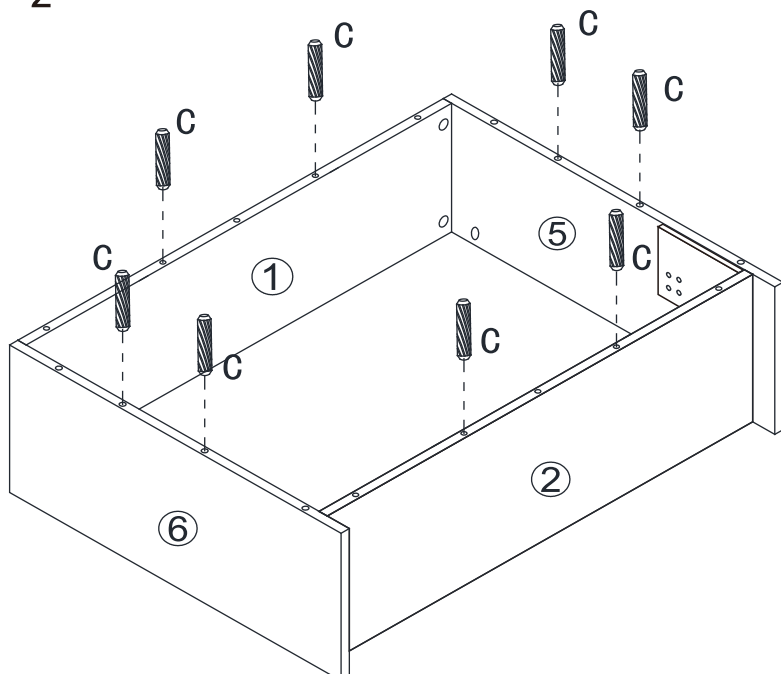

- Put hardware C to Part 1, 2, 5 and 6.

C	x8
	
5.8X30mm	

3

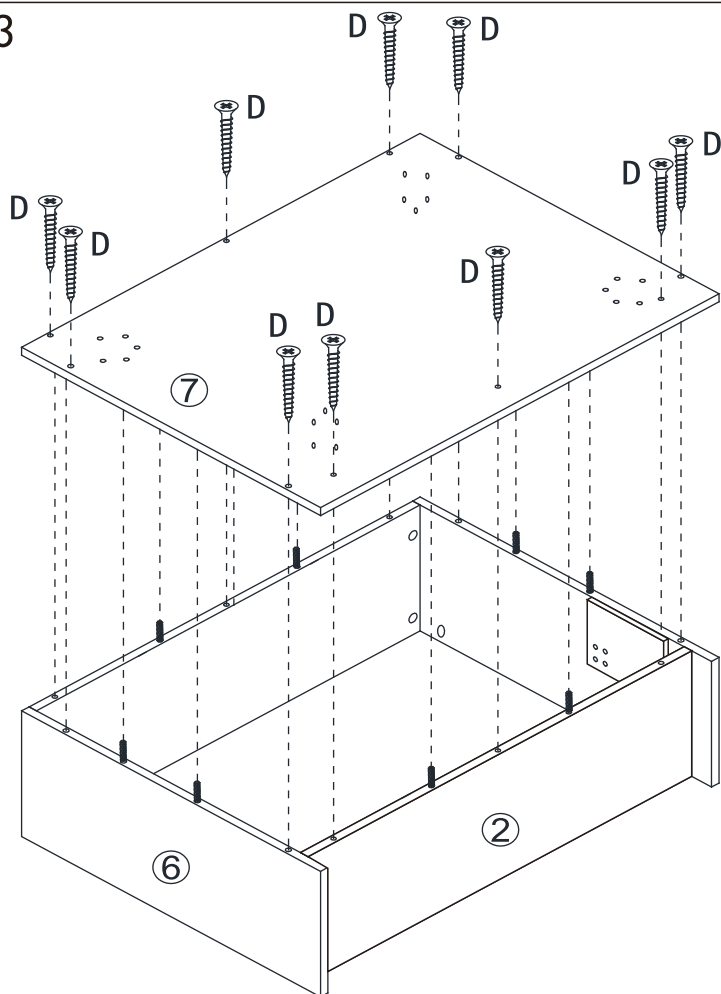

•Fix Part 7 to Part 1,2 5 and 6 with hardware D.


D x10



4X35mm

4

Fix hardware H to Part 7 with hardware E.

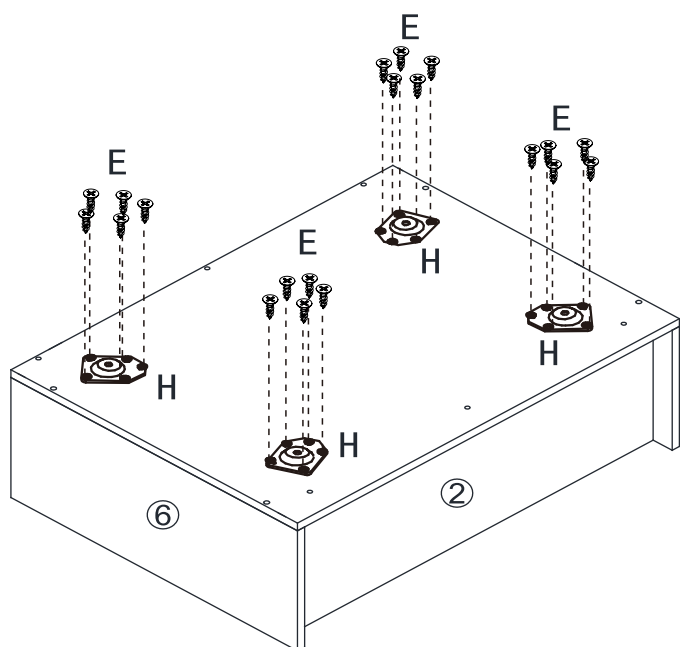


E x20



4X12mm

5

Screw Part 8 to hardware H.

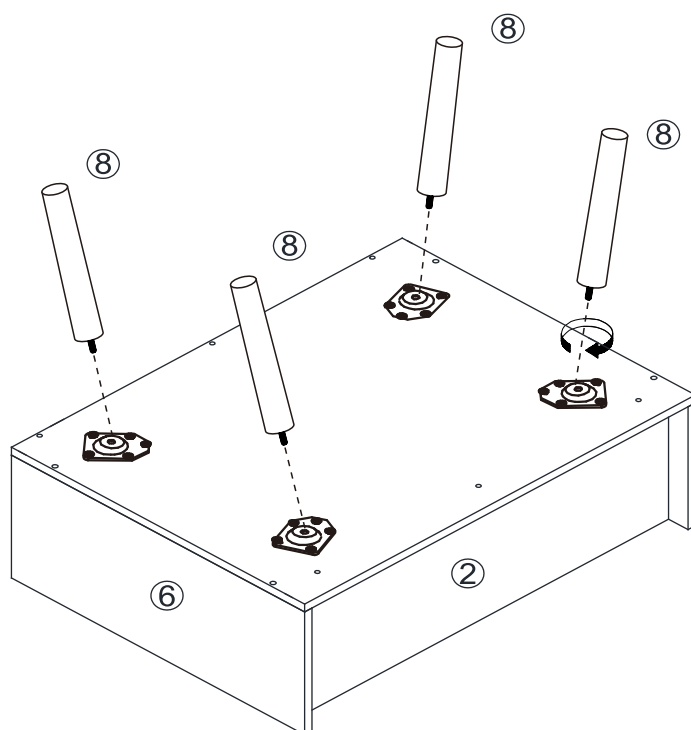


H x4



6


- Fix hardware A and C to Part 3.
- Fix Part 3 to Part 1,5 and 6 with hardware B.

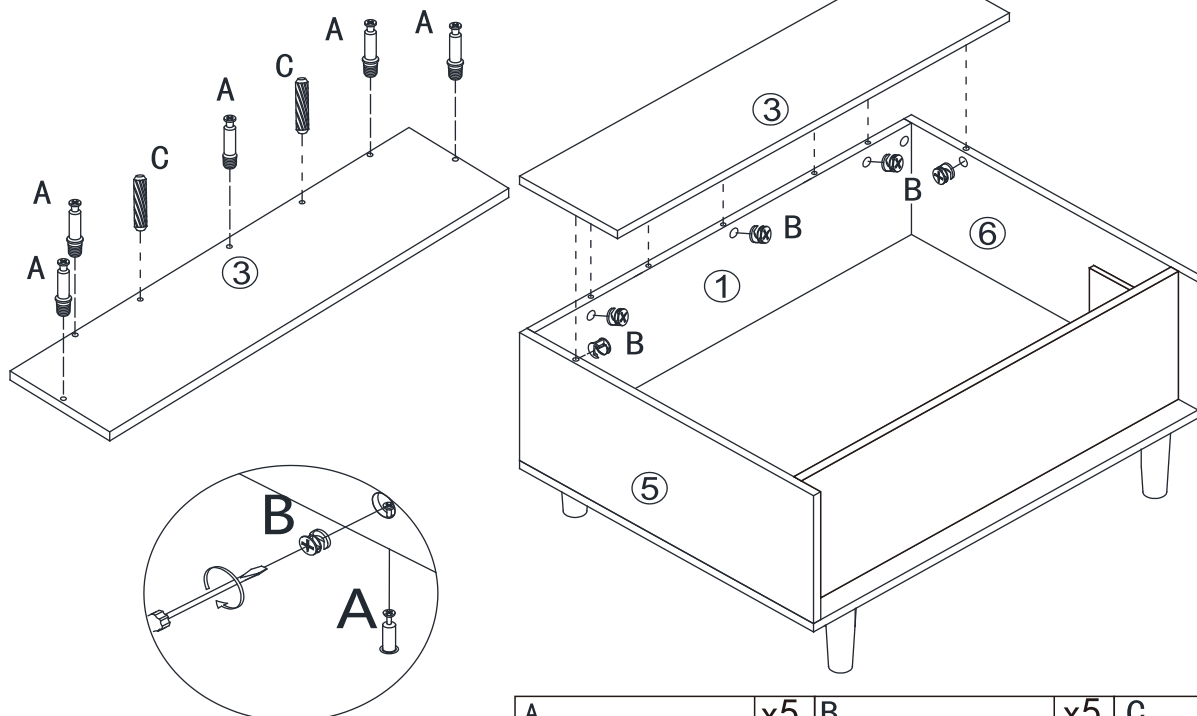


A	x5	B	x5	C	x2
					
	35X6mm		15X12mm		5.8X30mm

7

- Fix hardware G and F to Part 4 with screw E. Then fix whole Part 4 to Part 5 and 6 with screw J.

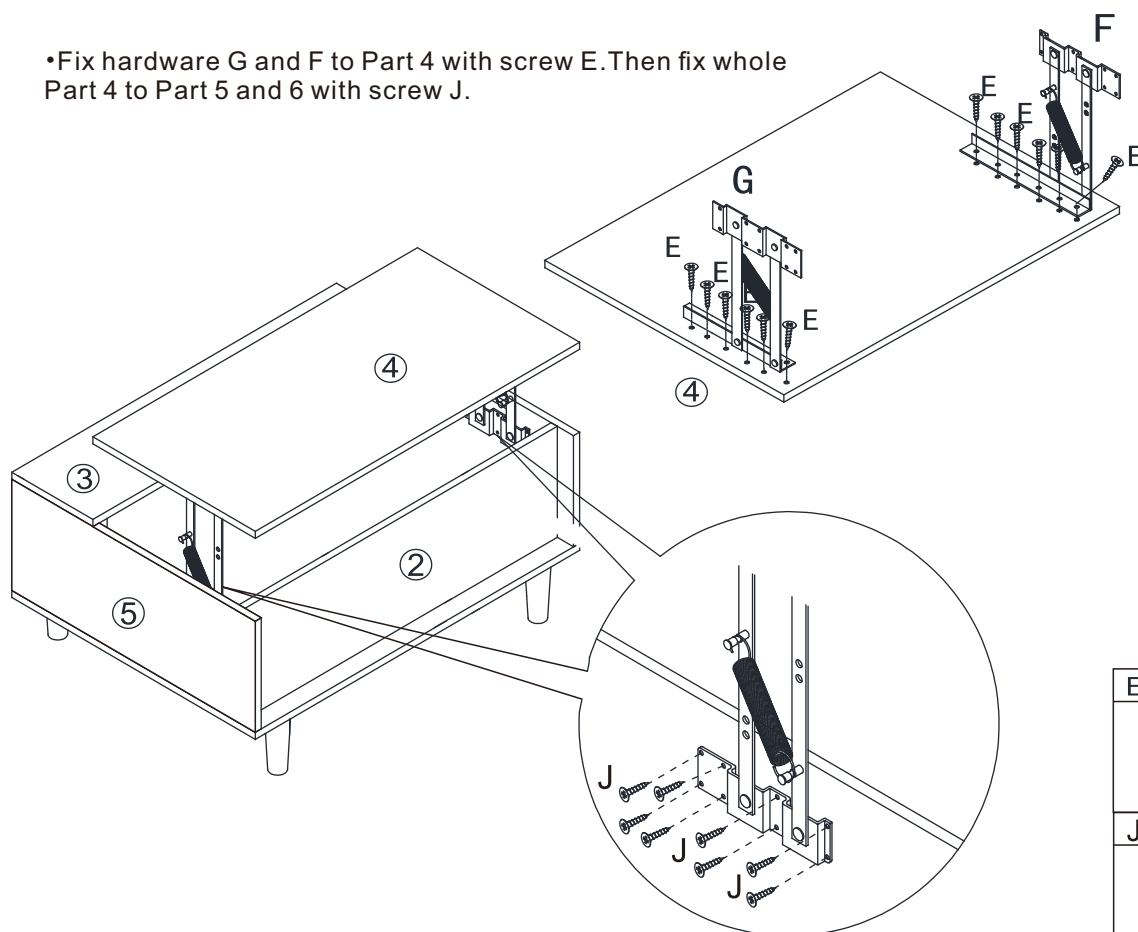

E	x12
	
	4X12mm
J	x16
	
	4X20mm
F	x1
	
G	x1
	