

SOFT, DRY CLOTH

CHEMICAL

HEAT

KEEP DRY

HANDLE WITH CARE

DO NOT USE KNIFE

ASSEMBLY INSTRUCTION

MODEL : PL-SC 8040

DESCRIPTION : 2 DOOR SHOE CABINET

HARDWARE

A

WOOD DOWEL
M8 X 25MM
16

B

CB SCREW
M3.5X16MM
16

C

C1 C2 C3
MINIFIX 5654+5546
17 SETS 17

D

SHELF SUPPORT
8

E

PVC NAIL WITH
PIN 5/8
4

F

L KEY M4
1


G

HINGES 5/8
4


H

3MM PVH
-667MM
1


PART LIST

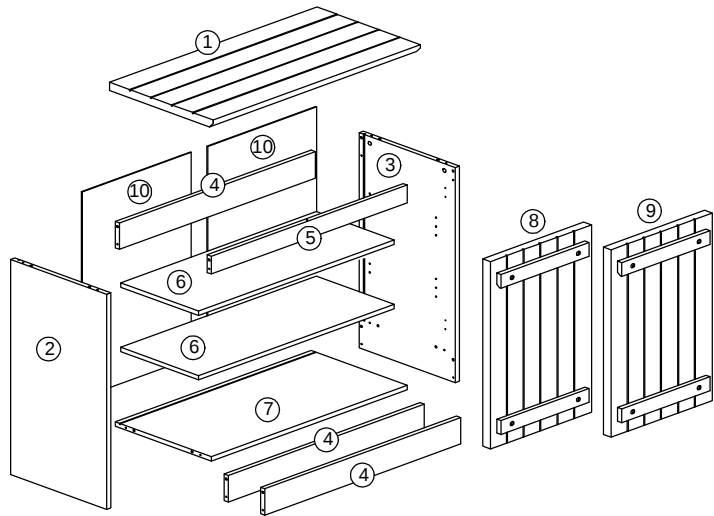


STEP 1

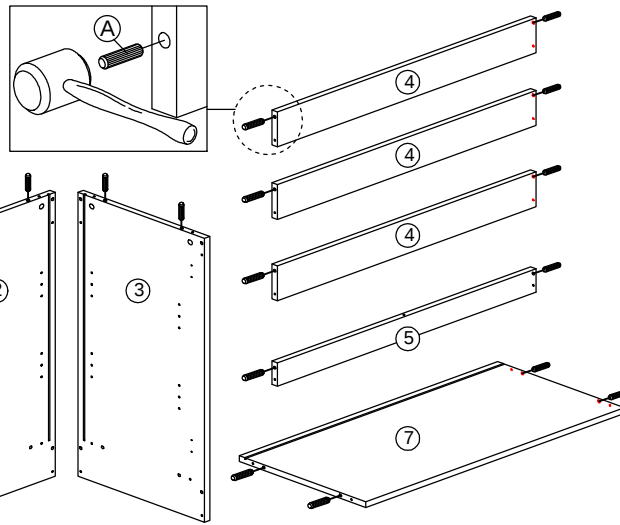


STEP 2

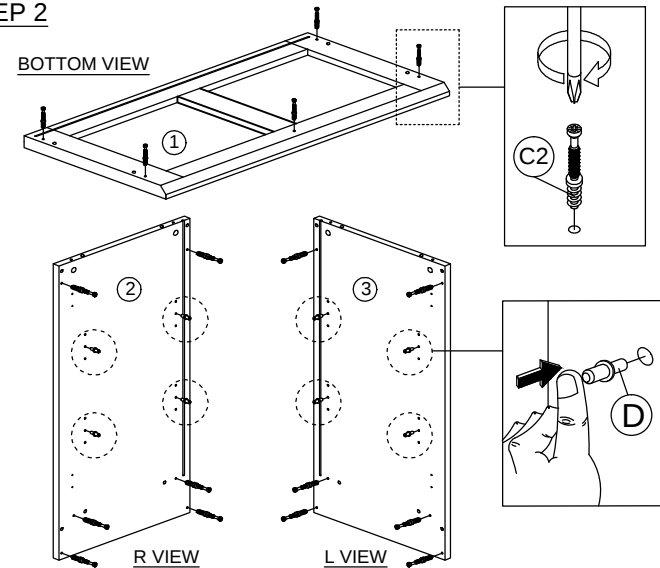


STEP 3


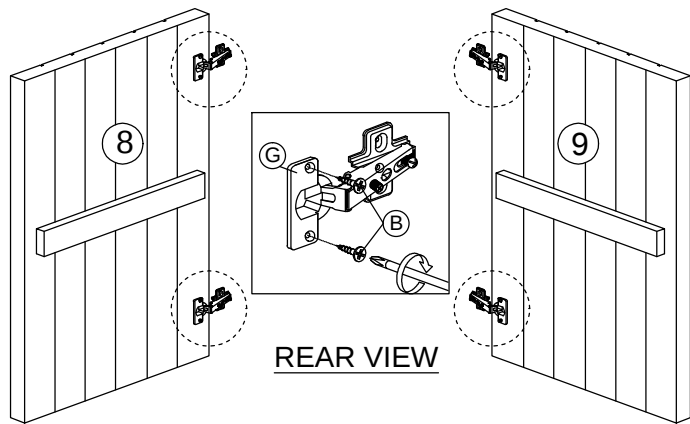


STEP 4

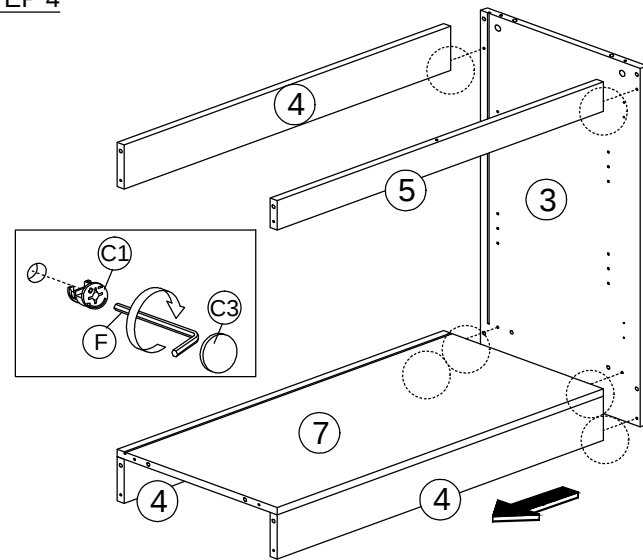

STEP 5

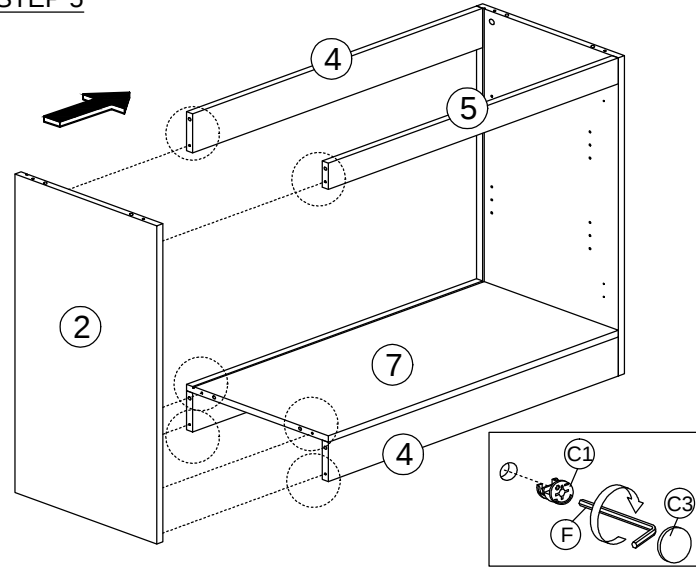




ASSEMBLY INSTRUCTION


MODEL : PL-SC 8040

DESCRIPTION : 2 DOOR SHOE CABINET


STEP 6

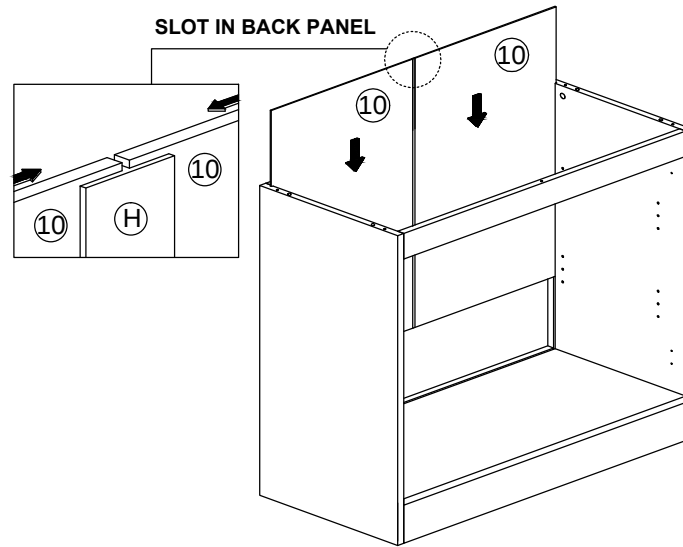


STEP 7

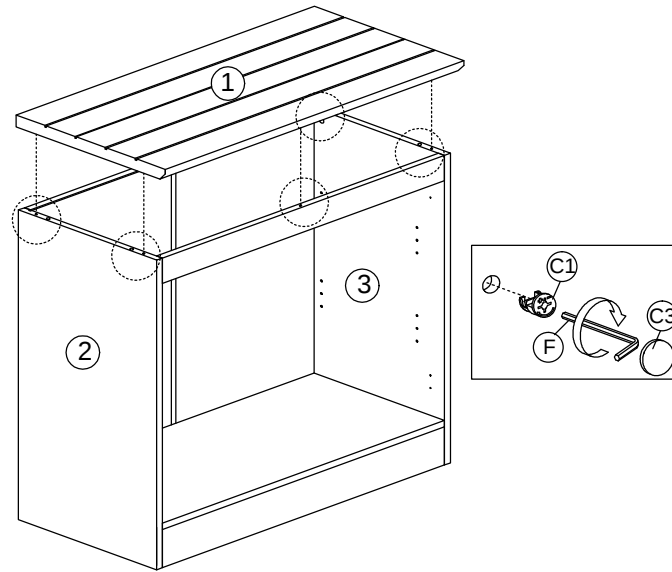


STEP 8

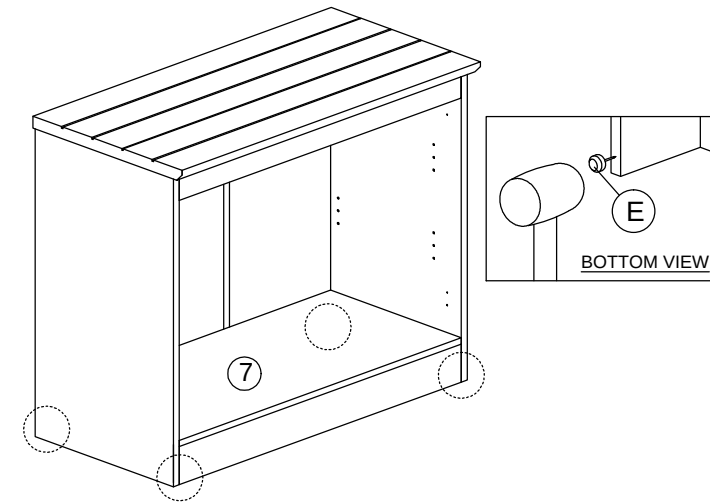


STEP 9

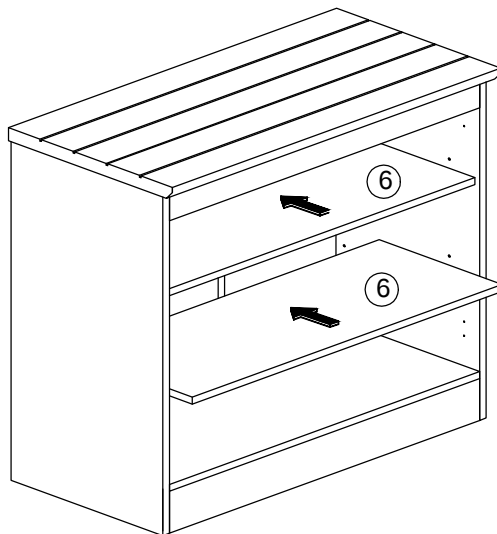

STEP 10

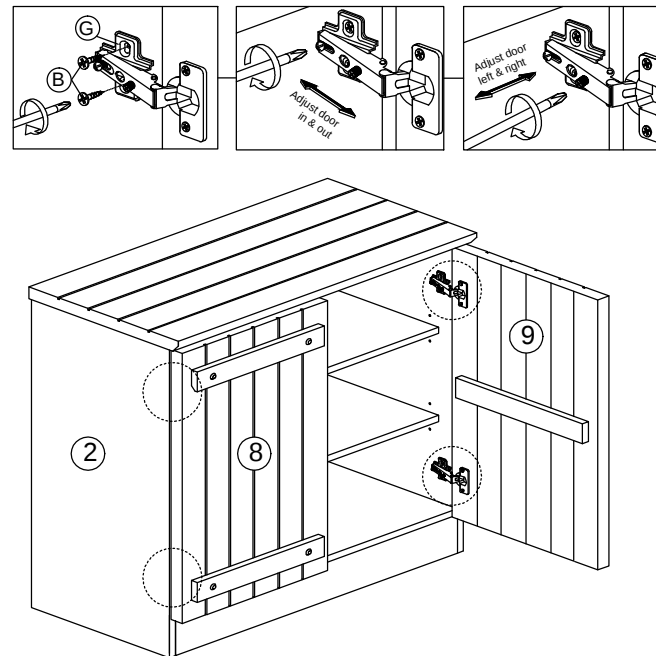

COMPLETED

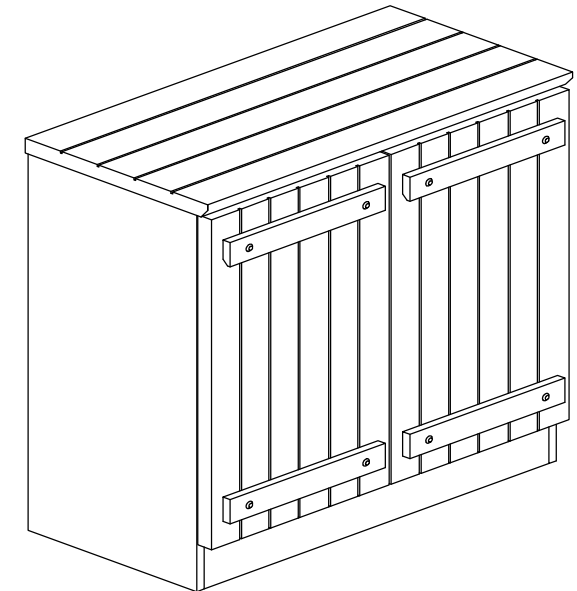




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

ASSEMBLY INSTRUCTION

MODEL : PL-SC 8040

DESCRIPTION : 2 DOOR SHOE CABINET

ANTI STOPPER


V



WASHER

X4


W



SAFETY STRAP

X2

X

PLASTIC WALL
ANCHOR-RED


X2

Y

CB SCREW
M3.5X16MM


X2

Z


CB SCREW
M4X38MM

X2



1.

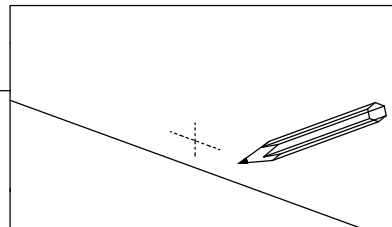


2.

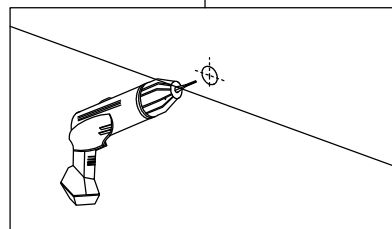




3.

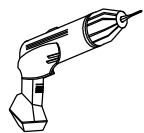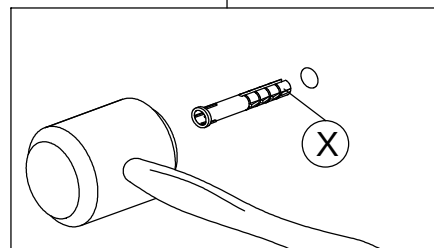

4.

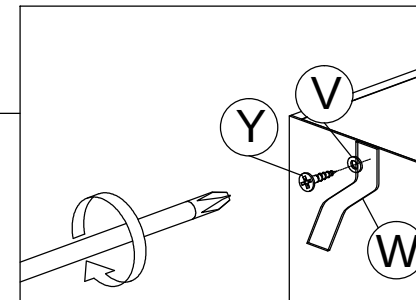

5.

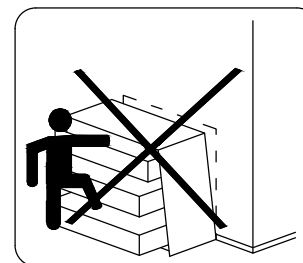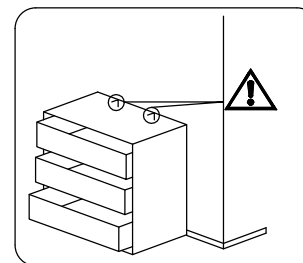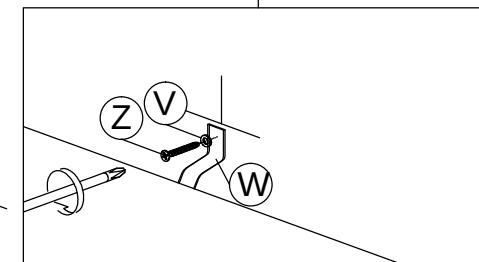

⚠ WARNING

Serious of fatal crushing injuries can occur from furniture tipover. To help prevent tip-over:

- Install tip over restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy object on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.
(OR)
- Do not defeat or remove the drawer interlock system.

Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.

This is a permanent label. Do not remove.