

97033 Twin Headboard


Assembly Instructions

WII-0720


1 Parts List



A Headboard Panel **x 1**

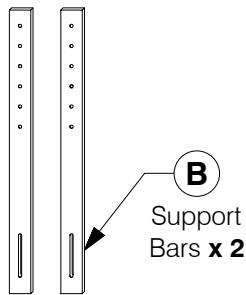

B Support Bars **x 2**

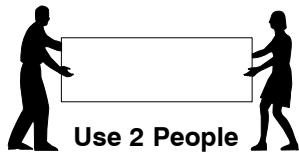

Use 2 People



Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List



1 M6 x 35mm JCB **x 10**



2 Spring Washer **x 10**





3 Flat Washer **x 10**





4 Allen Key **x 1**

3 Assemble the Support Bars (B) to the Headboard Panel.

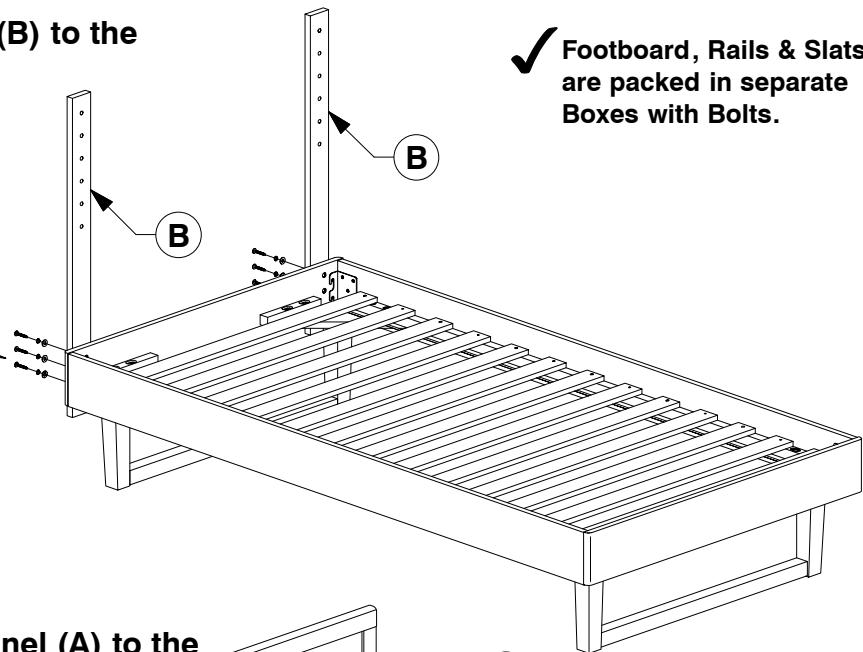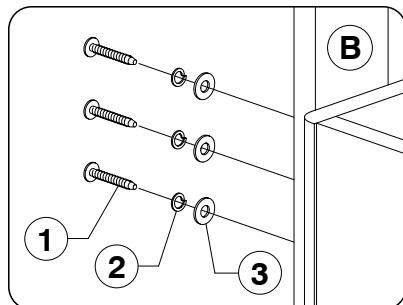

4 Assemble the Headboard Panel (A) to the Support Bars (B).

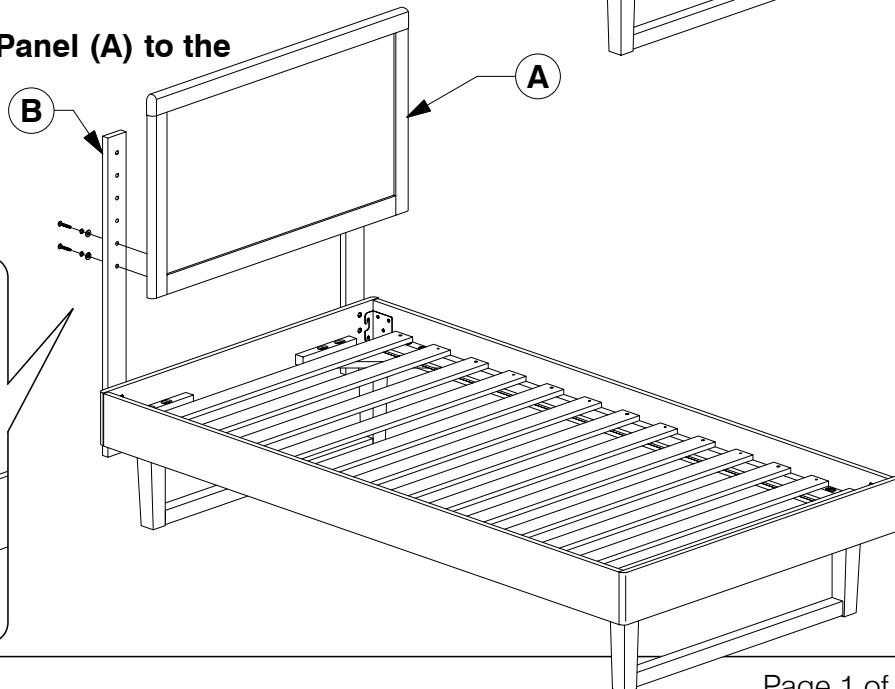
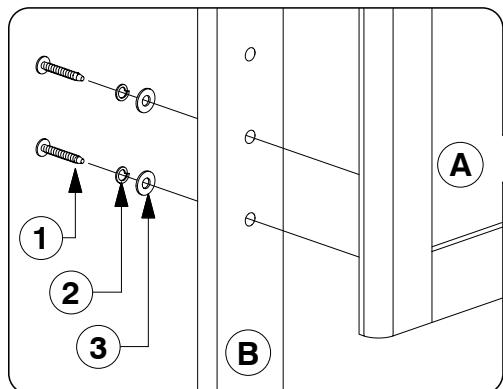


97151 Twin Bed

Assembly Instructions


WII-0720

1 Assembled View

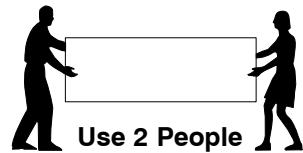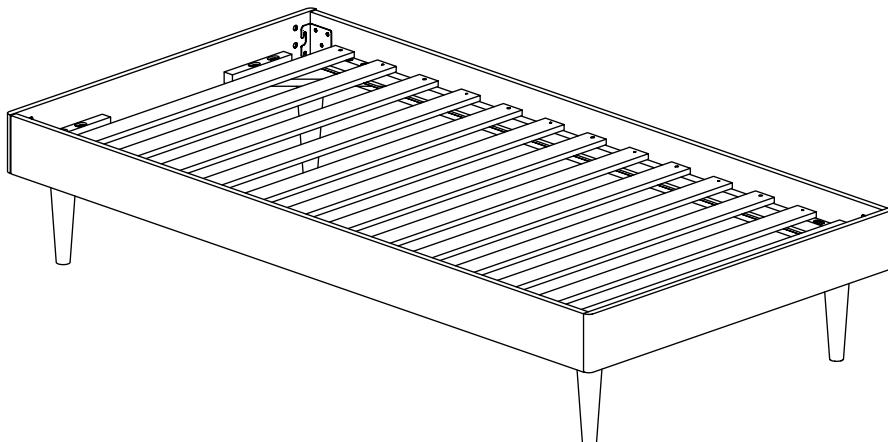

Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

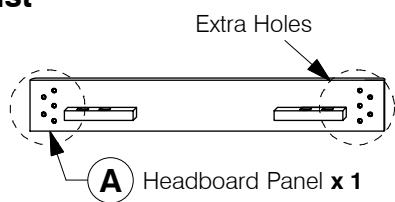

A Headboard Panel **x 1**




D
Post
x 4




E
Support Panel
x 4



B Footboard Panel **x 1**

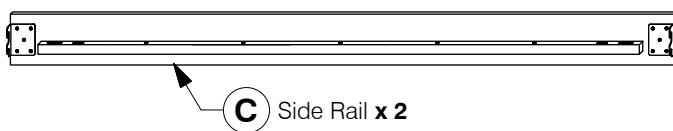

C Side Rail **x 2**

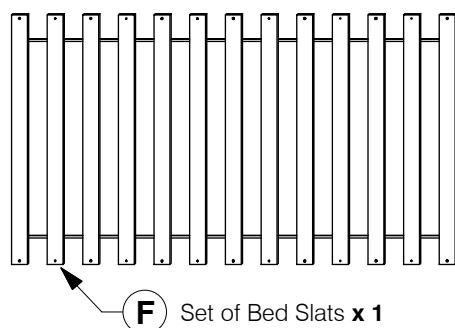

F Set of Bed Slats **x 1**

3 Hardware List




1 M6 x
50mm JCB
x 16



2 M6 x
40mm JCB
x 14



3 M6 x
20mm JCB
x 8



4 M8 x
50mm JCB
x 8



5 Spring
Washer
x 24



6 Flat Washer
x 24



7 Wood Screw
(M4 x 32mm) **x 12**



8 M4 Allen Key
x 1



9 M5 Allen Key
x 1


97151 Twin Bed

Assembly Instructions

WII-0720


4 Fit the Post (D) to the Support Panel (E).

x4

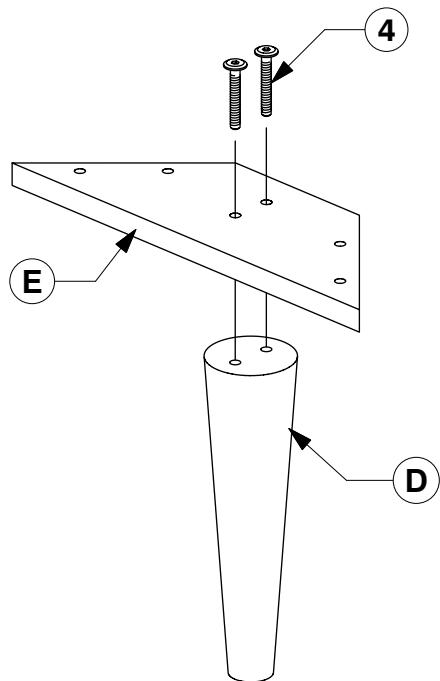

5 Bolt the Post & Support Panel (D & E) to the Side Rail (C).

x2

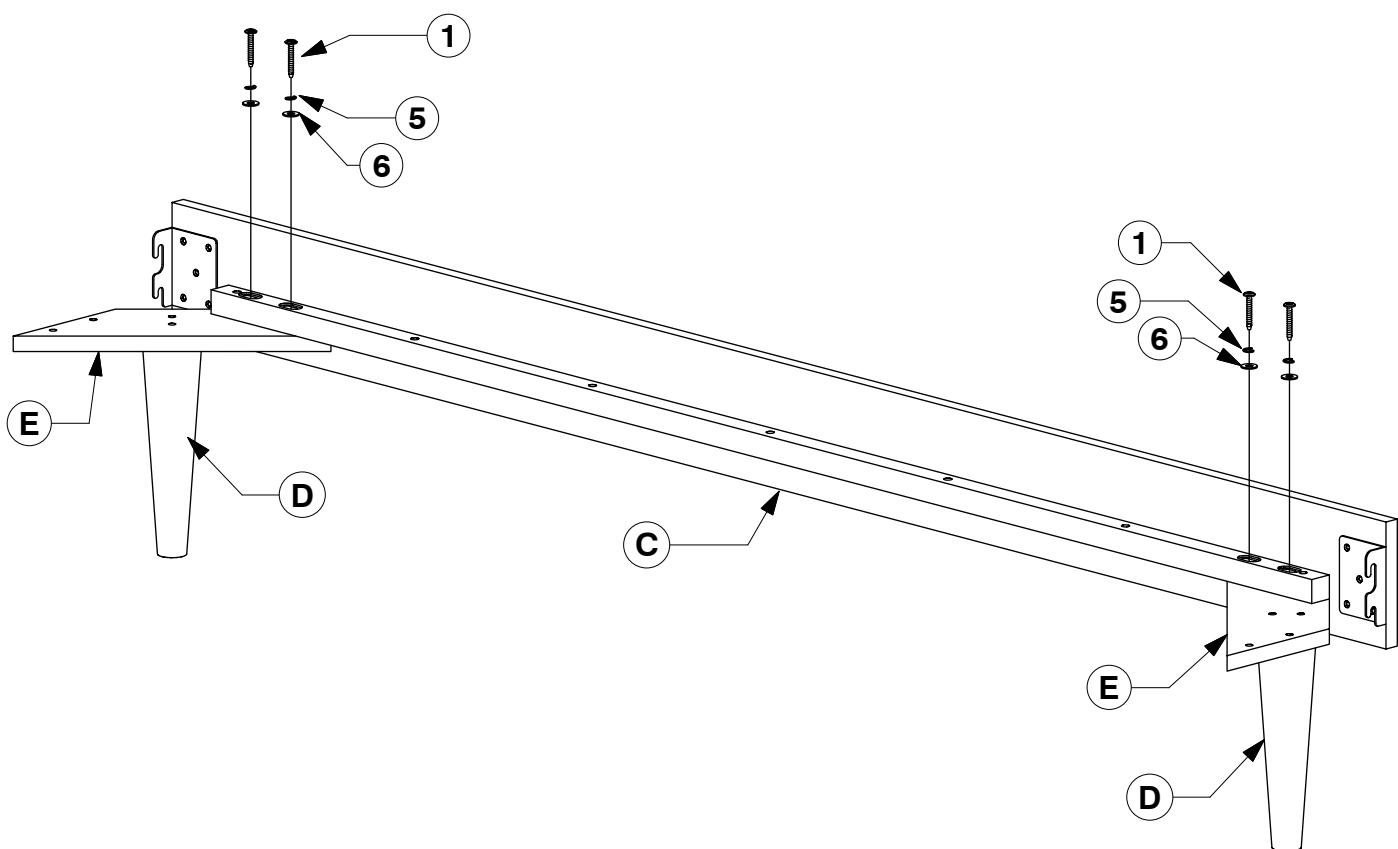


97151 Twin Bed


Assembly Instructions

WII-0720

6 Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

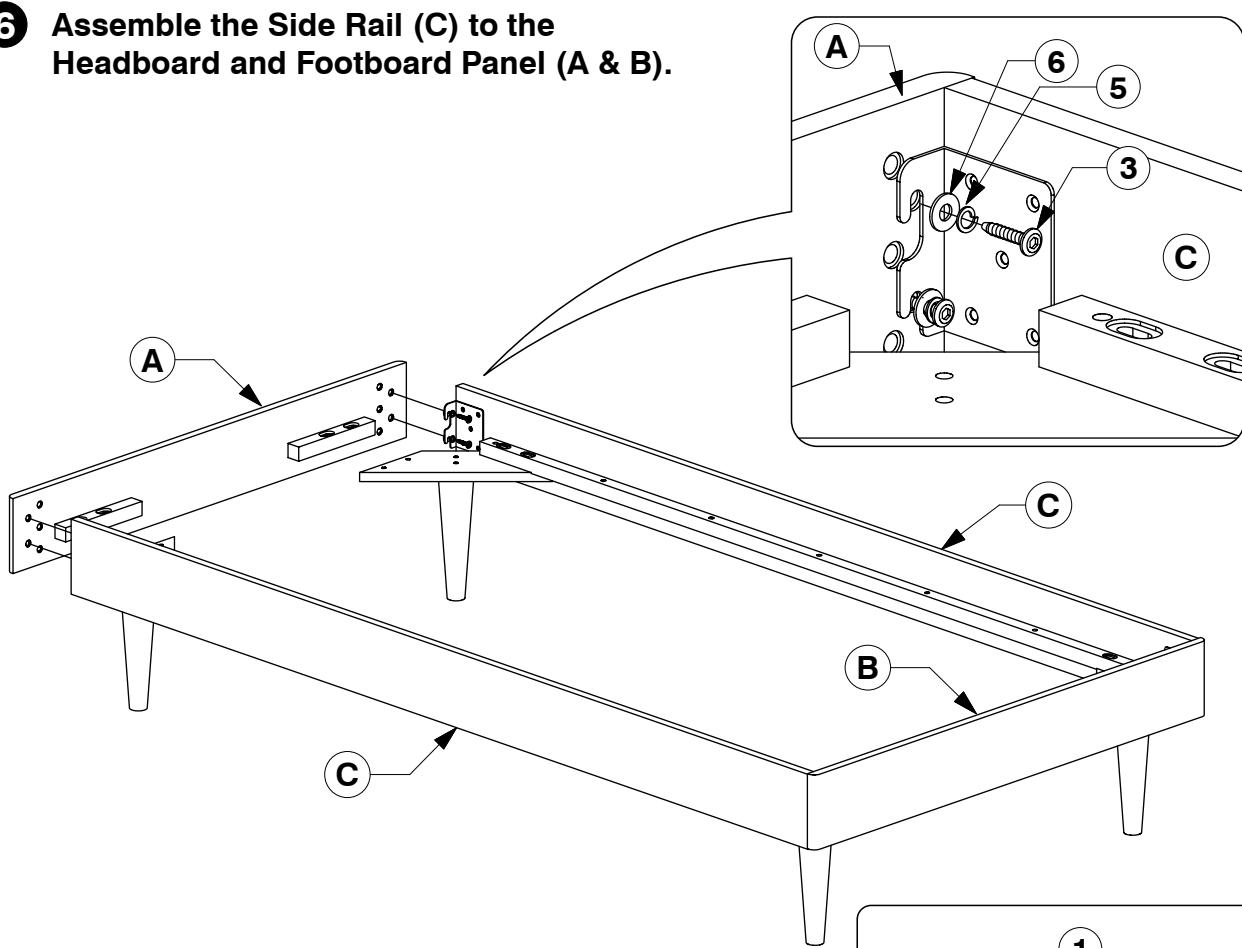

7 Bolt the assembled Support Panel (E) to the Headboard and Footboard Panel (A & B).

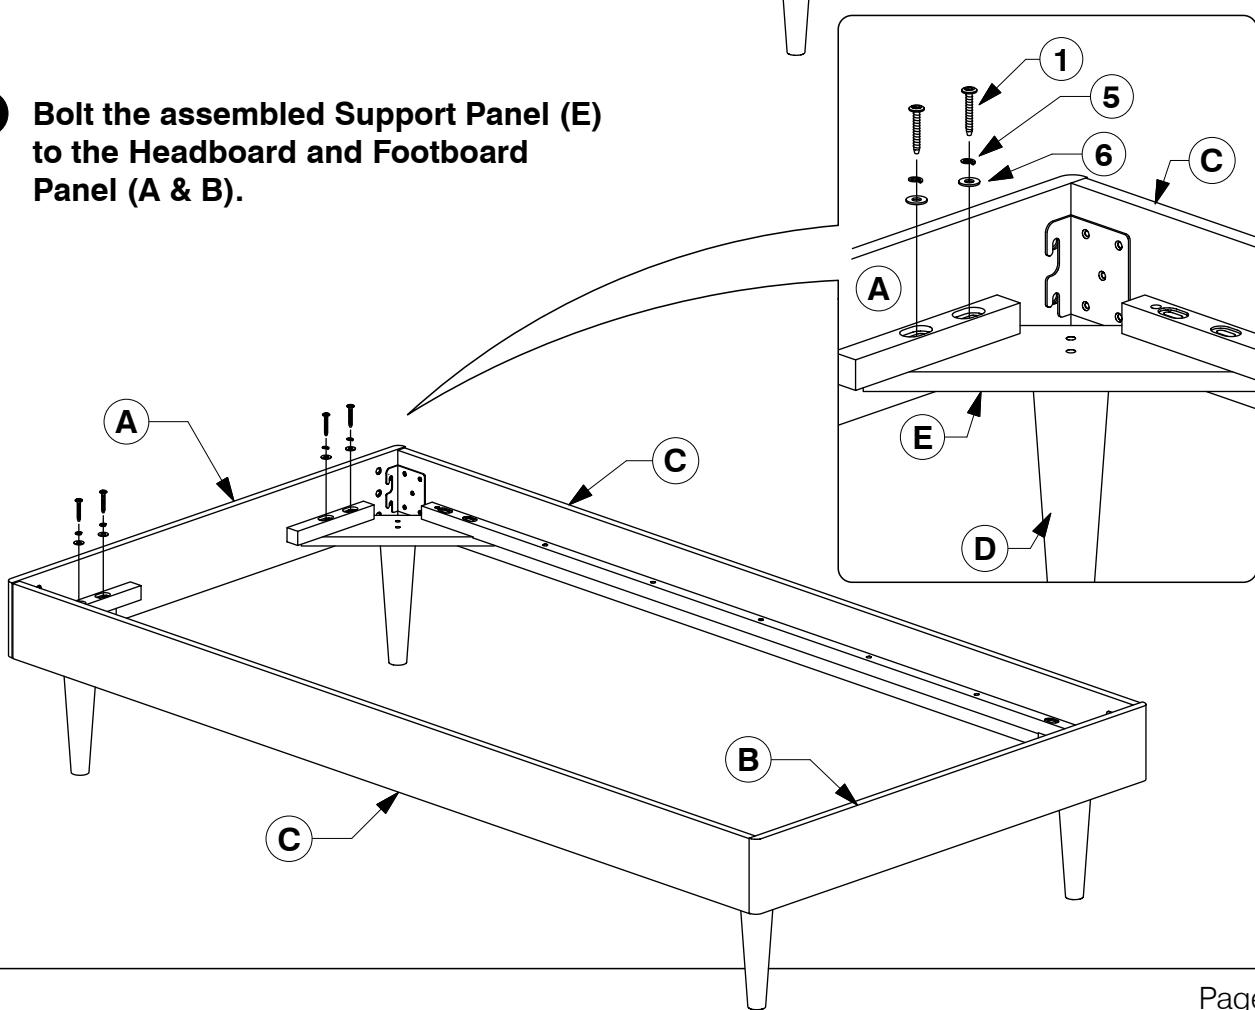


97151 Twin Bed


Assembly Instructions

WII-0720

8 Bolt the Bed Slats (F) to the Side Rail (C).

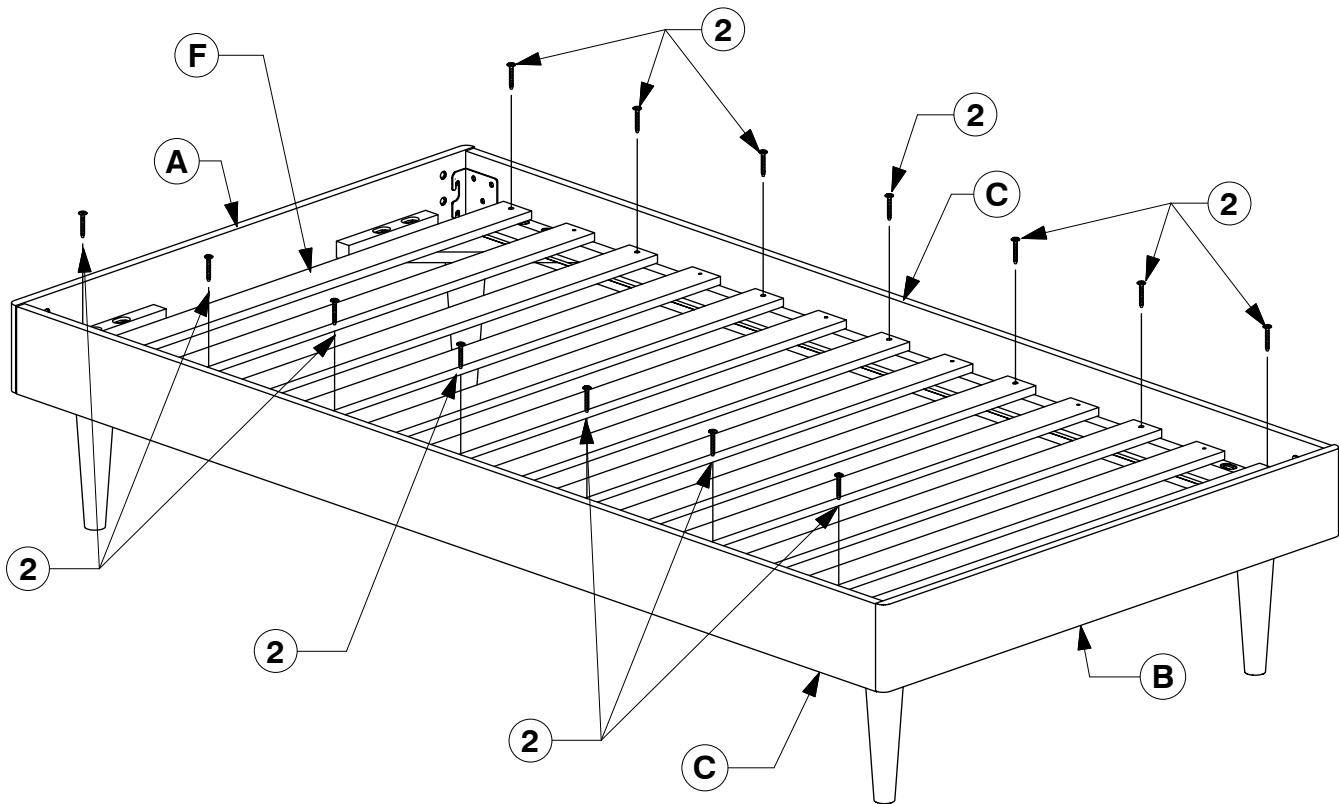

9 Screw the Bed Slats (F) to the Side Rail (C).


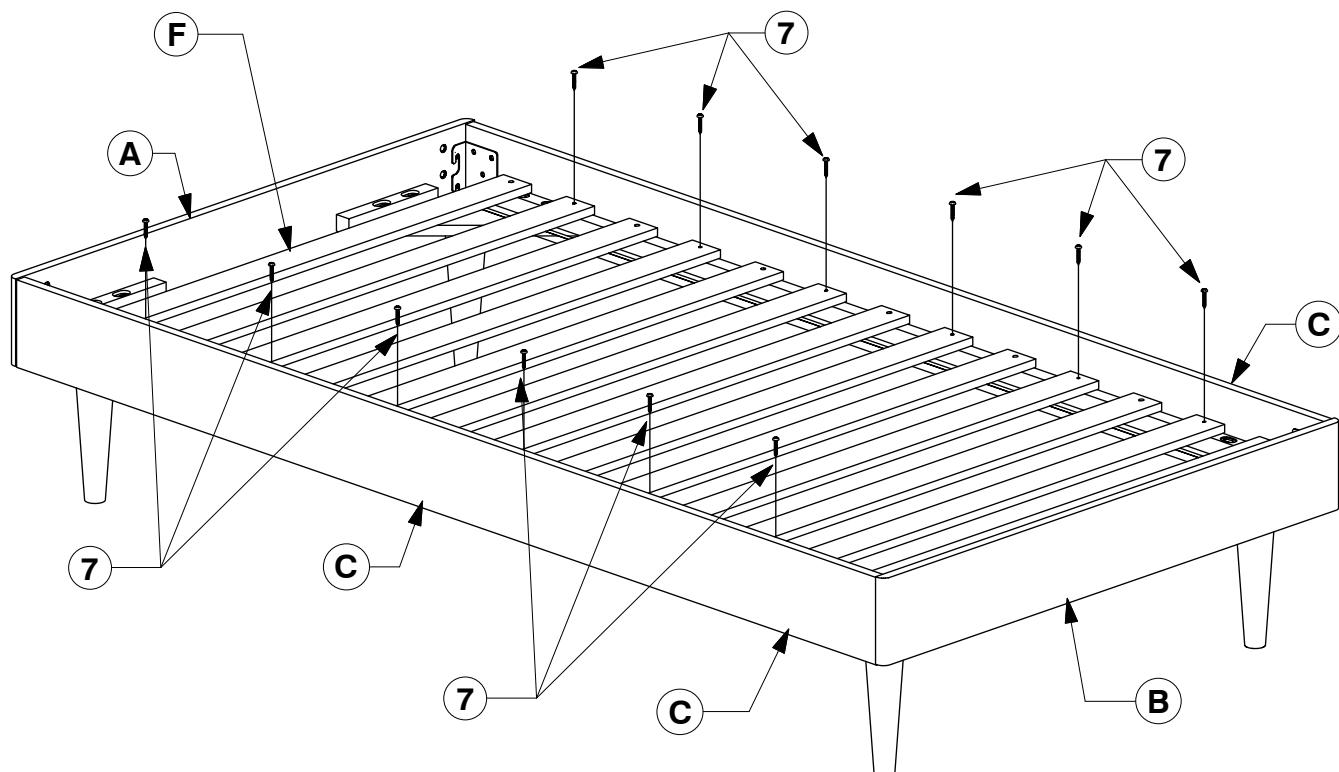


9704 Twin Bed

Assembly Instructions

WII-0720

1 Assembled View

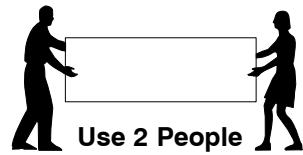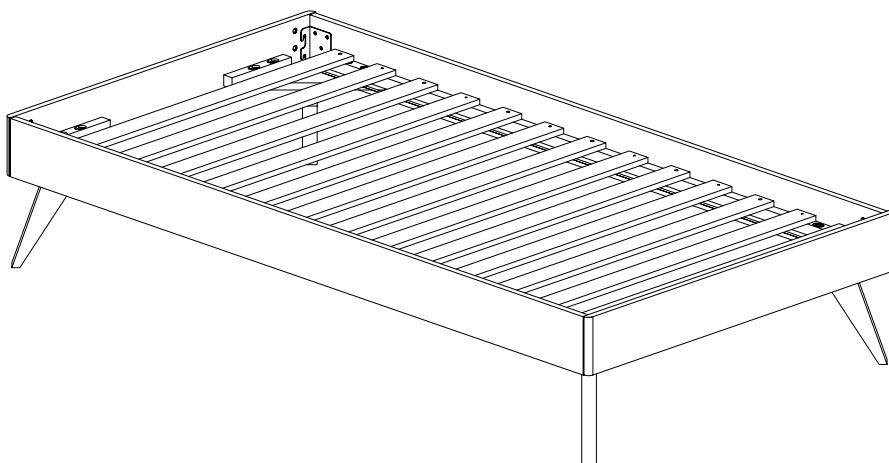


Use 2 People



Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

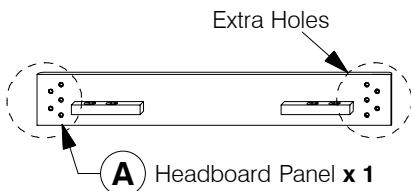


A Headboard Panel **x 1**




D Post **x 4**




E Support Panel **x 4**

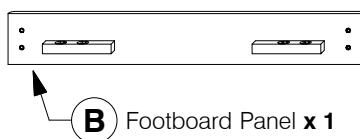

B Footboard Panel **x 1**

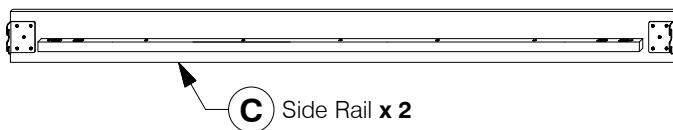

C Side Rail **x 2**

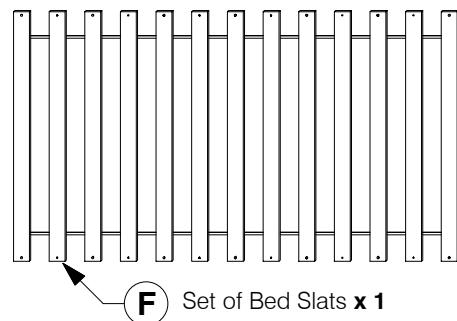

F Set of Bed Slats **x 1**

3 Hardware List




1 M6 x 50mm JCB **x 16**



2 M6 x 40mm JCB **x 14**



3 M6 x 20mm JCB **x 8**



4 M8 x 50mm JCB **x 8**



5 Spring Washer **x 24**



6 Flat Washer **x 24**



7 Wood Screw (M4 x 32mm) **x 12**



8 M4 Allen Key **x 1**



9 M5 Allen Key **x 1**


9704 Twin Bed

Assembly Instructions

WII-0720


4 Fit the Post (D) to the Support Panel (E).

x4

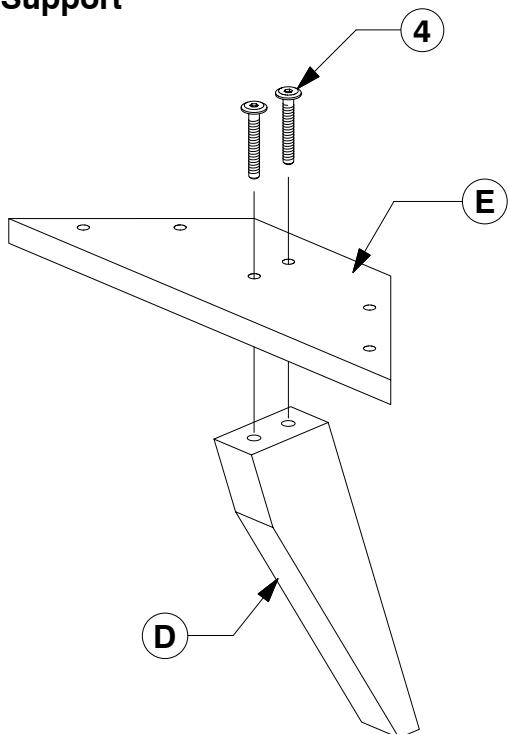

5 Bolt the Post & Support Panel (D & E) to the Side Rail (C).

x2

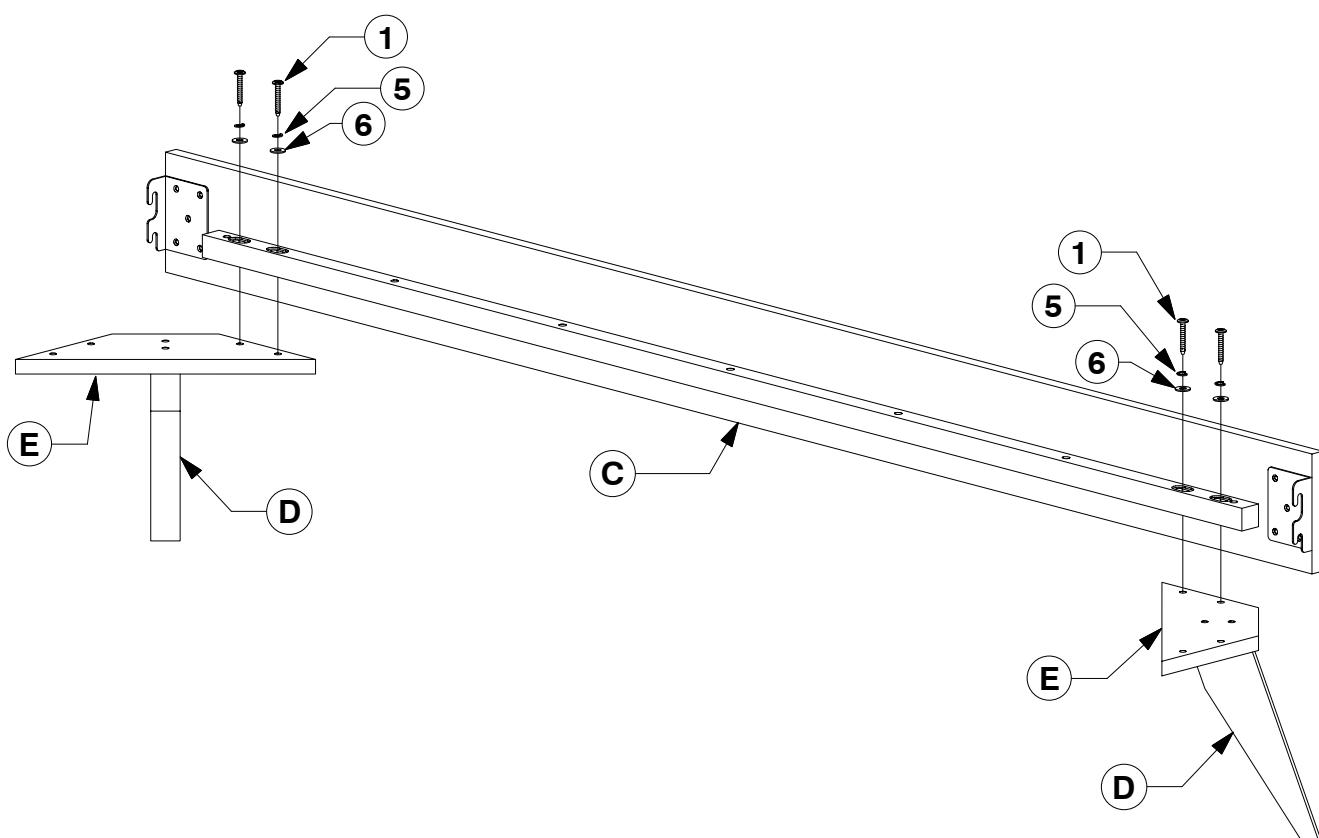


9704 Twin Bed


Assembly Instructions

WII-0720

6 Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

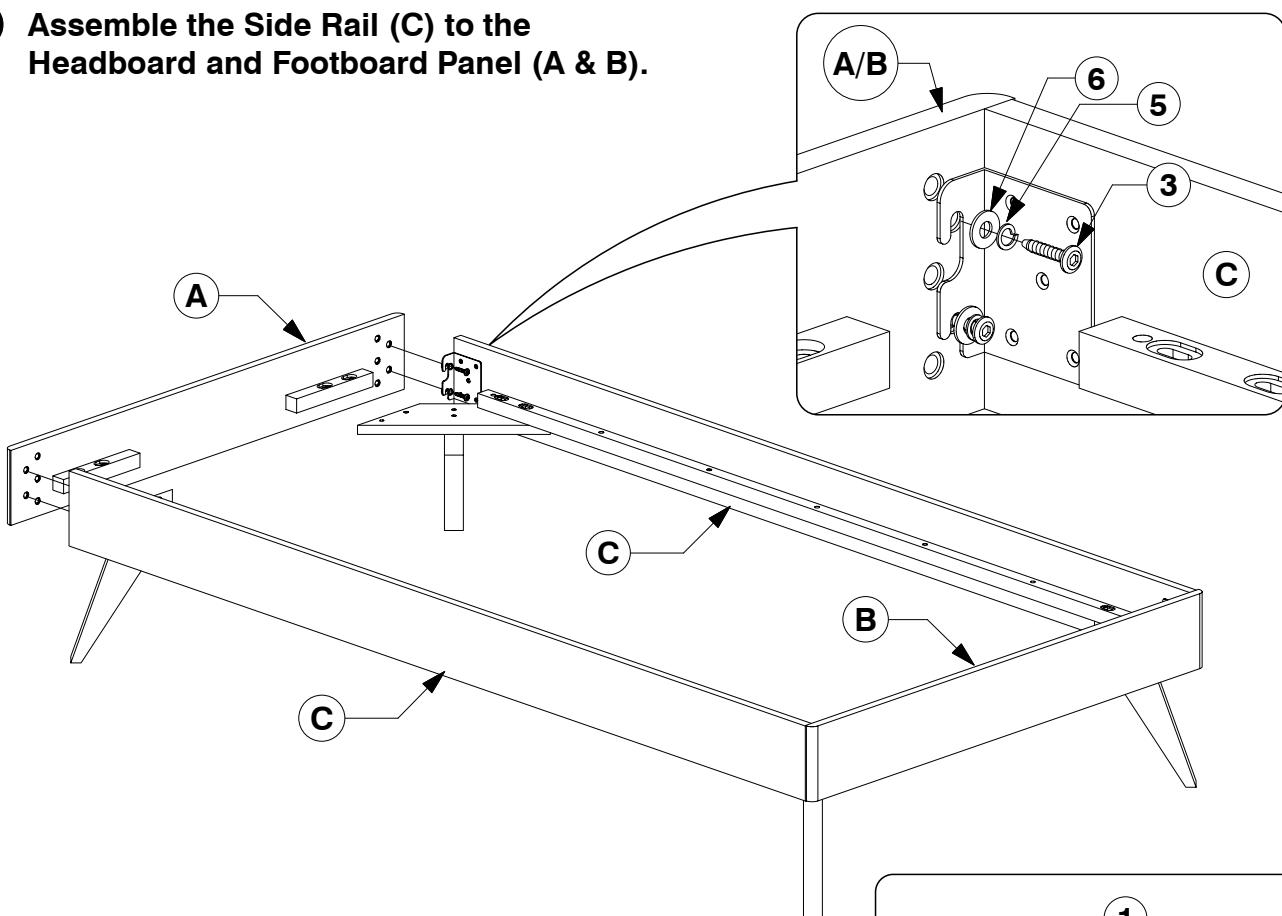

7 Bolt the assembled Support Panel (E) to the Headboard and Footboard Panel (A & B).

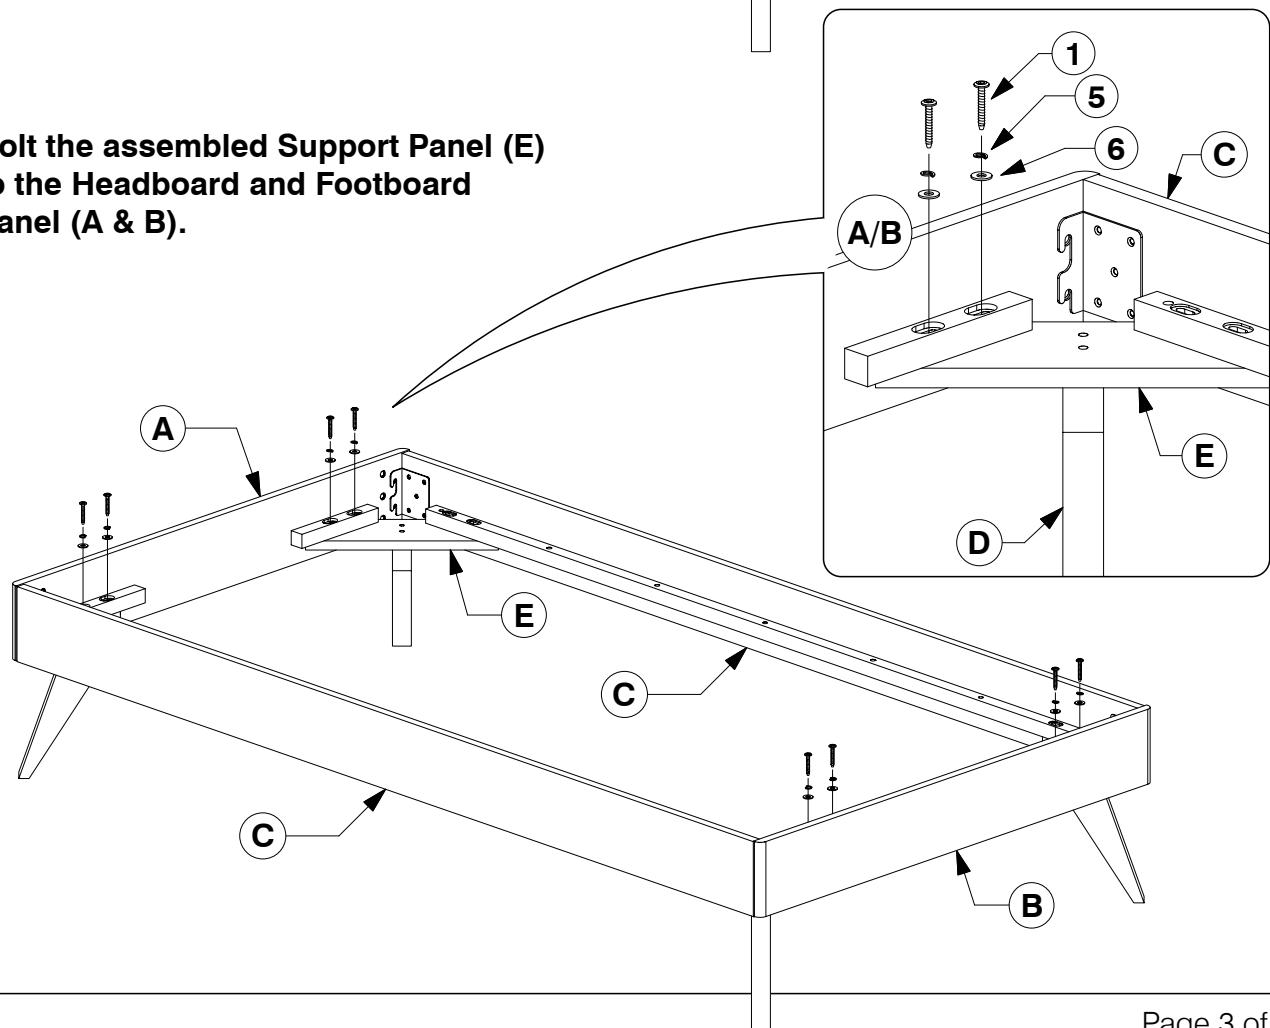


9704 Twin Bed

Assembly Instructions

WII-0720

- 8 Bolt the Bed Slats (F) to the Side Rail (C).

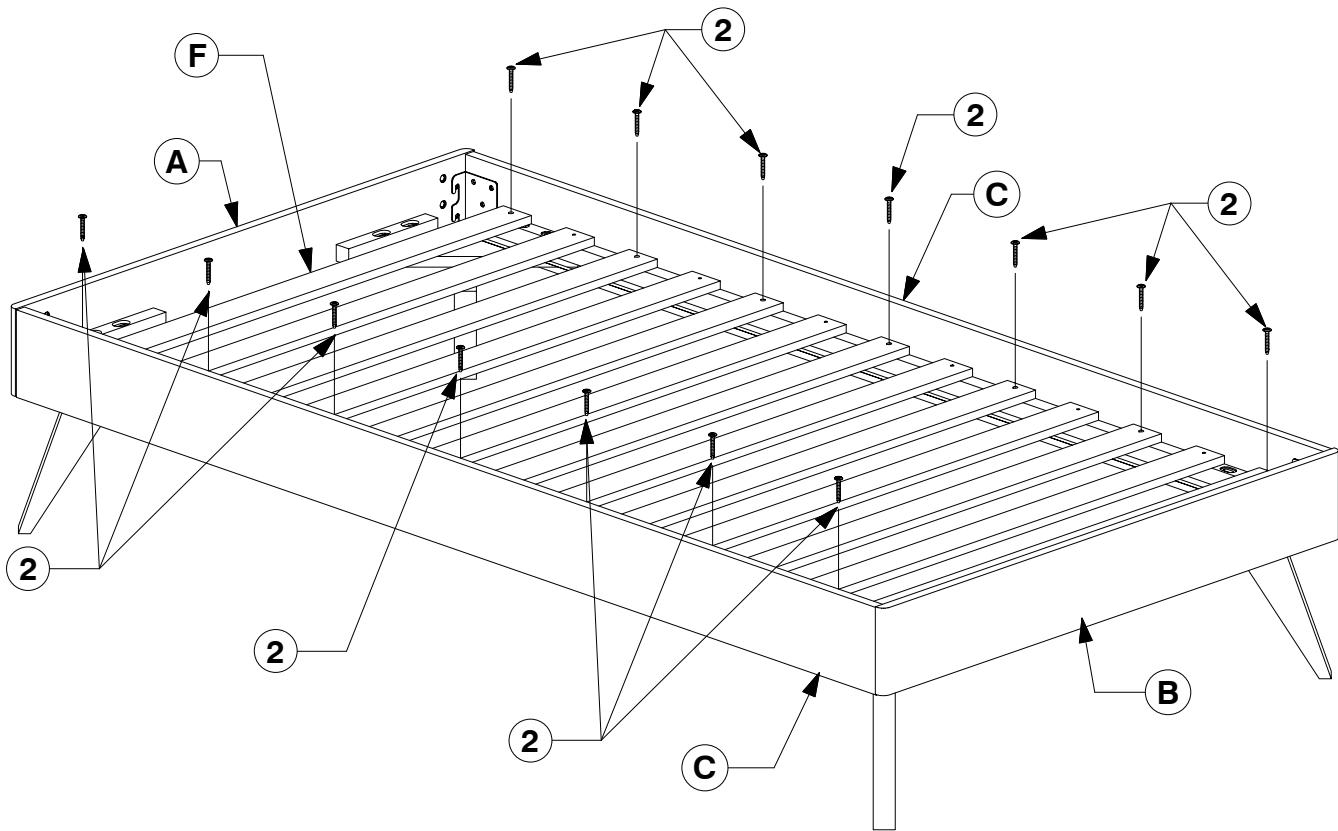

- 9 Screw the Bed Slats (F) to the Side Rail (C).

