
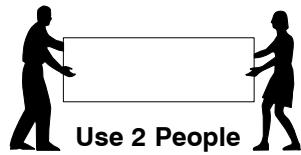


# 0067 Full Bed

## Assembly Instructions

WI-1220


### 1 Assembled View

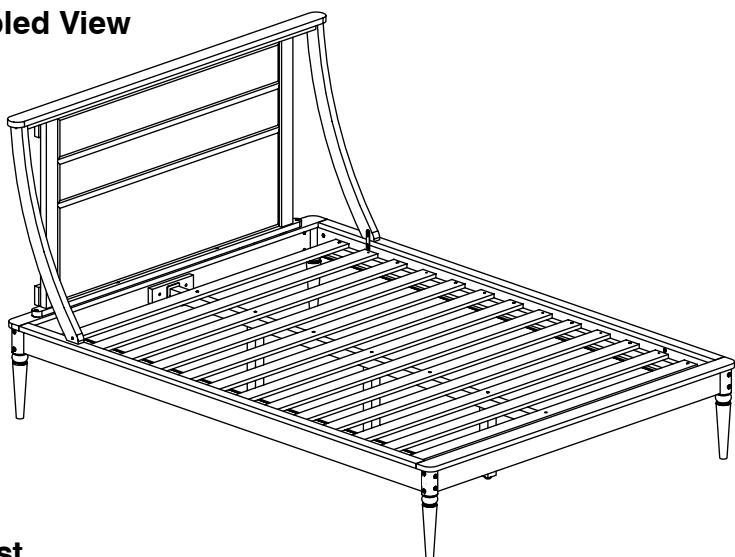


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List

#### Parts in Box A:




**A** Headboard Top **x 1**

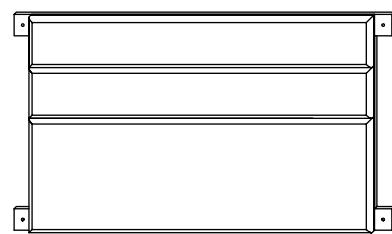

**D**  
Headboard Frame  
**x 1**




**C** Headboard Bottom Rail **x 1**

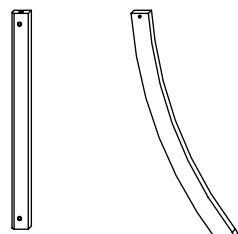


**E** Headboard Support **x 2**      **F** Headboard Side Bar **x 2**


#### Parts in Box B:

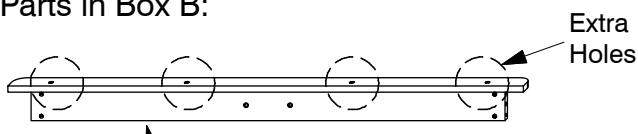

**G** Headboard Panel **x 1**



**L** Head / Footboard Support **x 2**



**H** Footboard Panel **x 1**



**M** Post  
(Left Hand) **x 2**



**N** Post  
(Right Hand) **x 2**




**O** Support Leg **x 3**



**J** Side Rail **x 2**



**K** Long Support **x 1**

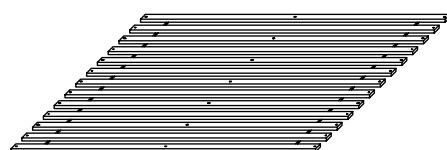


**P** Set of Bed Slats **x 1**

# 0067 Full Bed


## Assembly Instructions

WI-1220


### 3 Hardware List

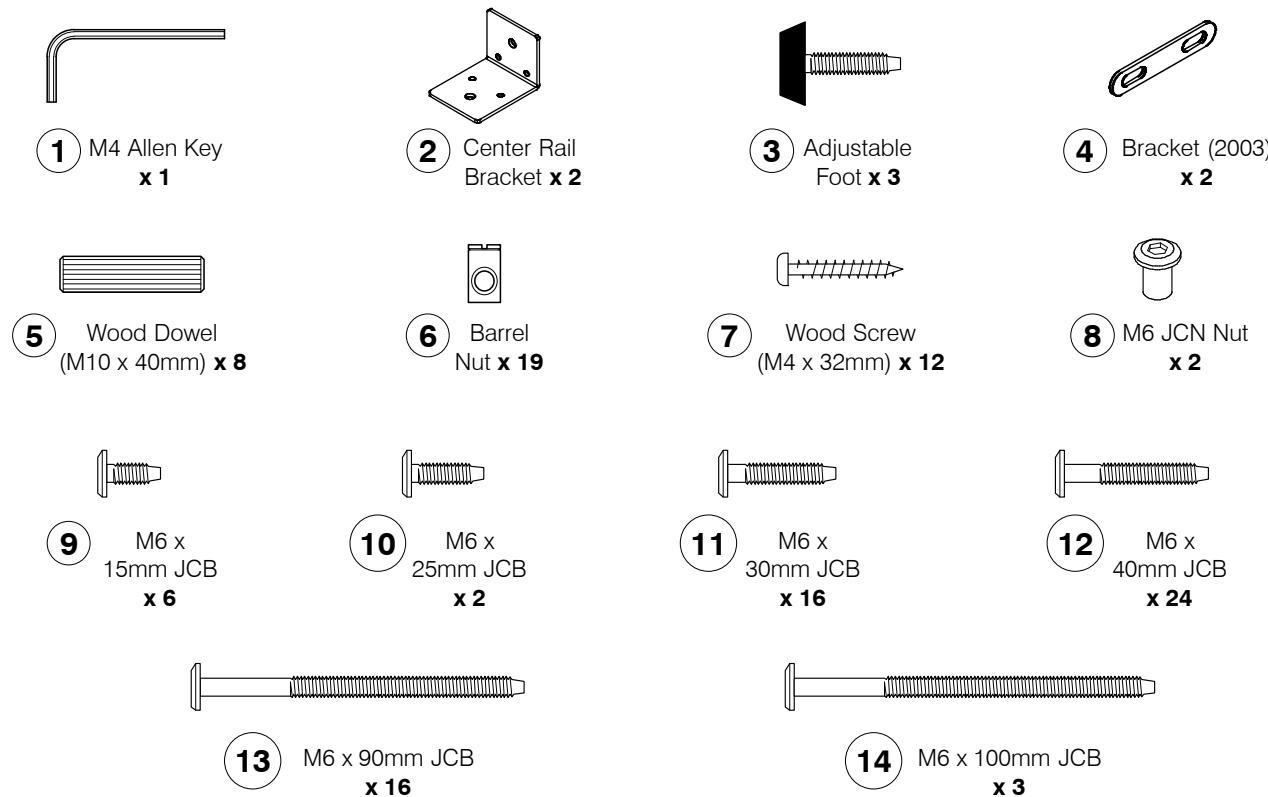

### 4 Fix the Adjustable foot to the bottom of the Support Leg (O).

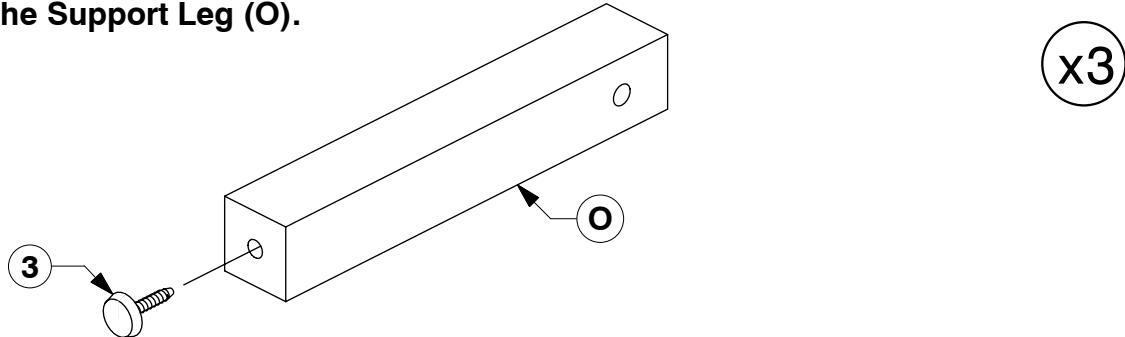

### 5 Fit the Center Rail Bracket to the Head / Footboard Support (L).

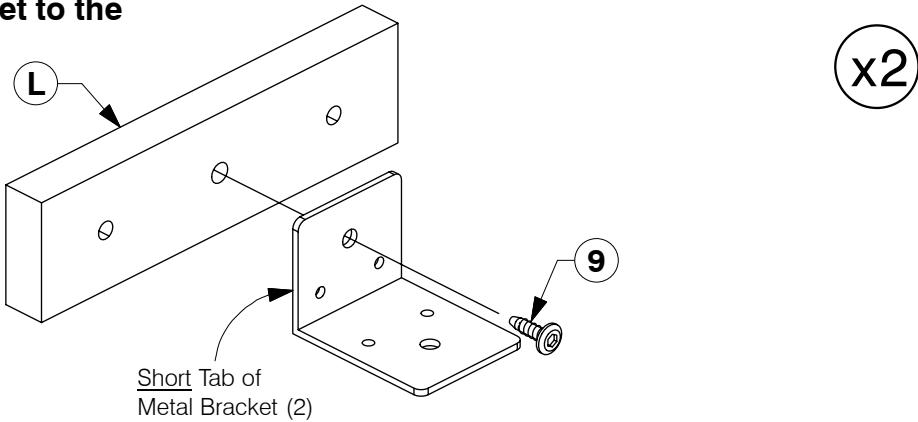


# 0067 Full Bed


## Assembly Instructions

WI-1220

**6** Assemble the Post (M & N) and Head / Footboard Support (L) to the Headboard Panel (G).

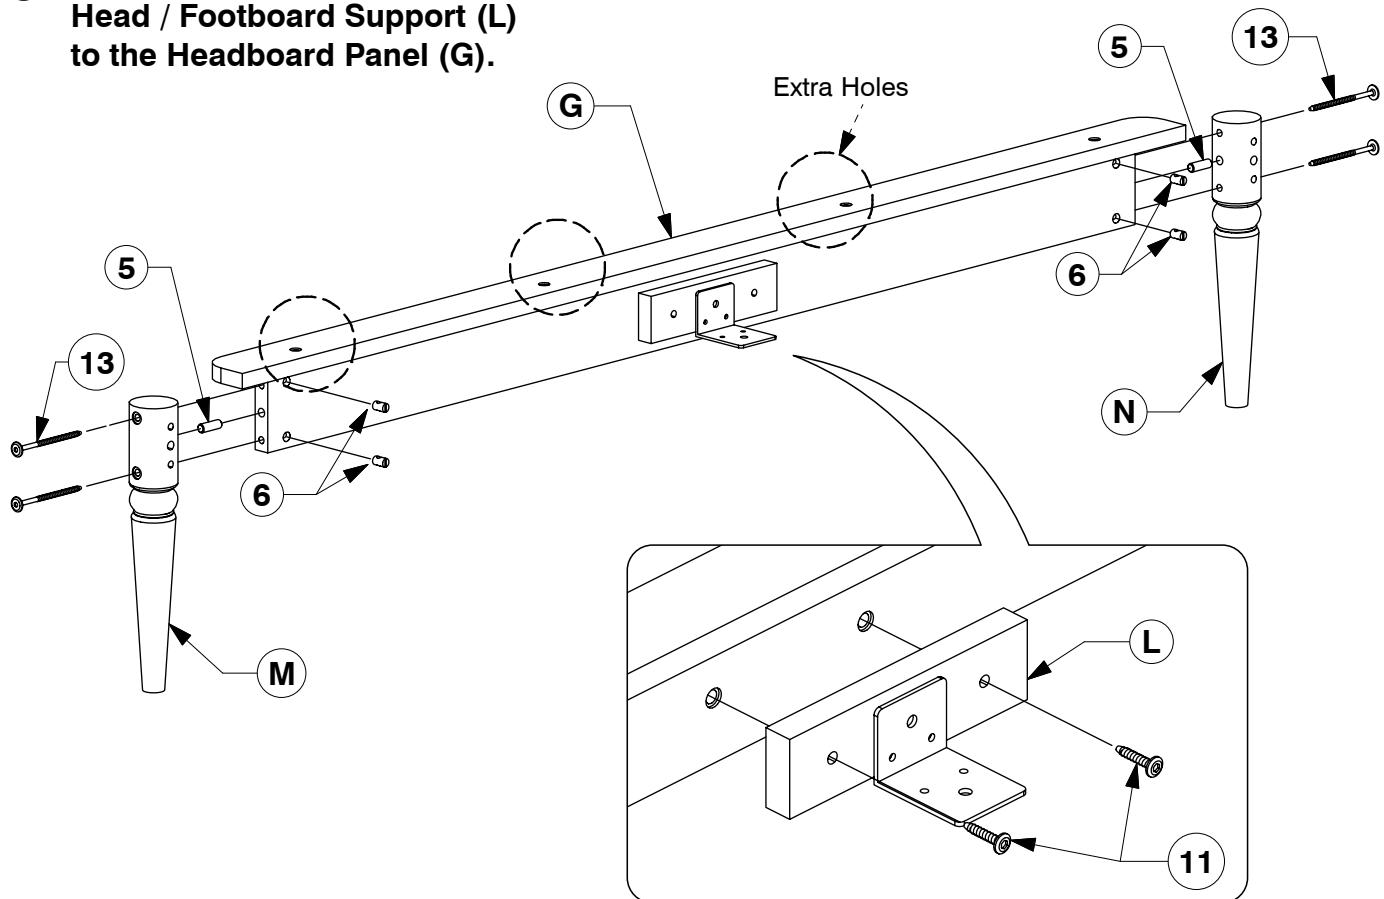

**7** Assemble the Post (M & N) and Head / Footboard Support (L) to the Footboard Panel (H).

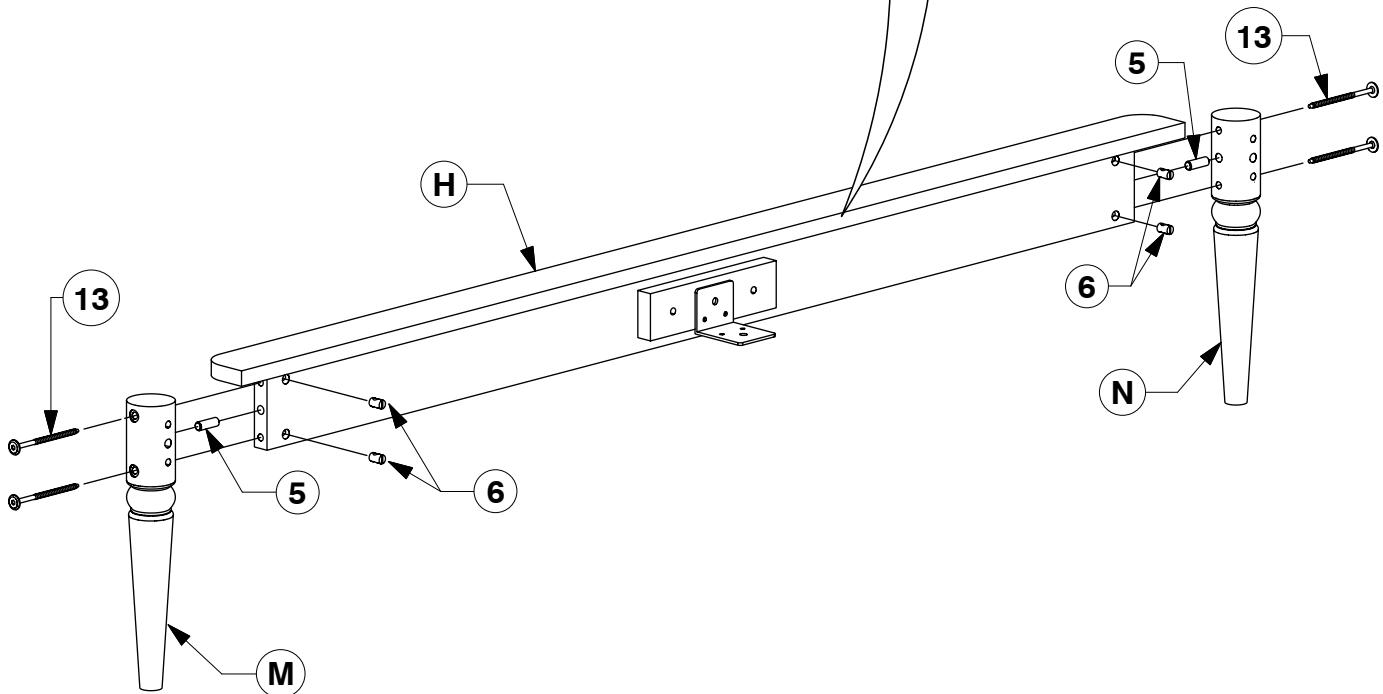


# 0067 Full Bed


## Assembly Instructions

WI-1220

**8** Assemble the Side Rail (J) to the Head & Footboard Panel (G & H).

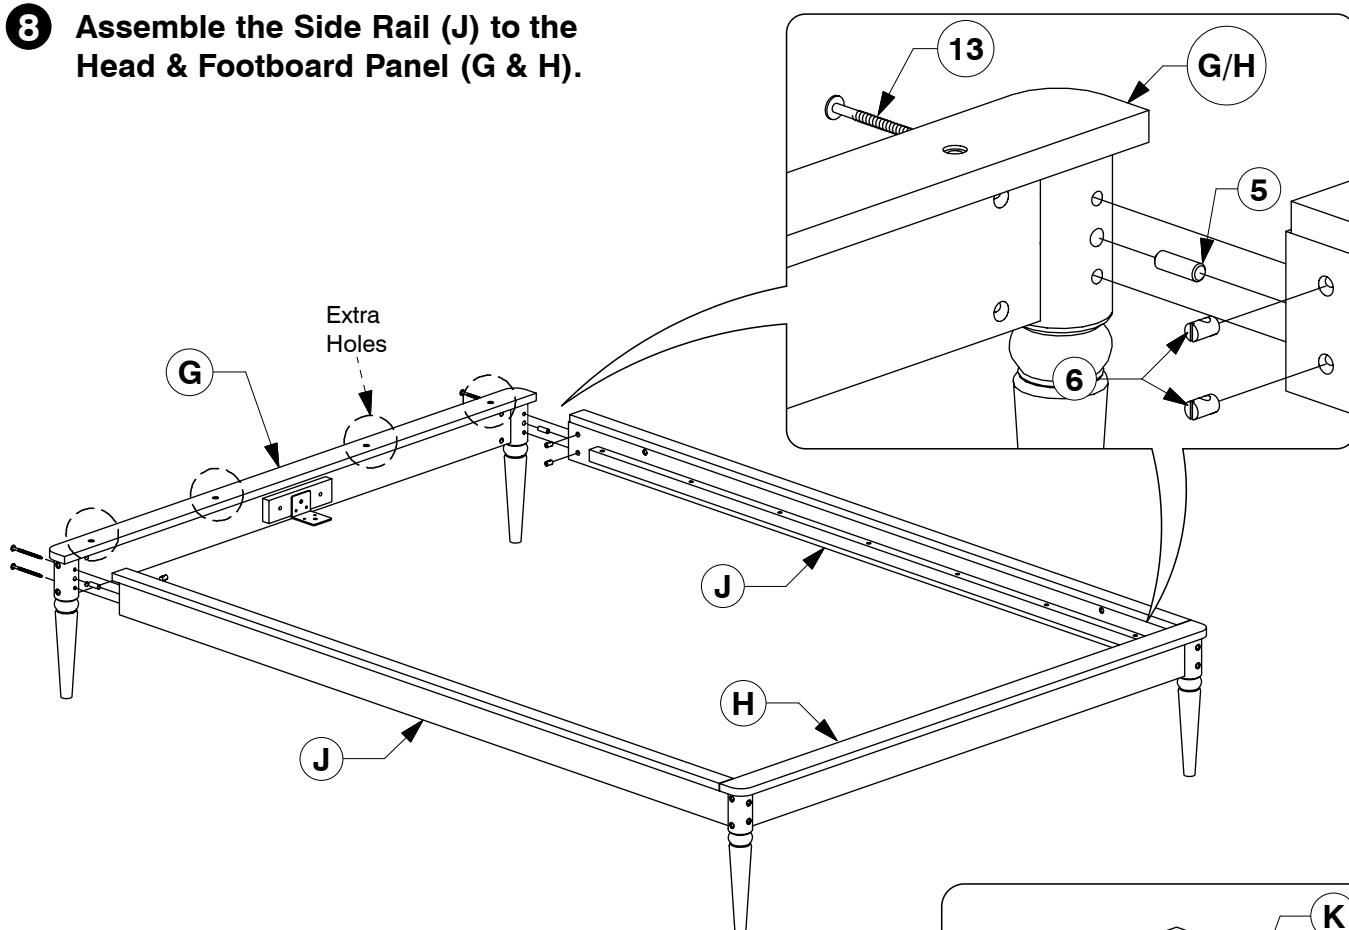

**9** Bolt the Long Support (K) to the Center Rail Brackets on the Head & Footboard Panel (G & H).

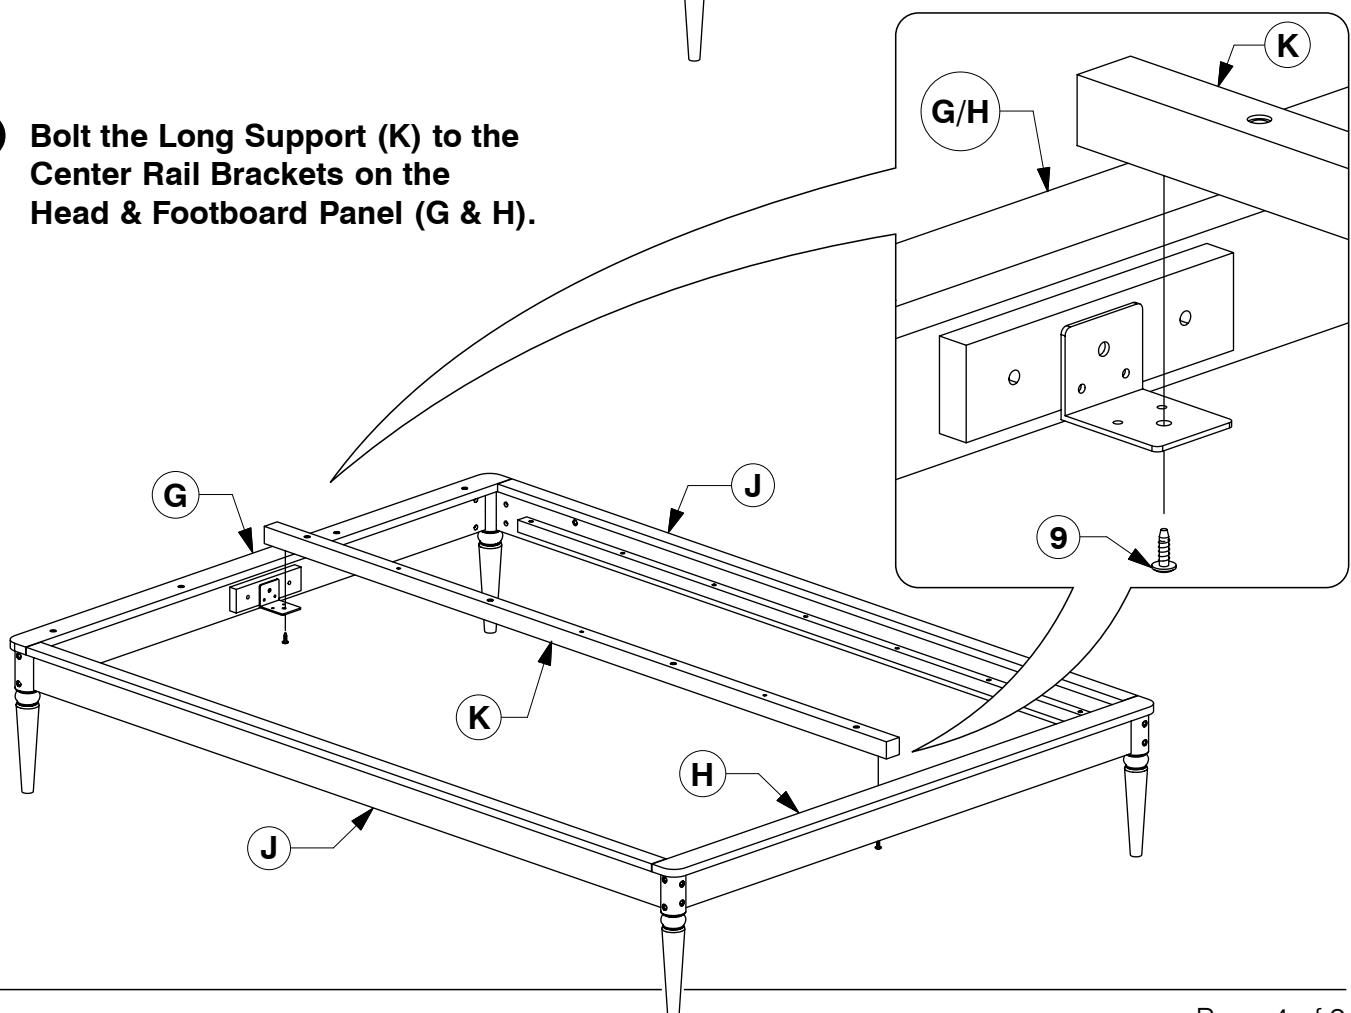


# 0067 Full Bed


## Assembly Instructions

WI-1220

**10** Fit the first 3 Slats and assemble the Support Leg (O) to the Bed Slat (P). Bolt & screw the Bed Slats (P) to the Side Rail (J) & Long Support (K).

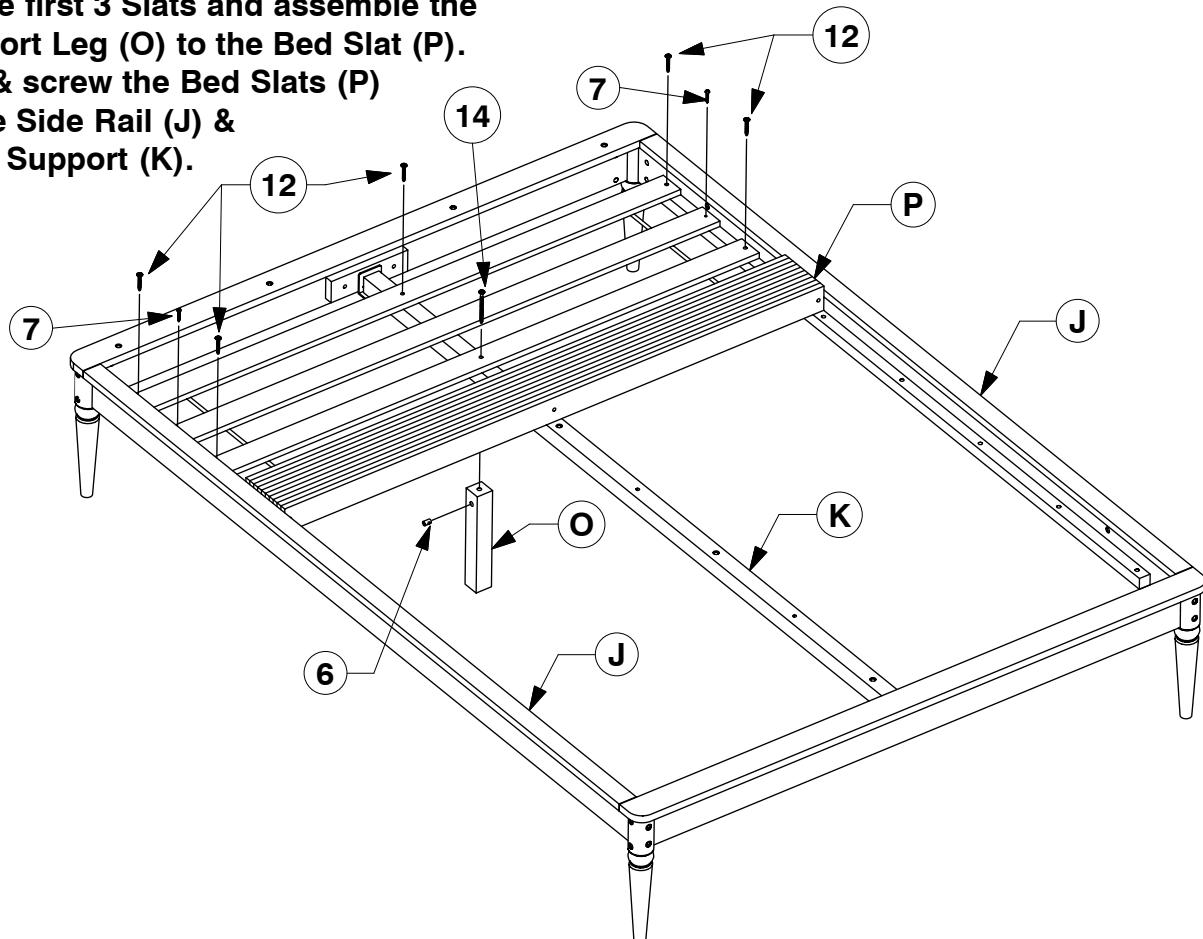

**11** Fit the other Slats out and assemble the Support Leg (O) to the Bed Slat (P). Bolt & screw the Bed Slats (P) to the Side Rail (J) & Long Support (K).

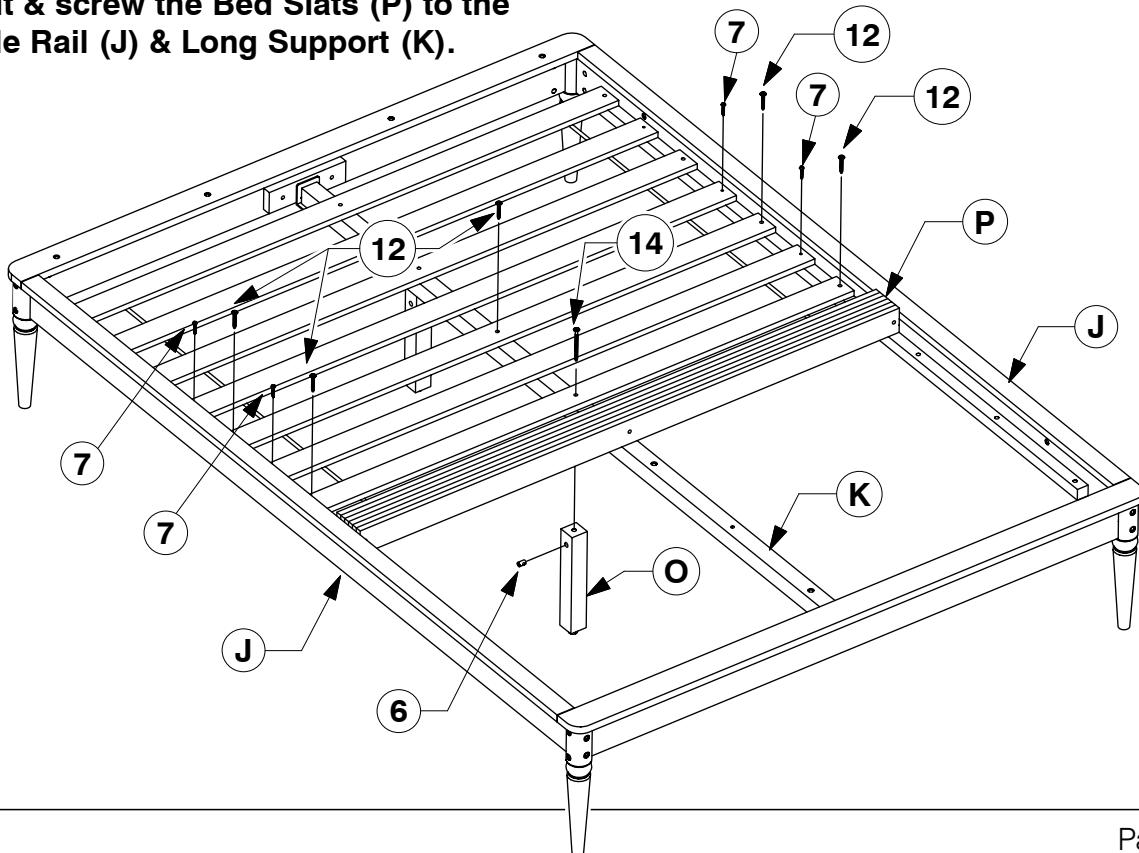


# 0067 Full Bed


## Assembly Instructions

WI-1220

**12** Fit the other Slats out and assemble the Support Leg (O) to the Bed Slat (P).  
Bolt & screw the Bed Slats (P) to the Side Rail (J) & Long Support (K).

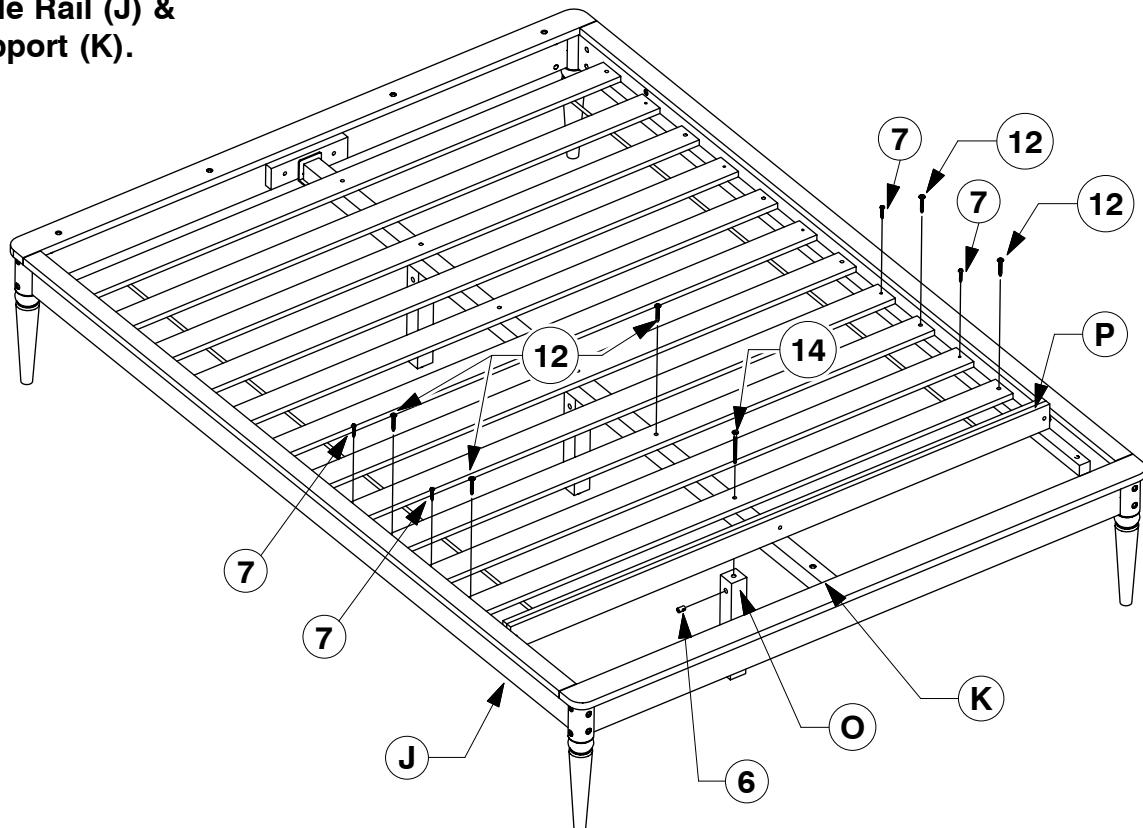

**13** Bolt & screw the remaining Bed Slats (P) to the Side Rail (J).

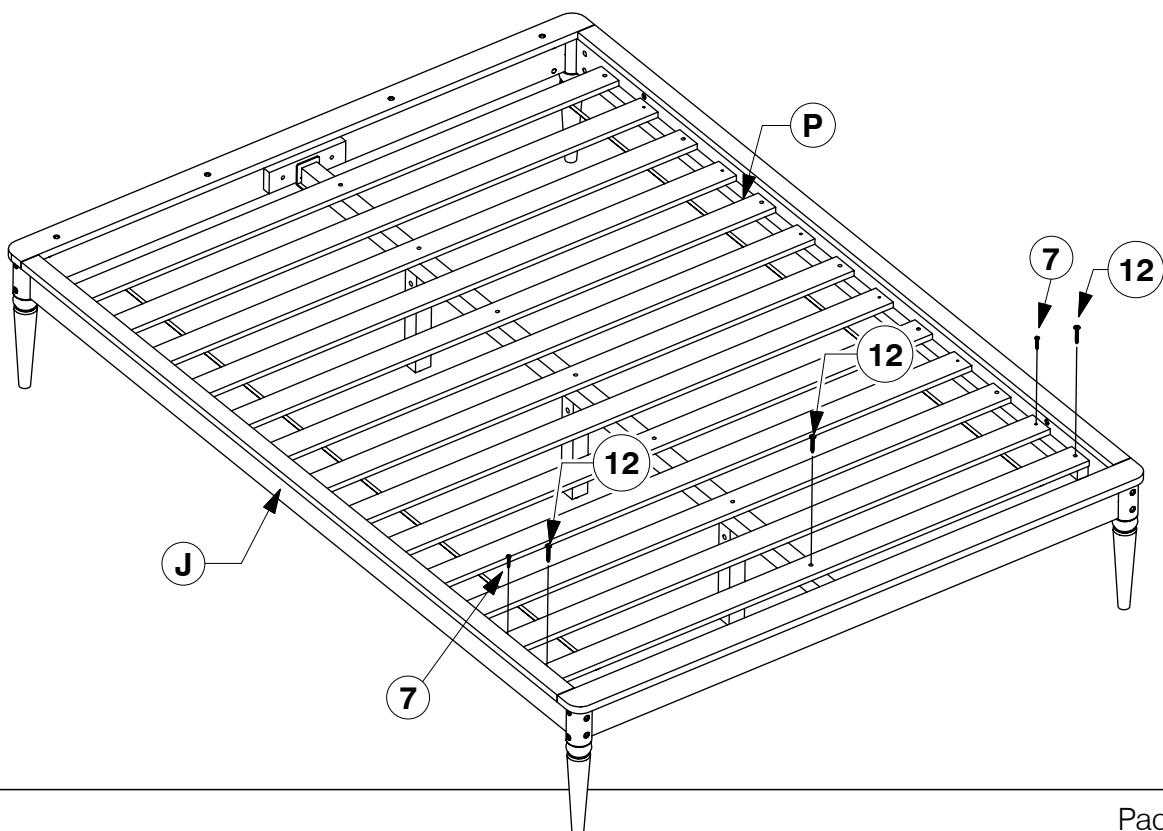


# 0067 Full Bed


## Assembly Instructions

WI-1220

**14** Fit the Headboard Top Rail (B) & Headboard Bottom Rail (C) to the Headboard Support (E).

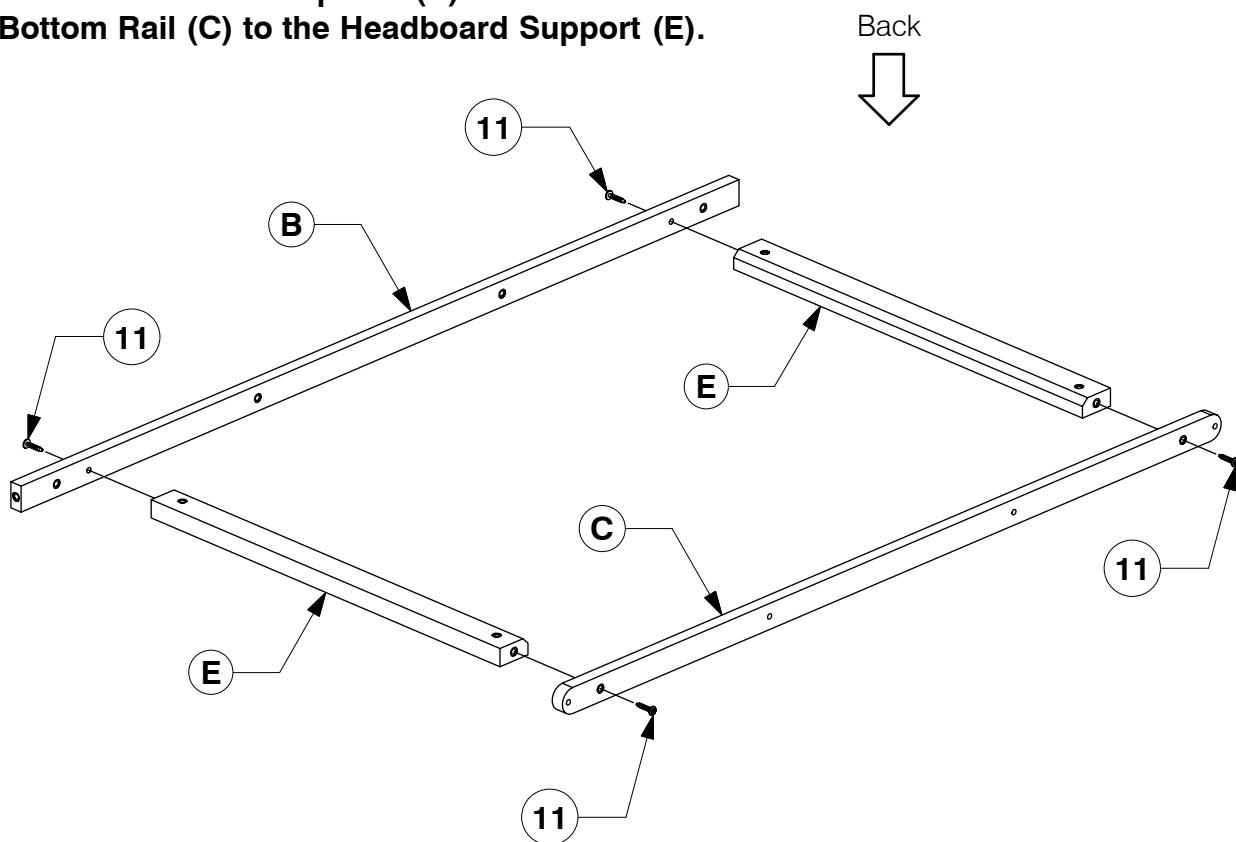

**15** Use bolts to fix the Headboard Bottom Rail (C) to the Headboard Panel (G).

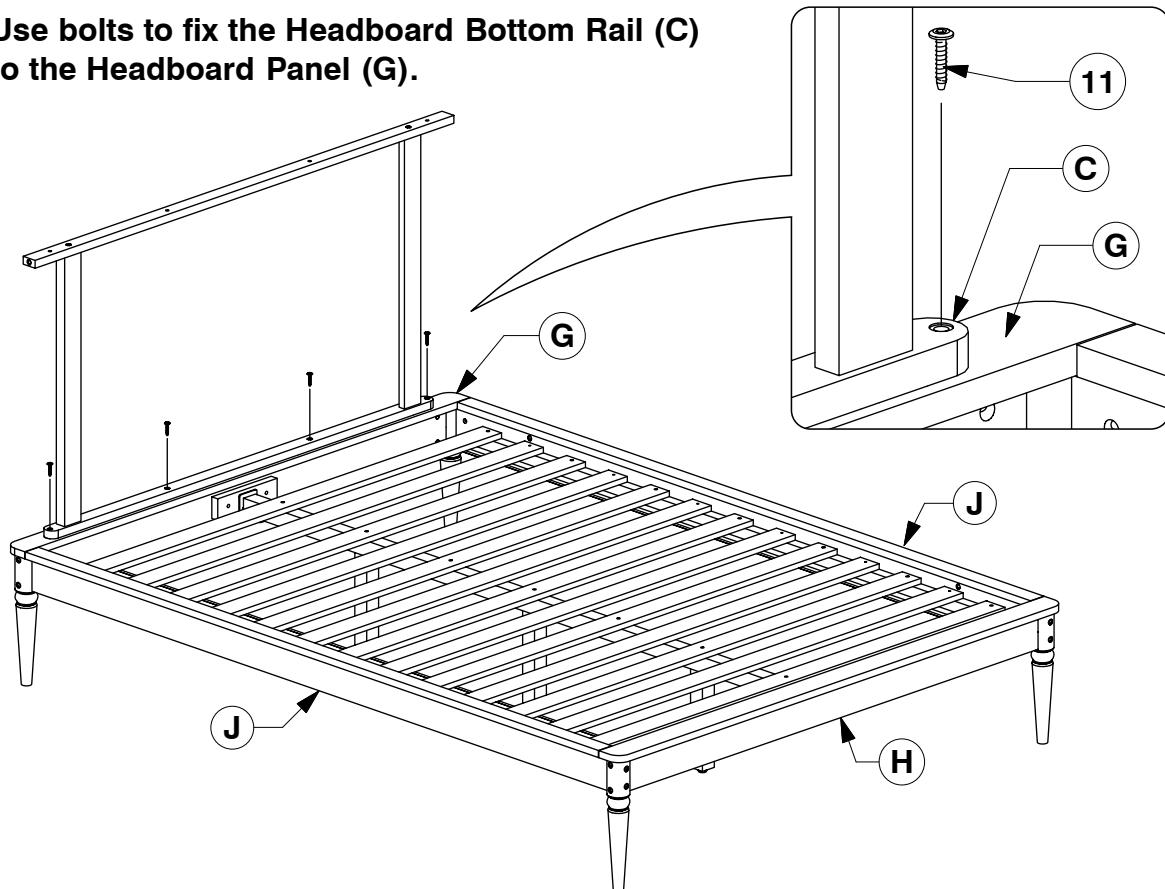


# 0067 Full Bed


## Assembly Instructions

WI-1220

**16** Fit the Headboard Top (A) to the Headboard Top Rail (B).

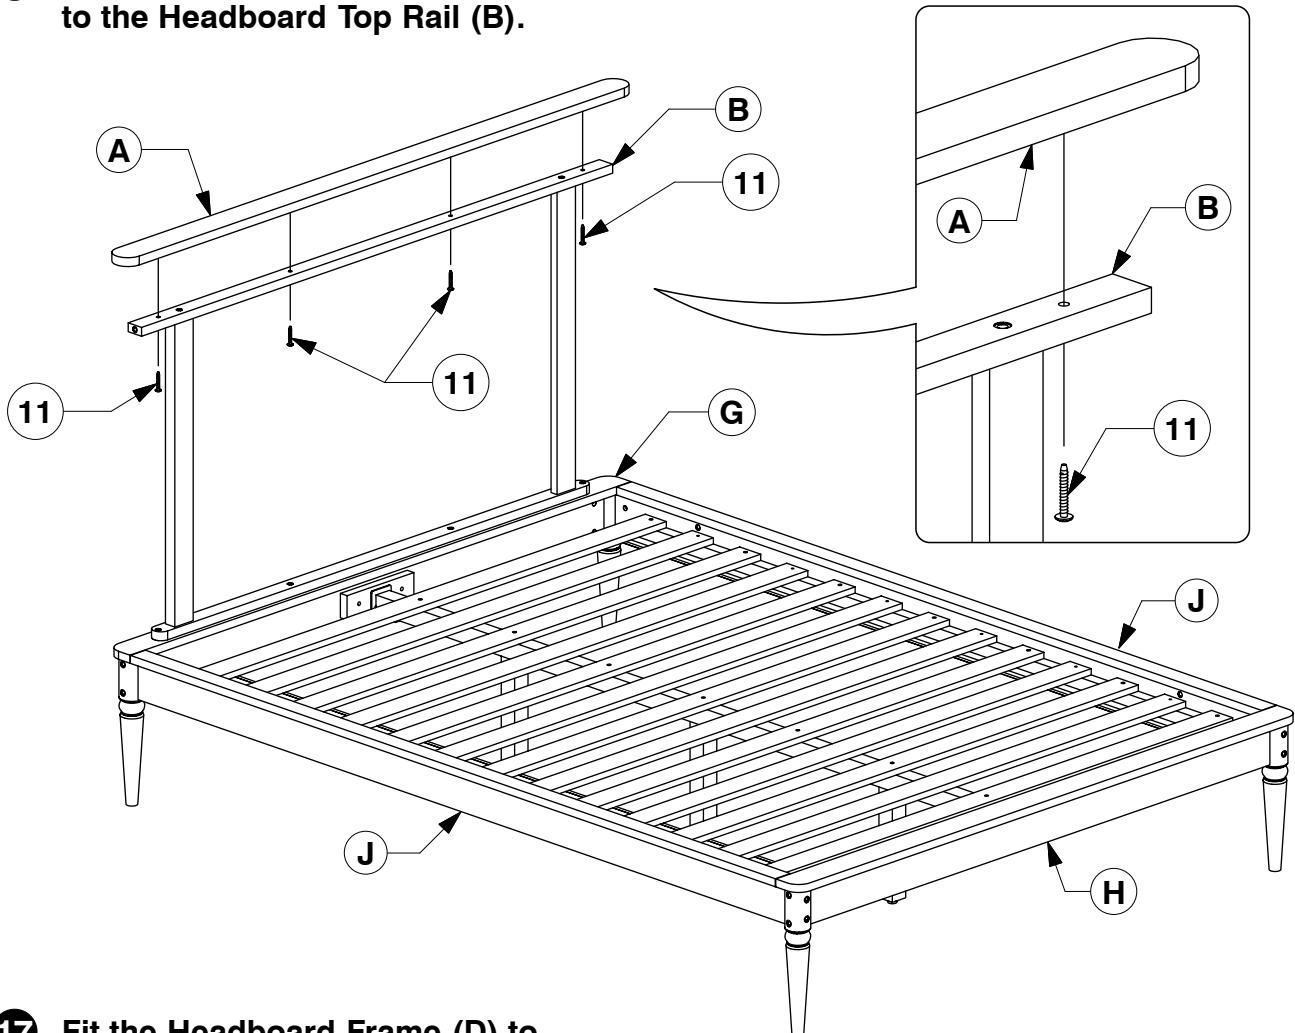

**17** Fit the Headboard Frame (D) to the Headboard Support (E).

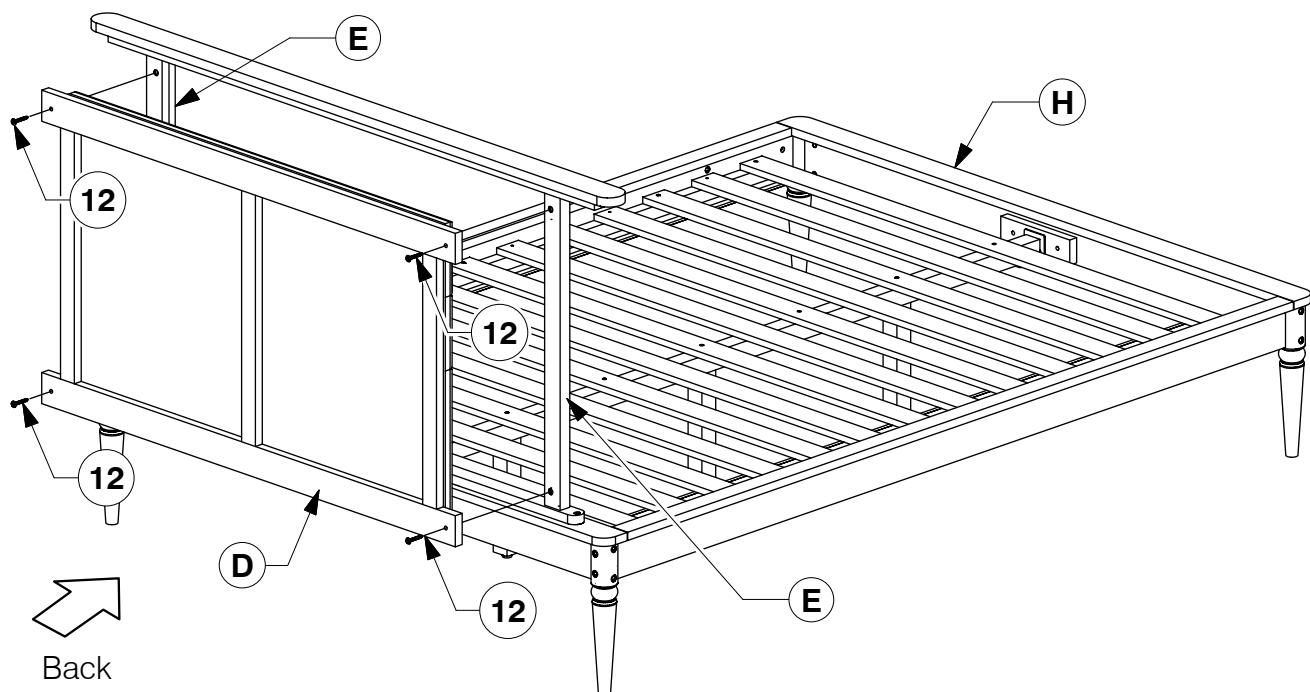

# 0067 Full Bed

## Assembly Instructions

WI-1220

**18** Fit the Headboard Side Bar (F) to the Headboard Top Rail (B) & Side Rail (J).

