



Assembly Instructions

3 Hardware List M4 Allen Key M5 Allen Key (3) Center Rail **4**) Adjustable (5) Bracket (2003) x 1 x 1 Bracket x 4 Foot **x 6** x 2 (9) Flat Washer (6) Barrel Nut Wood Screw Spring M8 x 50mm JCB 10 x 34 x 6 (M4 x 32mm) **x 22** Washer x 34 x 8 M6 JCN Nut M6 x 15mm M6 x 20mm M6 x 35mm M6 x 40mm **11**) JCB x 8 x 2 JCB **x 12** JCB **x 10** JCB **x 20 17**) M6 x 90mm M6 x 50mm JCB x 16 JCB x 6 **17** Assembled the Support Leg (H) Note: Extra holes to the Long Support (M). on top 17 6 17 6 (M)4 M (K)4 **5** Fit the Lower Rail (F) to the Post (J & K). 7 (F) 7


WI-0222






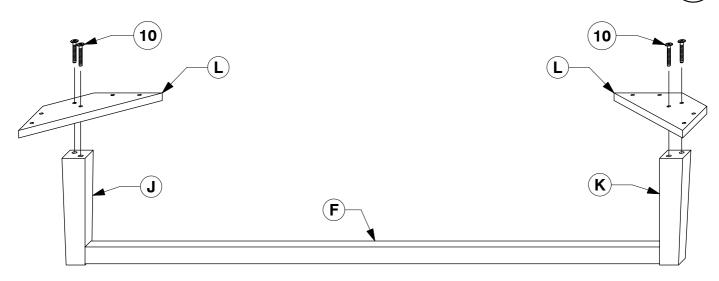


7 Fit the Center Rail Bracket to the Headboard Panel (D).

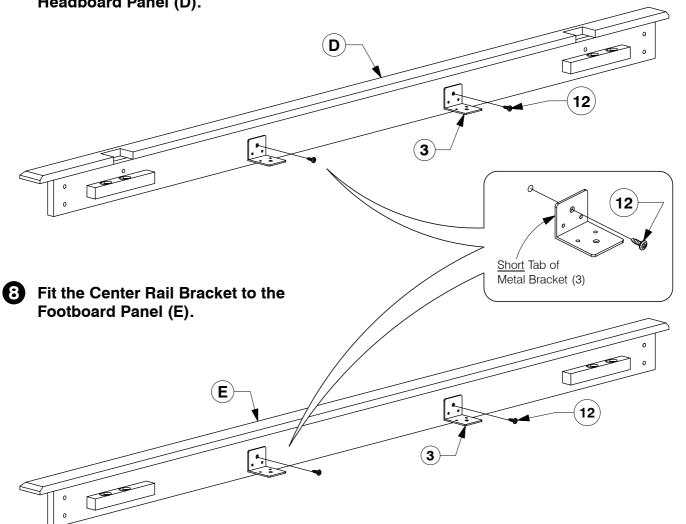

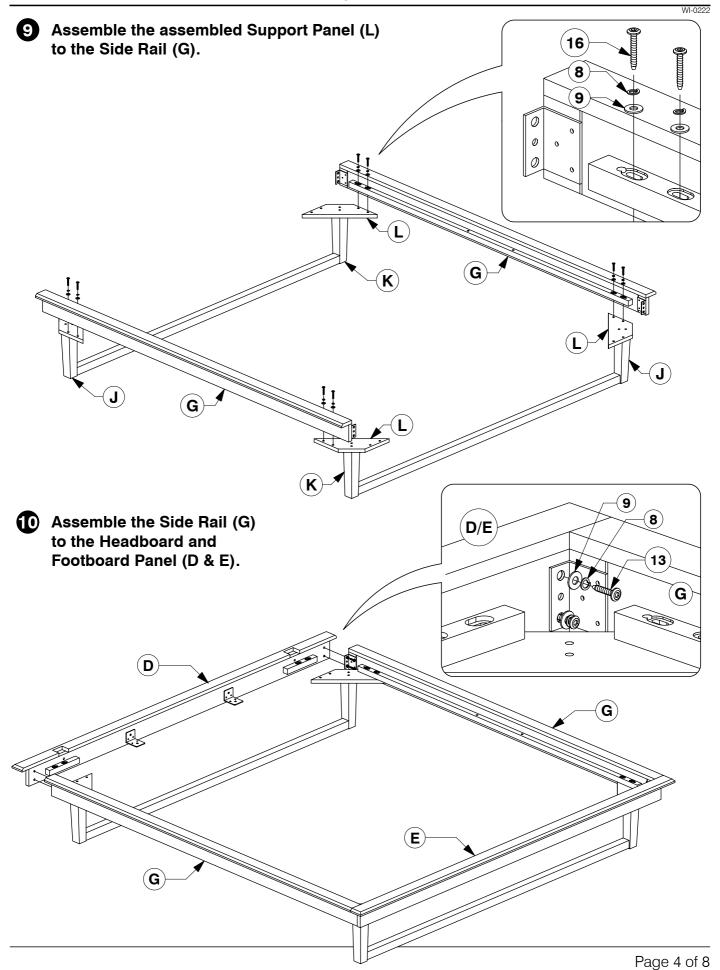


Bolt the Support Panel (L) to the Headboard and Footboard Panel (D & E). (D (G)E \mathbf{G} **16** 8 (H) Bolt the Long Support (H) to the Center Rail Brackets on the Headboard and Footboard Panel (D & E). 12 (H) $\widehat{\mathbf{H}}$ 3 (G) (\mathbf{E})


Bolt the Bed Slats (N) to the Side Rail (G).

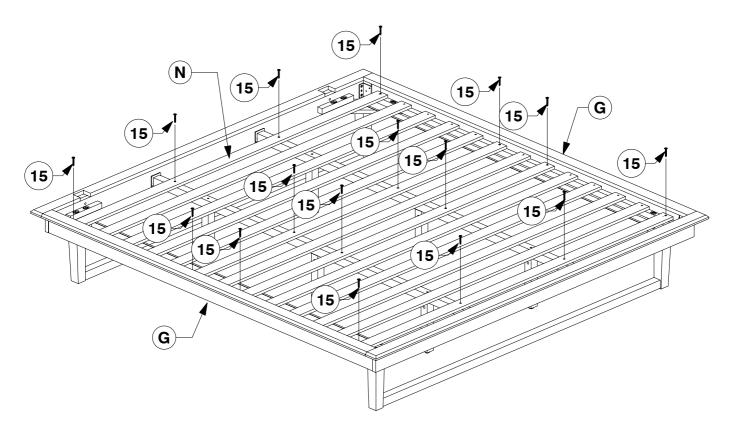

Screw the Bed Slats (N) to the Side Rail (G).

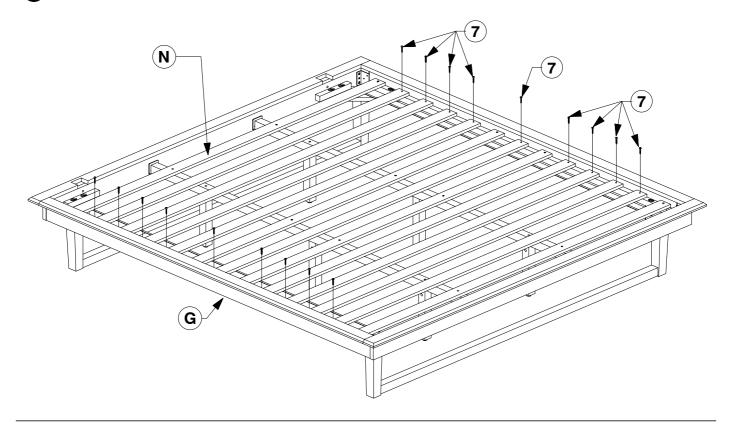



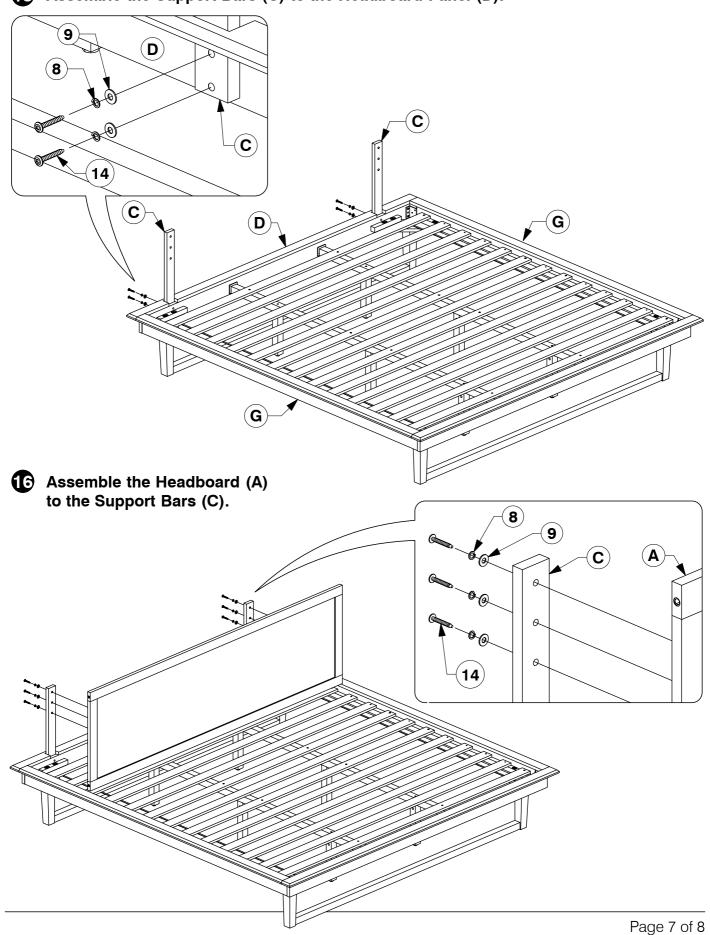

WI-0222

Fit the Headboard Side Panel (B) to the Headboard (A) & Side Rail (G).

