

**Assembly Instructions** 

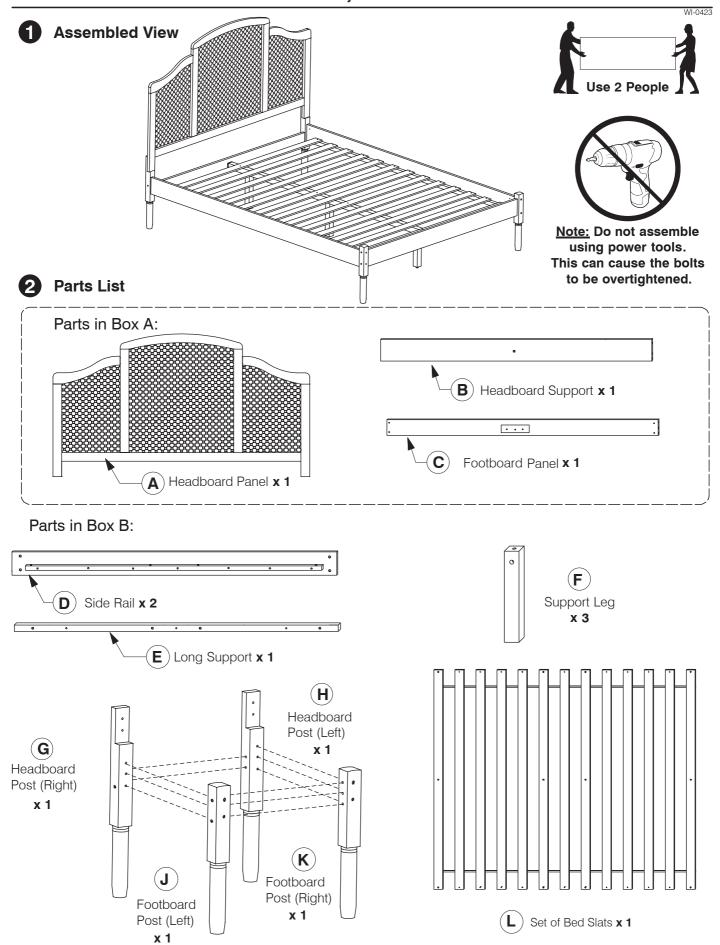

**Assembly Instructions** 

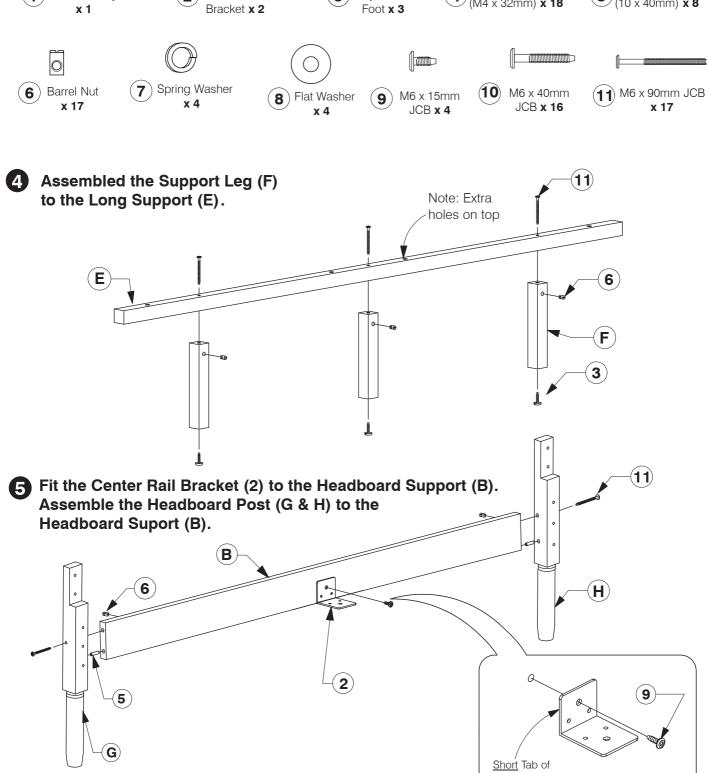





Metal Bracket (2)

Assembly Instructions


WI-0423

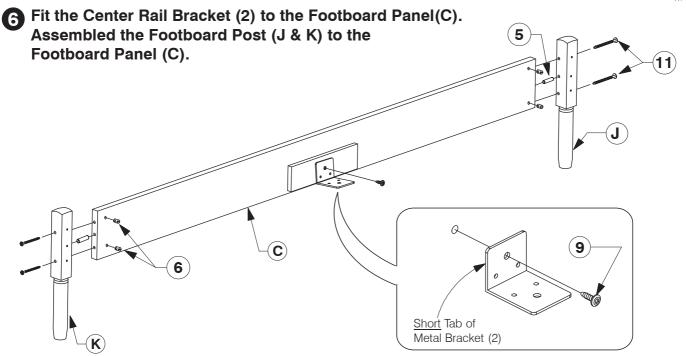

Fit the Headboard Panel (A) to the Headboard Post (G & H).

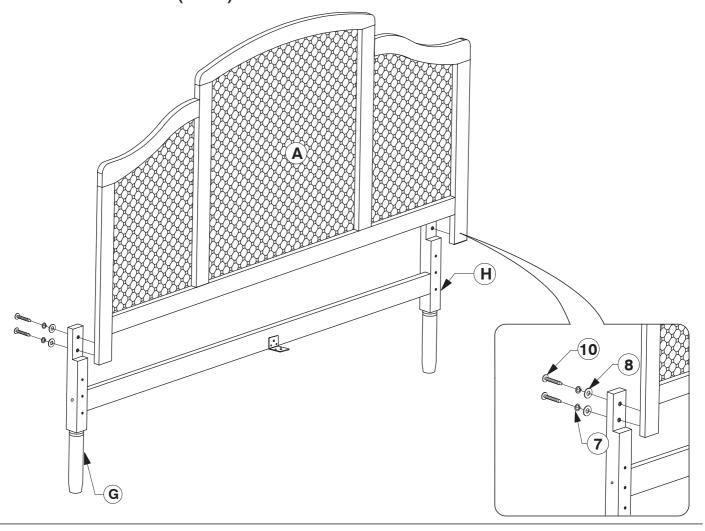

Assembly Instructions

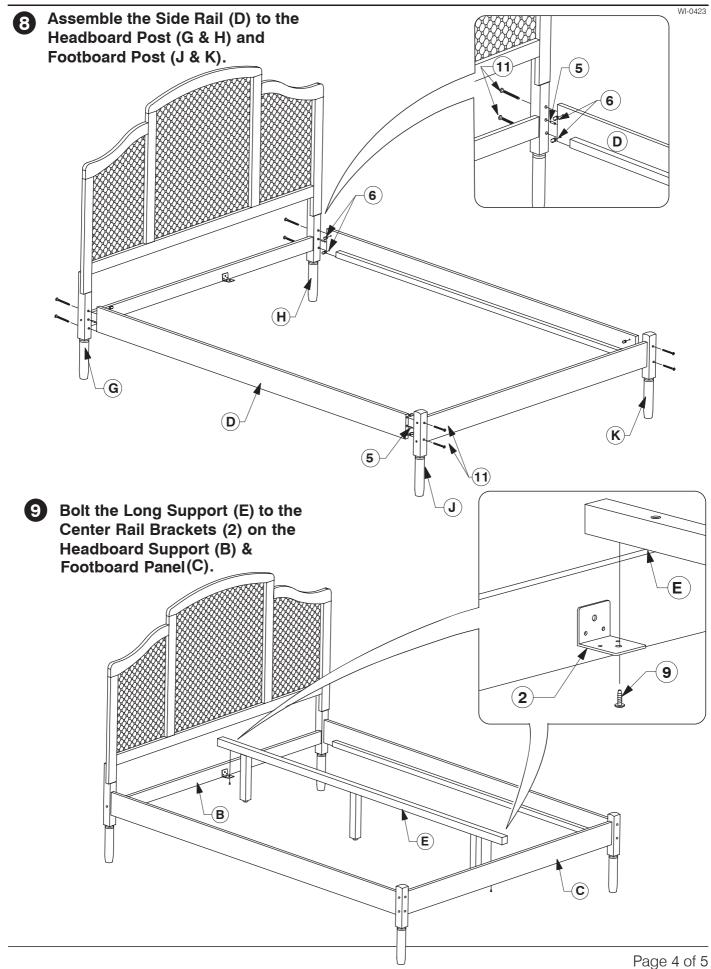

# 0218 Queen Bed Assembly Instructions

WI-0423 Screw the Bed Slats (L) to the Side Rail (D).

