

Assembly Instructions

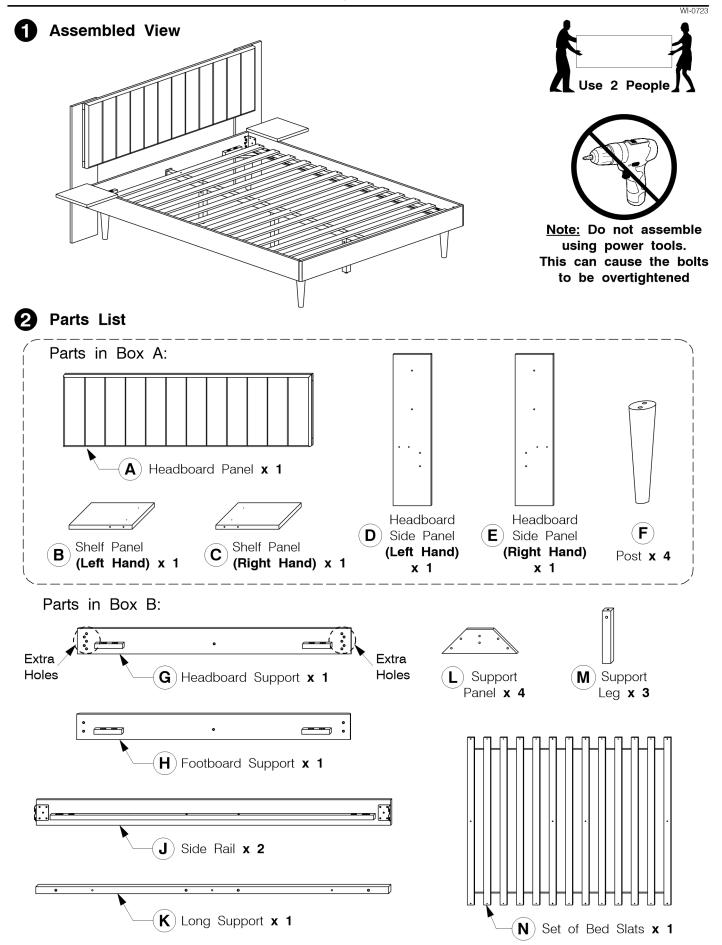

Assembly Instructions


3 Hardware List (3) Center Rail (2) M5 Allen Key (4) 'L' Bracket **5**) Adjustable (1) M4 Allen Key x 1 x 1 Bracket x 2 (5003) **x 4** Foot x 3 (8) Flat Washer (9) Wood Screw Wood Screw (6) Barrel Nut (7) Spring Washer x 32 x 32 (M4 x 16mm) (M4 x 32mm) **x** 3 x 8 x 18 CSK Cap Wood Screw (**12**) M8 x 50mm JCB (**13**) M6 x 15mm JCB **14**) M6 x 20mm JCB (M6 x 50mm) **x 4** x 8 x 4 x 8 (16) M6 x 40mm JCB **17**) M6 x 50mm JCB (18) M6 x 90mm JCB **15**) M6 x 35mm JCB x 16 x 4 x 16 x 3 4 Fit the Center Rail Bracket to the Footboard Support (H). 13 Short Tab of Metal Bracket (3) 5 Fit the Center Rail Bracket to the Extra Headboard Support (G). Holes Extra Holes \mathbf{G}

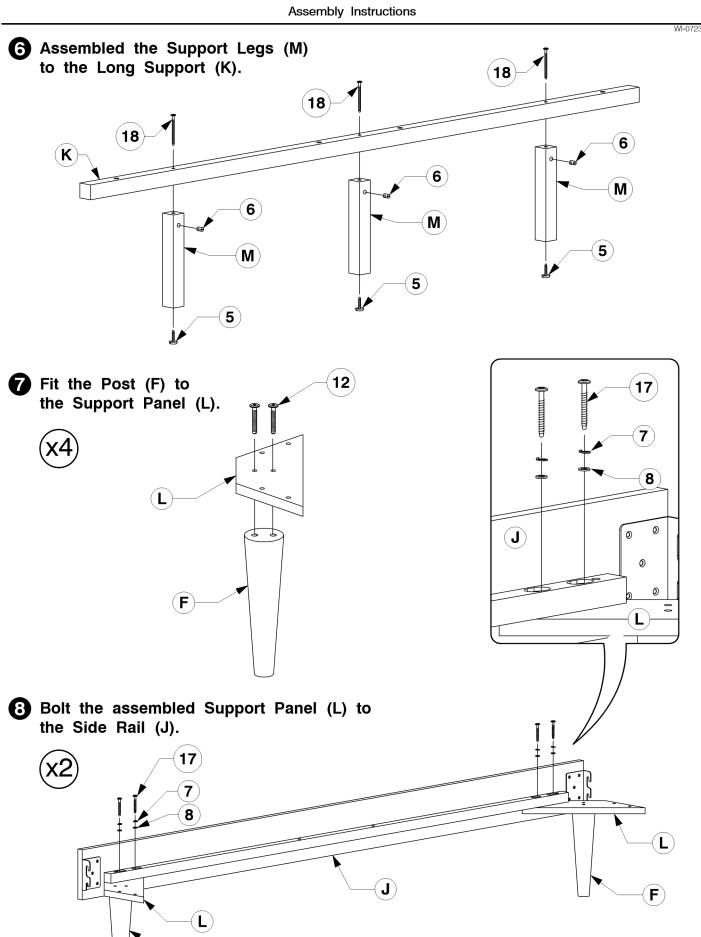


Page 3 of 8


MI**-**0723

9 Fit the 'L' Bracket to the Shelf Panels (B & C).

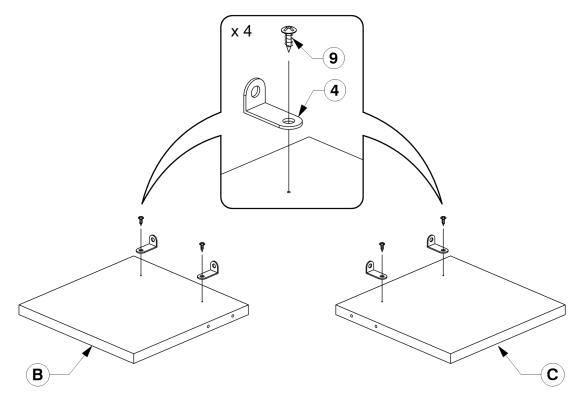

Assemble the Headboard Side Panels (D & E) to the Headboard Panel (A).

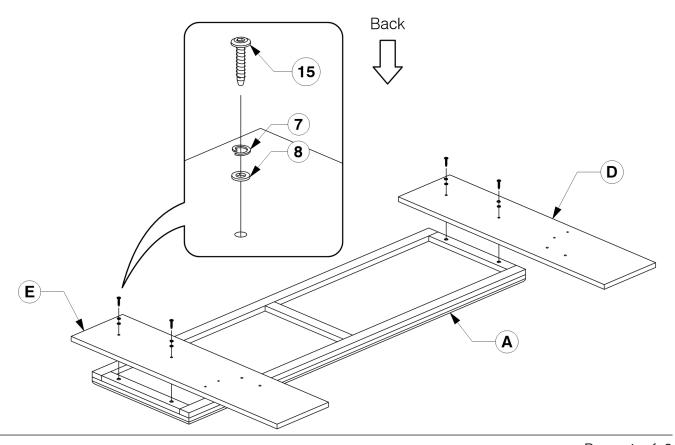


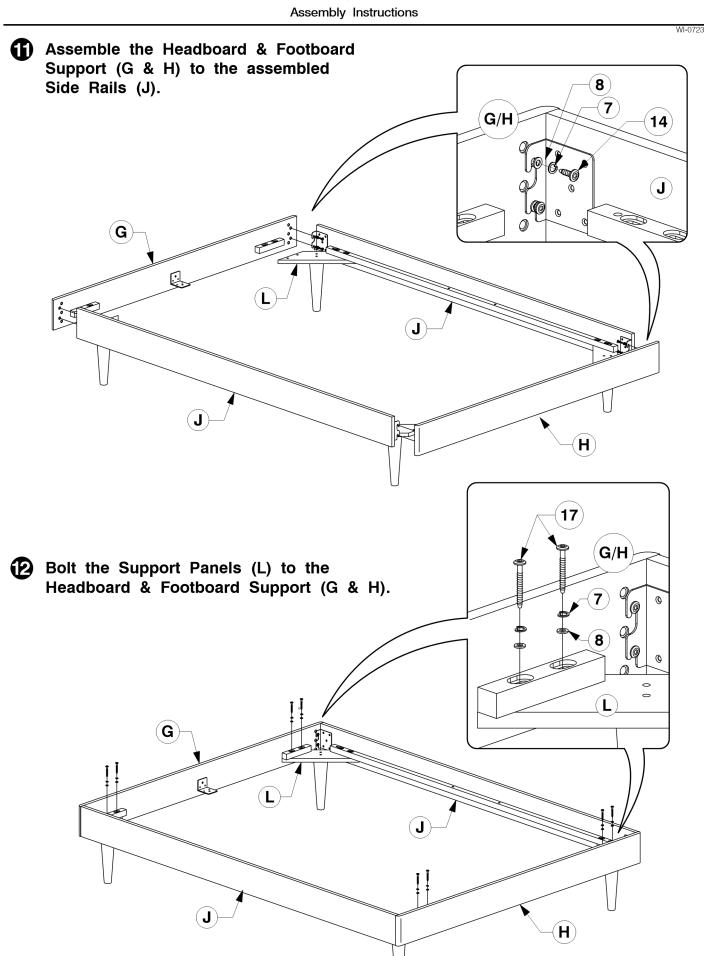


Page 5 of 8

Assembly Instructions

WI-0723

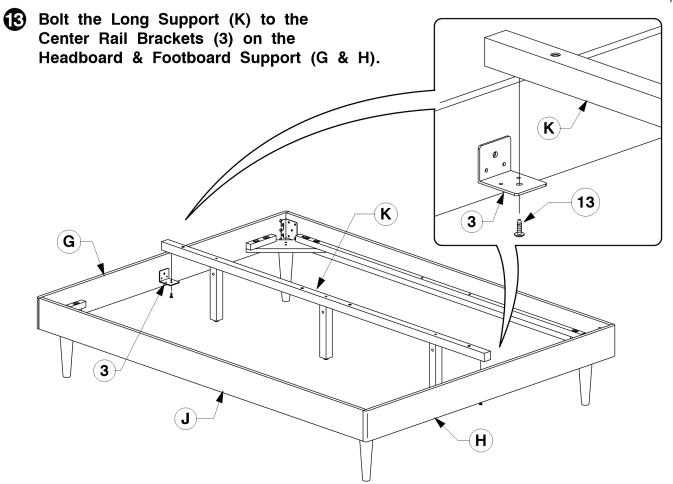


Bolt the Bed Slats (N) to the Side Rails (J).

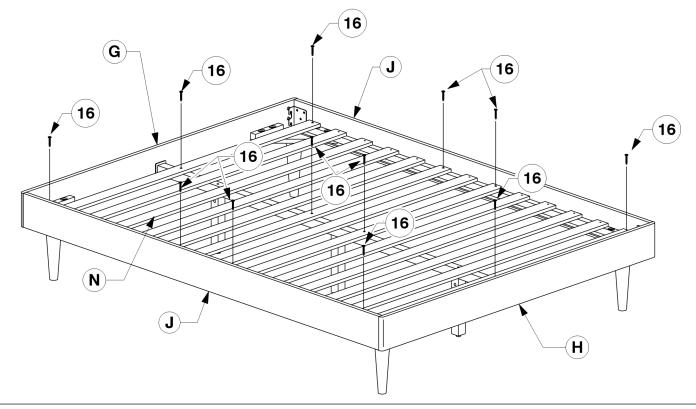


Assembly Instructions

\//L_0793

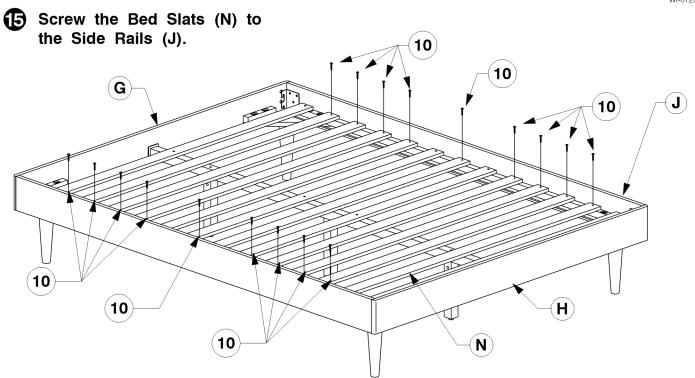

Assemble the Headboard Side Panels (D & E) to the Headboard Support (G).

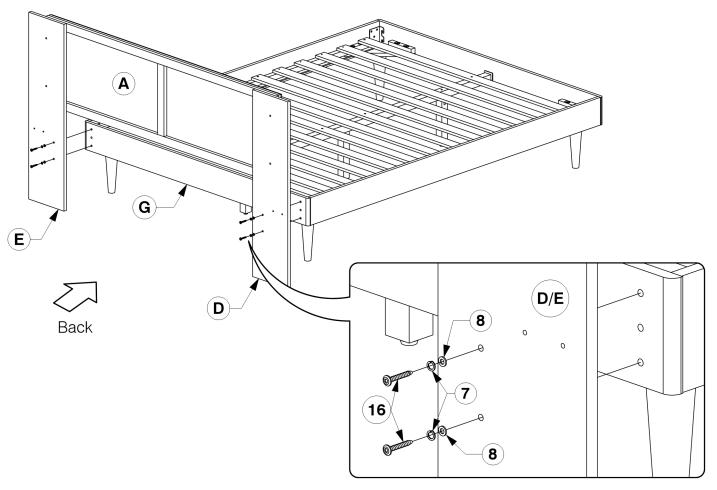

Assembly Instructions

VI-0723

Fit the Shelf Panels (B & C) to the Headboard Side Panels (D & E).

