
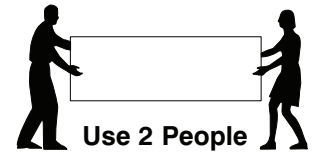


0226 Queen Bed

Assembly Instructions


WI-0724

1 Assembled View

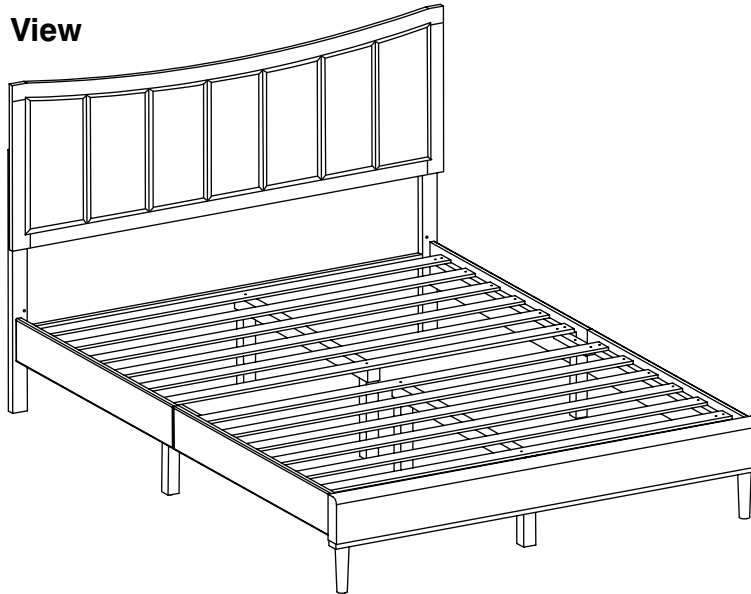


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

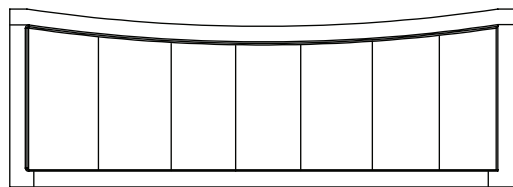

A Headboard Panel x 1



C Headboard Support x 1




D Side Rail (Left Hand) x 2




E Side Rail (Right Hand) x 2



F Footboard Lower x 1



G Long Support x 2



H Support Bar x 2



B Footboard Panel x 1



J Headboard Post (Left Hand) x 1




K Headboard Post (Right Hand) x 1



L Footboard Post x 2



M Support Leg x 6

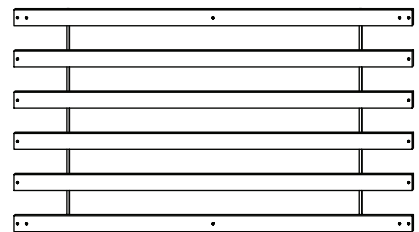


N Set of Bed Slats x 2

0226 Queen Bed


Assembly Instructions

WI-0724


3 Hardware List

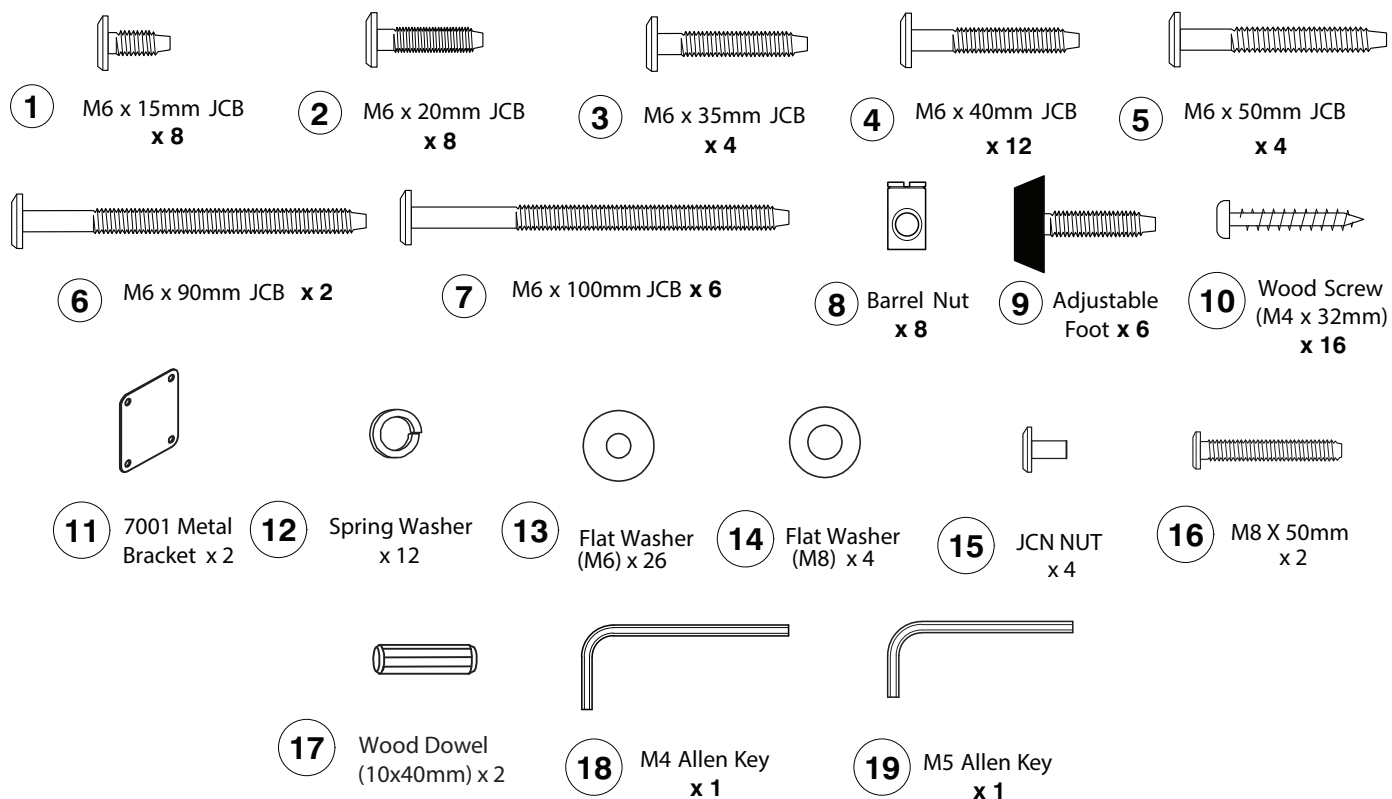

4 Fit the Adjustable foot to the bottom of the Support Leg (M).

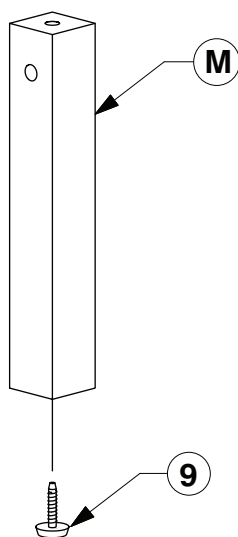

5 Fit the Support Bar (H) to the Support Leg (M).

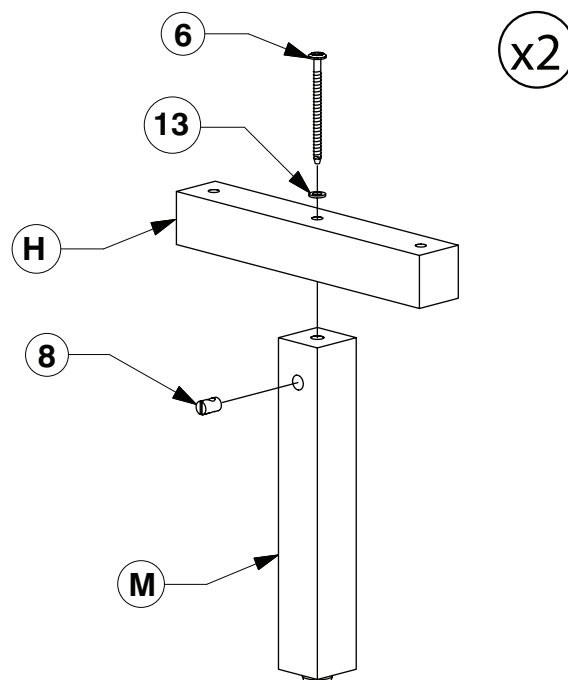


0226 Queen Bed

Assembly Instructions


WI-0724

6 Fit the Metal Plate to the Side Rail (D & E).

x2

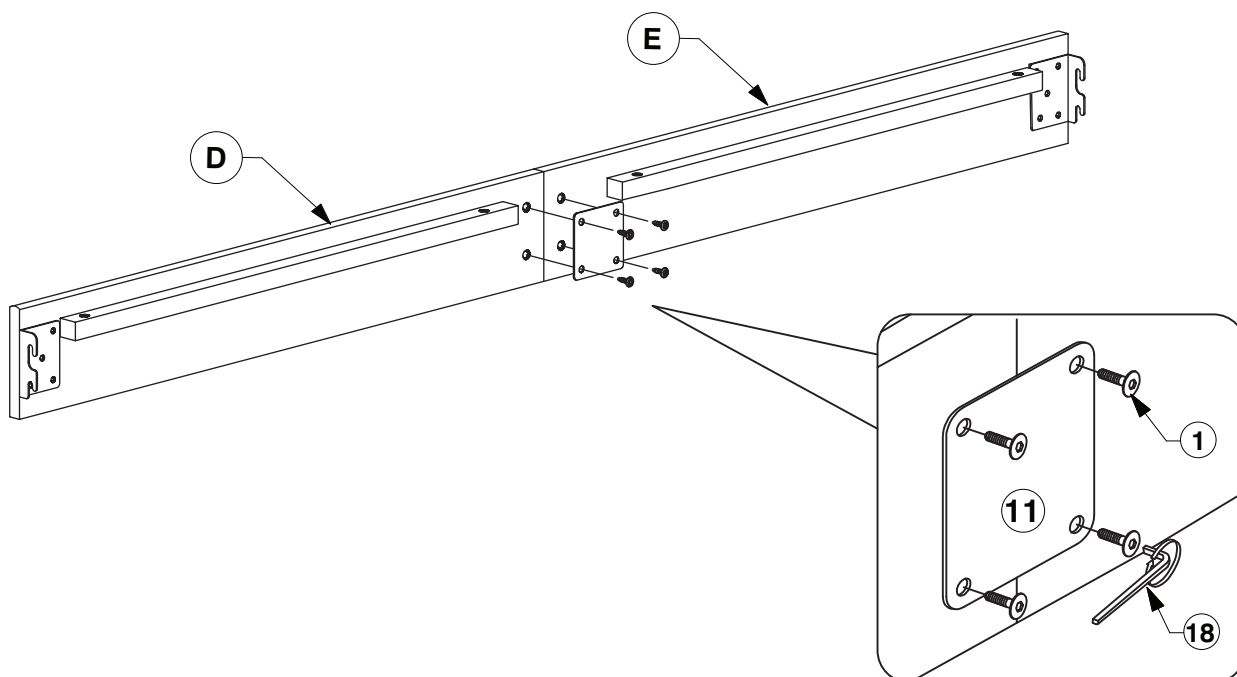

7 Assemble the Footboard Lower (F) to the FB Post (L).

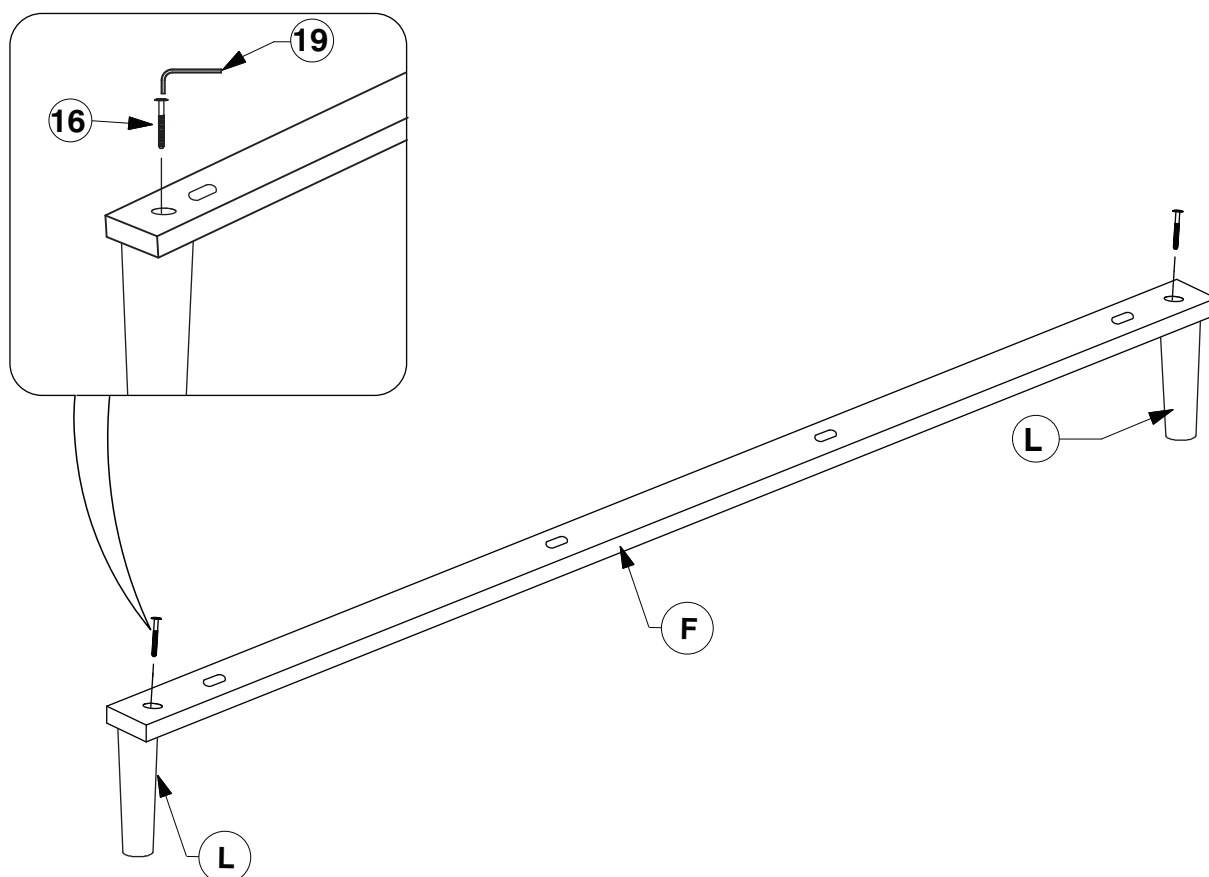


0226 Queen Bed


Assembly Instructions

WI-0724

- 8** Assemble the Footboard Lower (F) to the Footboard Panel (B).

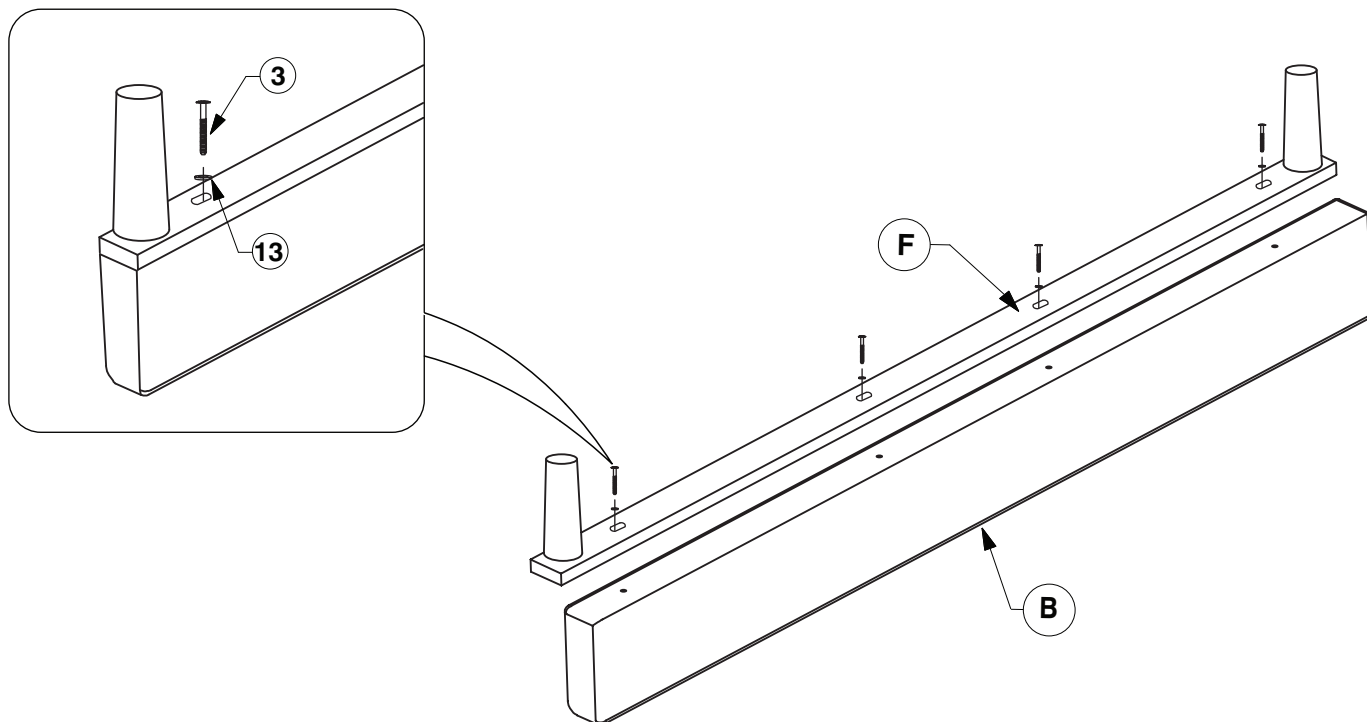

- 9** Assemble the Headboard Support (C) to the HB Post (J & K) Left & Right.

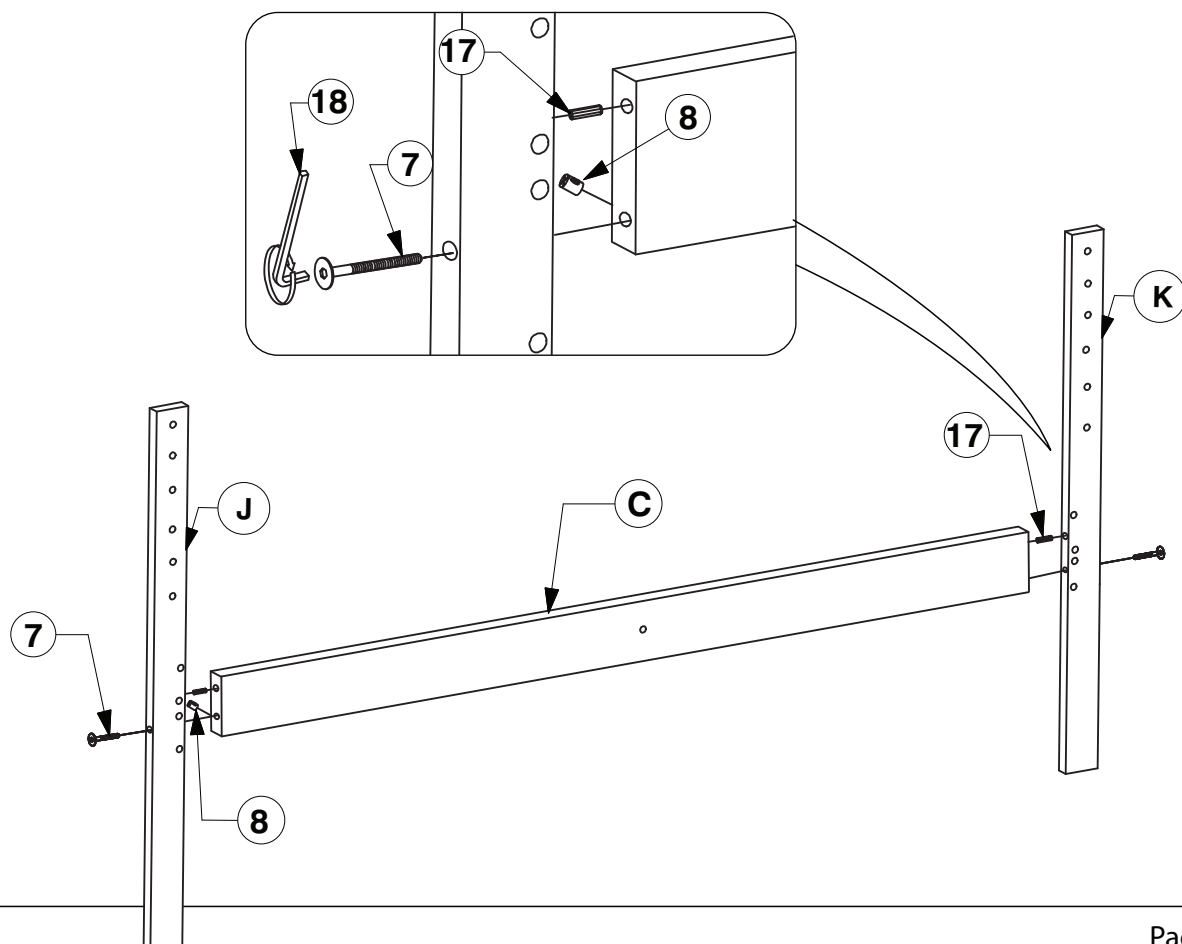


0226 Queen Bed


Assembly Instructions

WI-0724

- 10** Fit the Headboard Panel (A) to the HB Post (J & K).

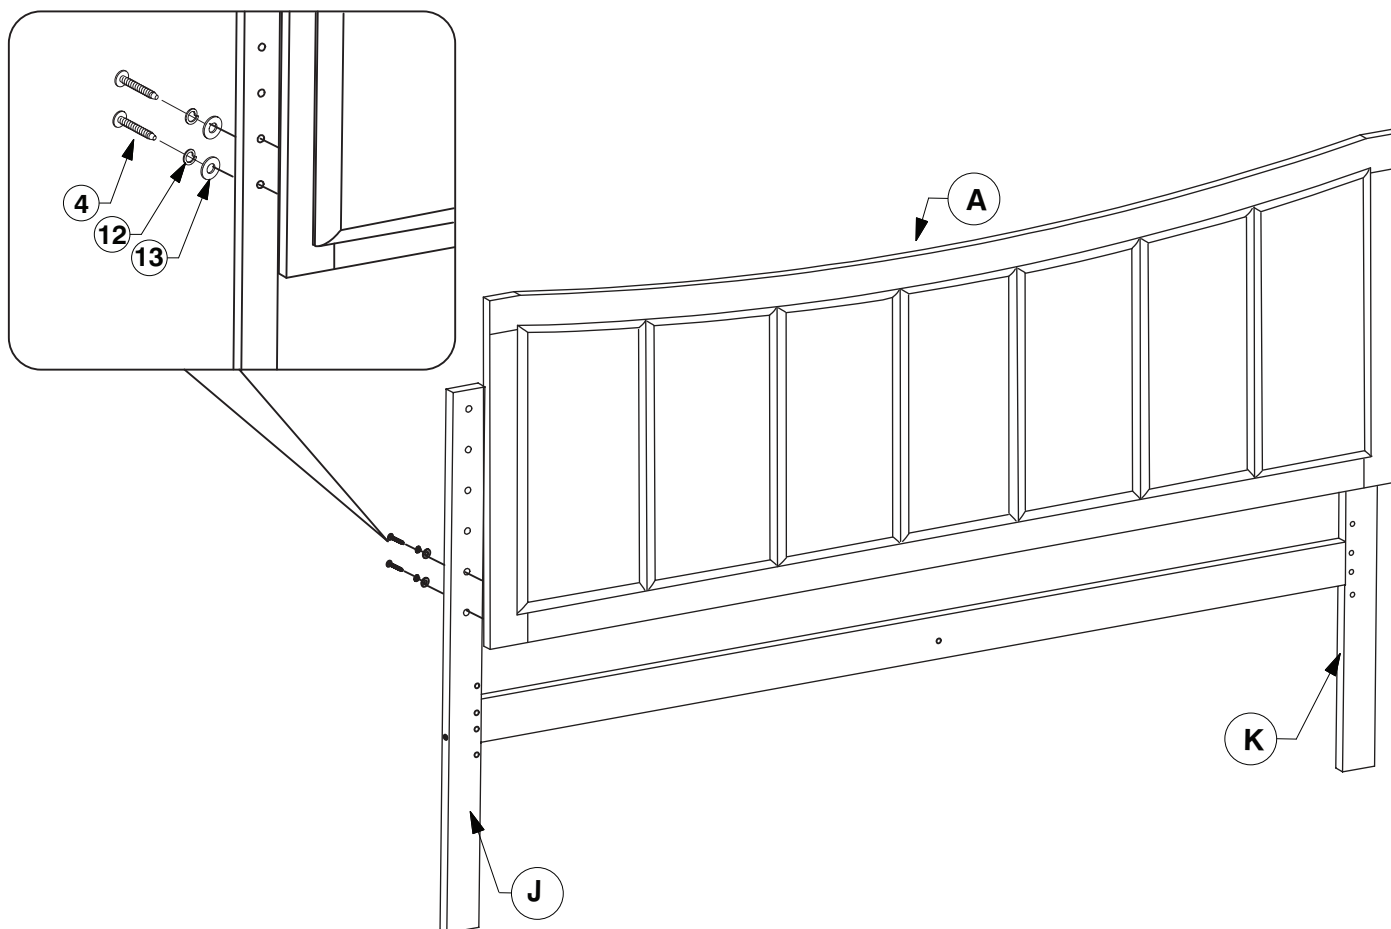

- 11** Fit the Bed Slats (N) to the Long Support (G) & Support Leg (M).

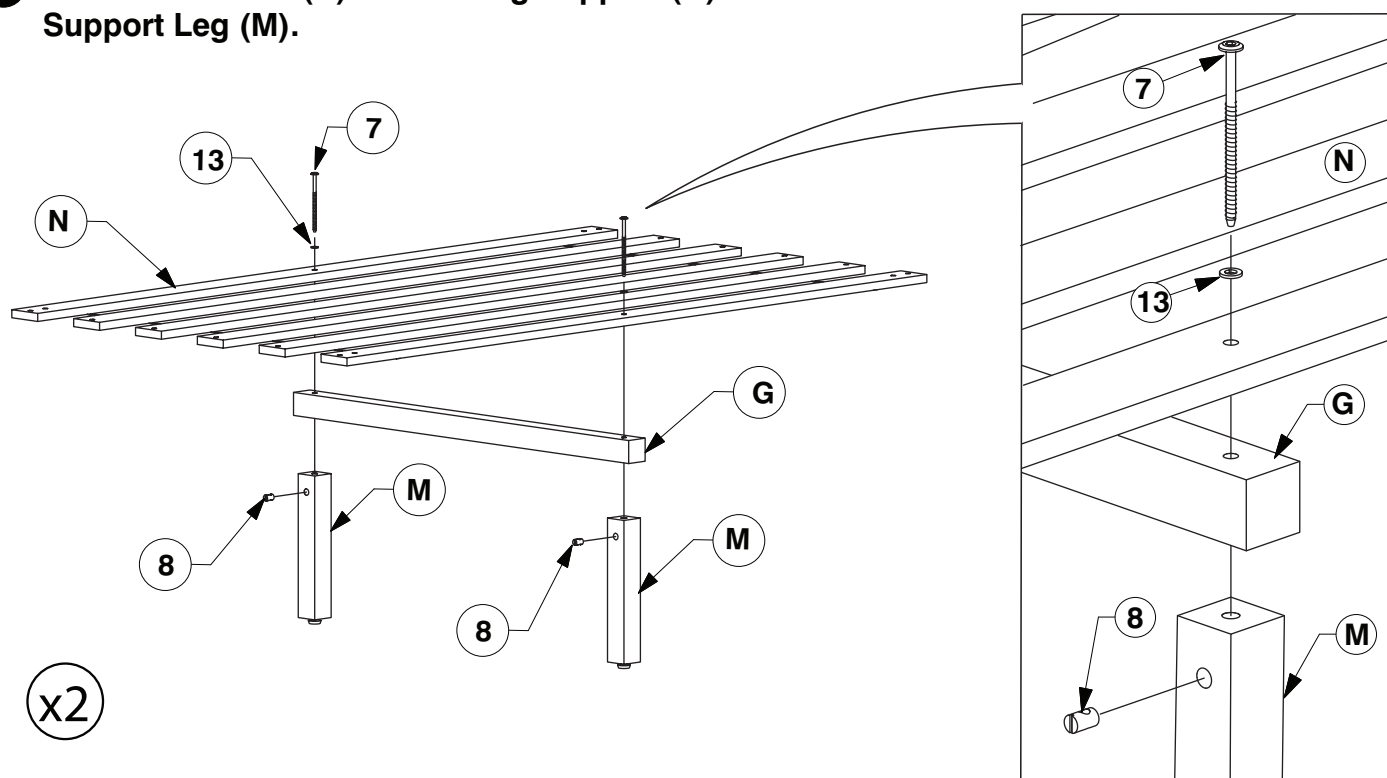


0226 Queen Bed


Assembly Instructions

WI-0724

12 Assemble the Side Rails (D & E) to the Headboard and Footboard Panels (A & B)

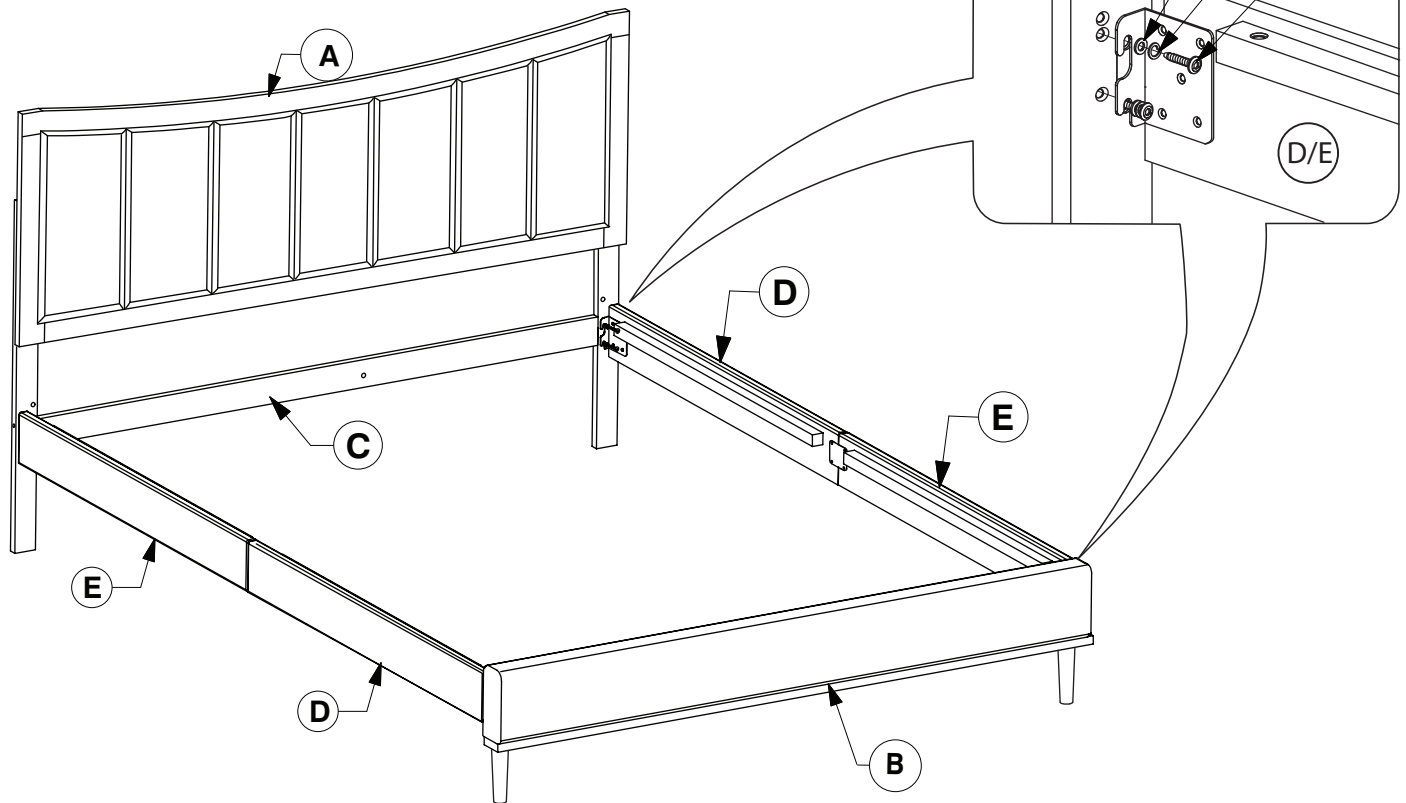

13 Attach the Bed Slats (N) to the Side Rails (D & E) using Bolts & Screws.

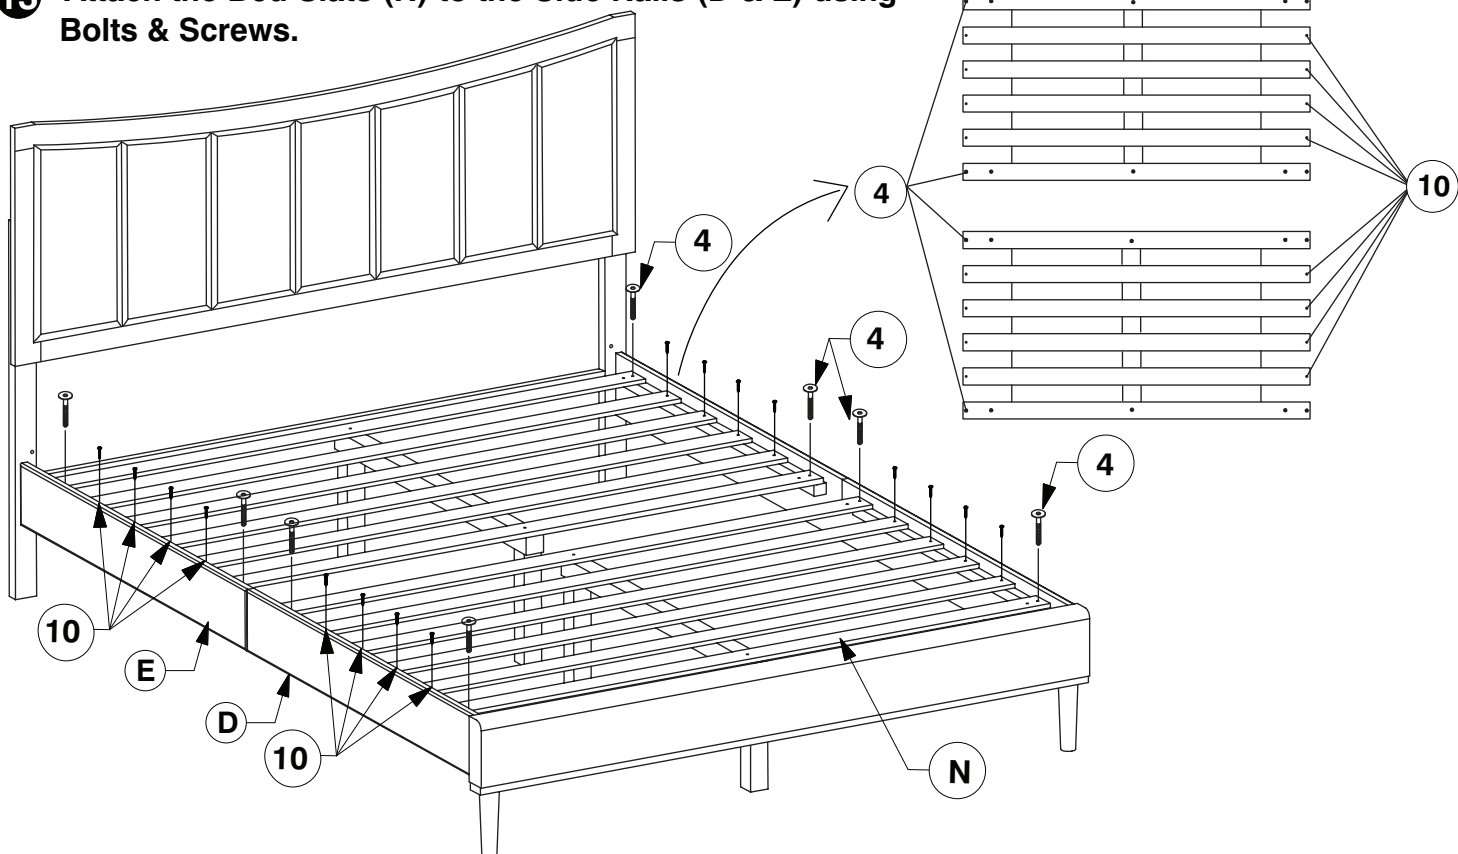


0226 Queen Bed

Assembly Instructions

WI-0724



- 14** Bolt the Support Bar (H) to the Bed Slats (N).

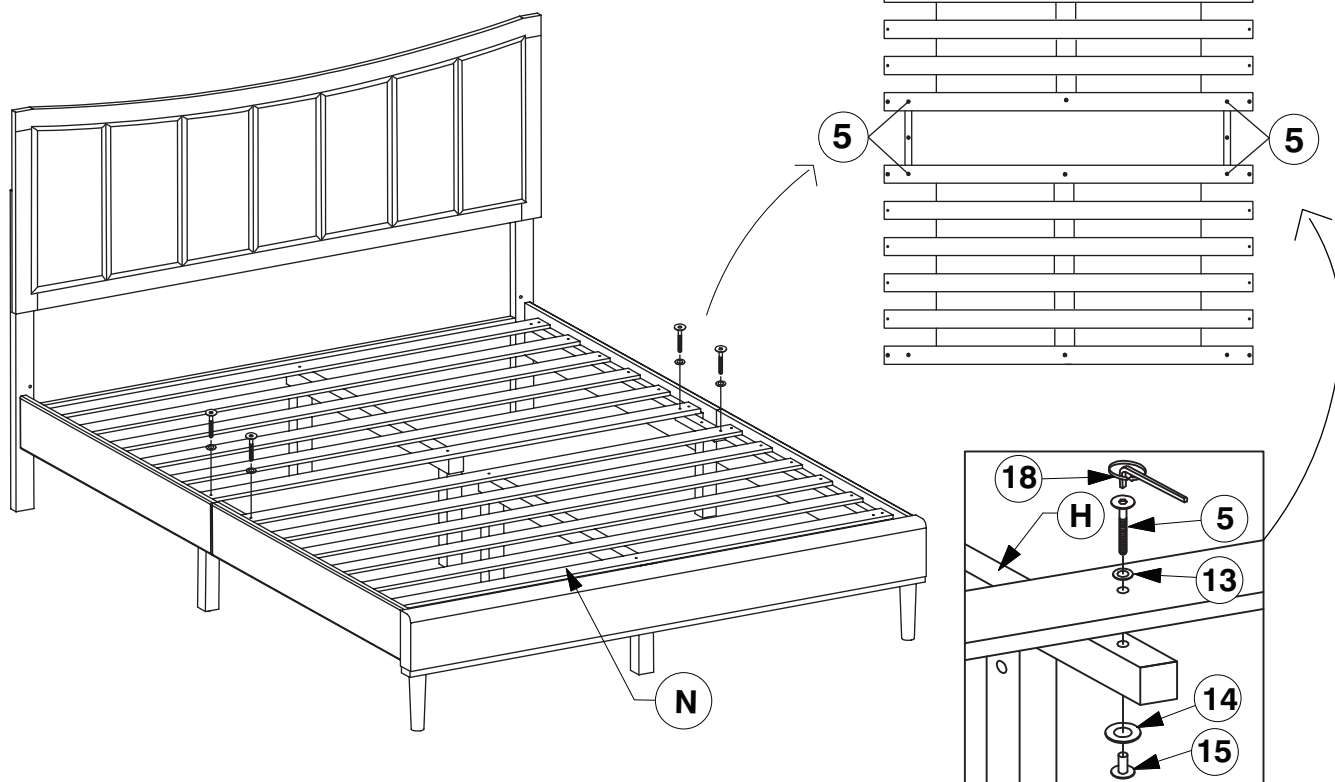

9009 6 Drawer Dresser


Assembly Instructions

WI-0724

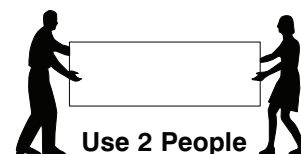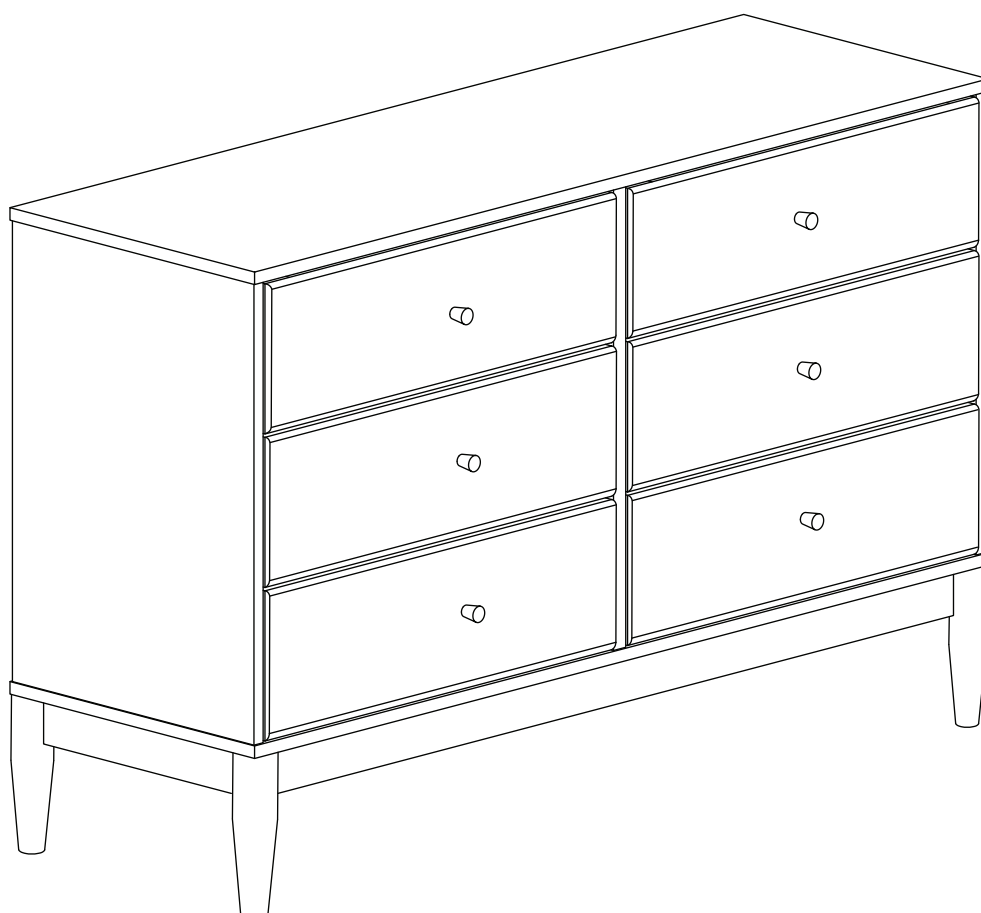

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

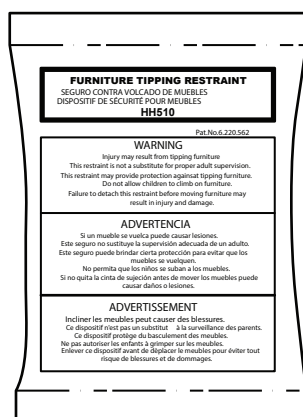

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9009 6 Drawer Dresser

Assembly Instructions


WI-0724

1 Parts List


Parts in Box A:

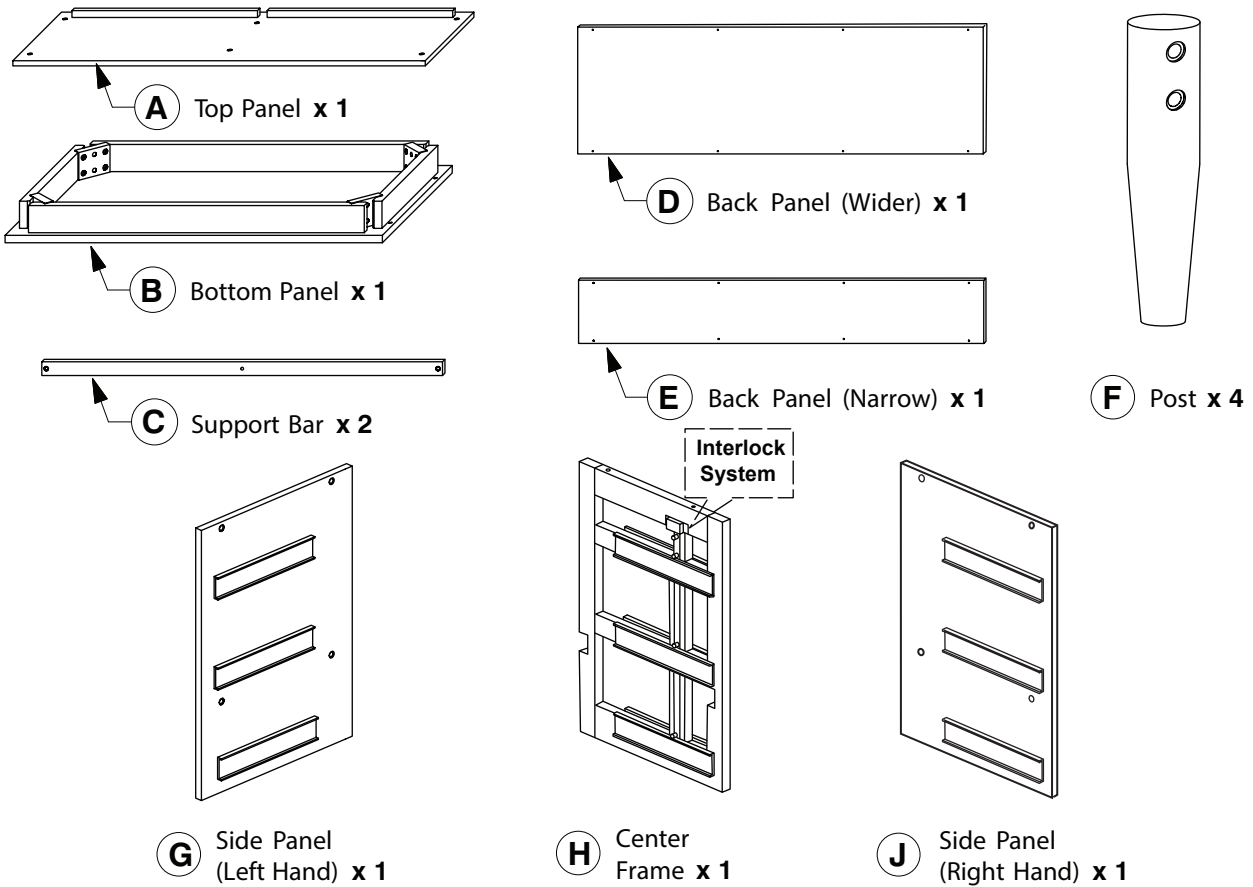


Parts in Box B:

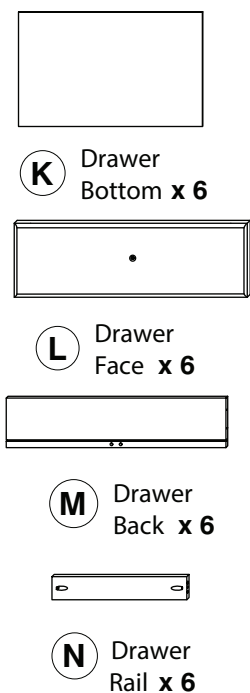

Parts for **LEFT** Side Drawer

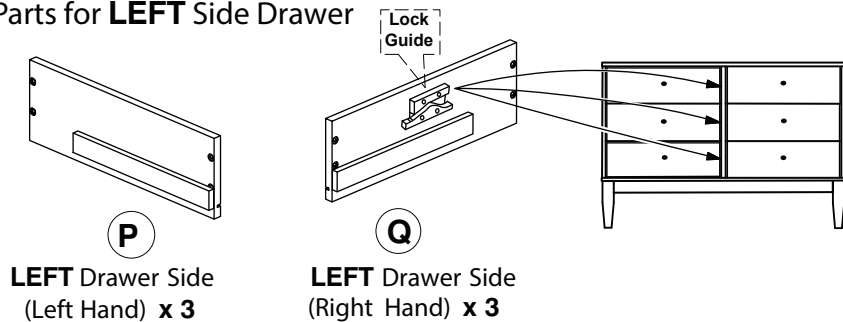

Parts for **RIGHT** Side Drawer

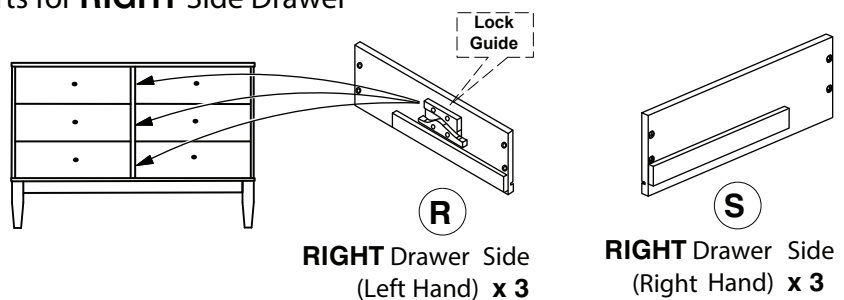


9009 6 Drawer Dresser

Assembly Instructions

WI-0724


2 Hardware List

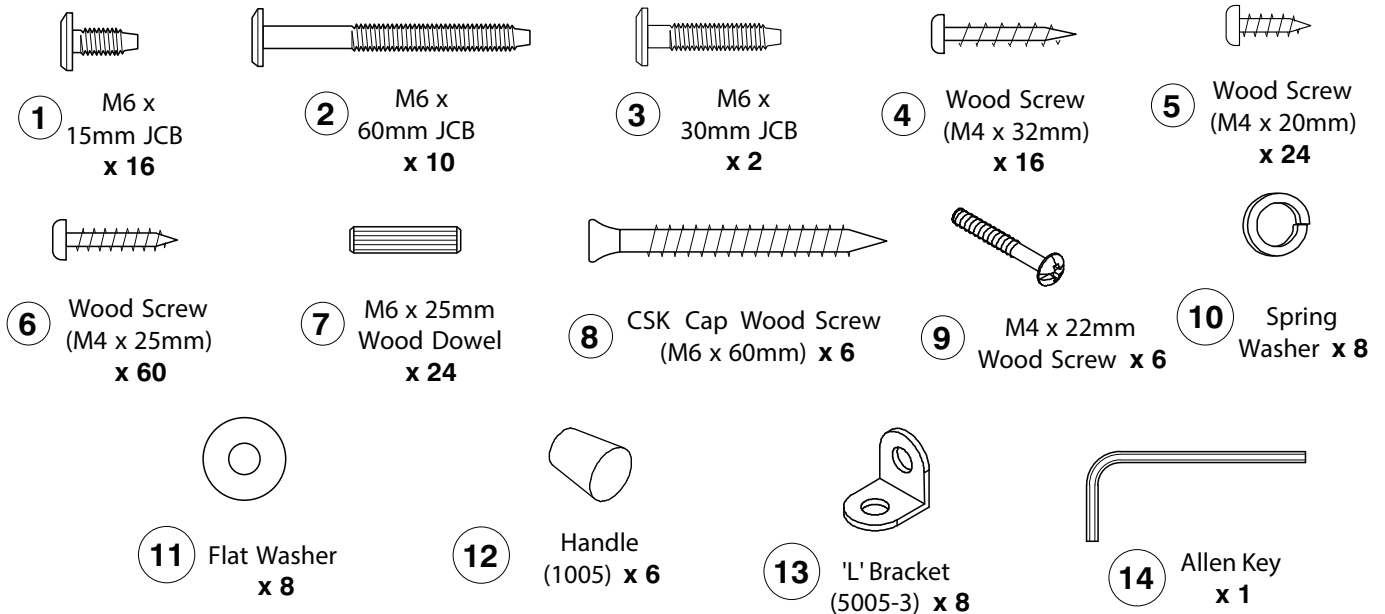

3 Assemble the Drawers.


STEP 3.1

LEFT

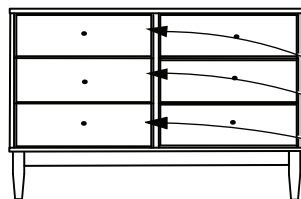

Important: Assemble the Drawer Runner facing Drawer Face.

x 3

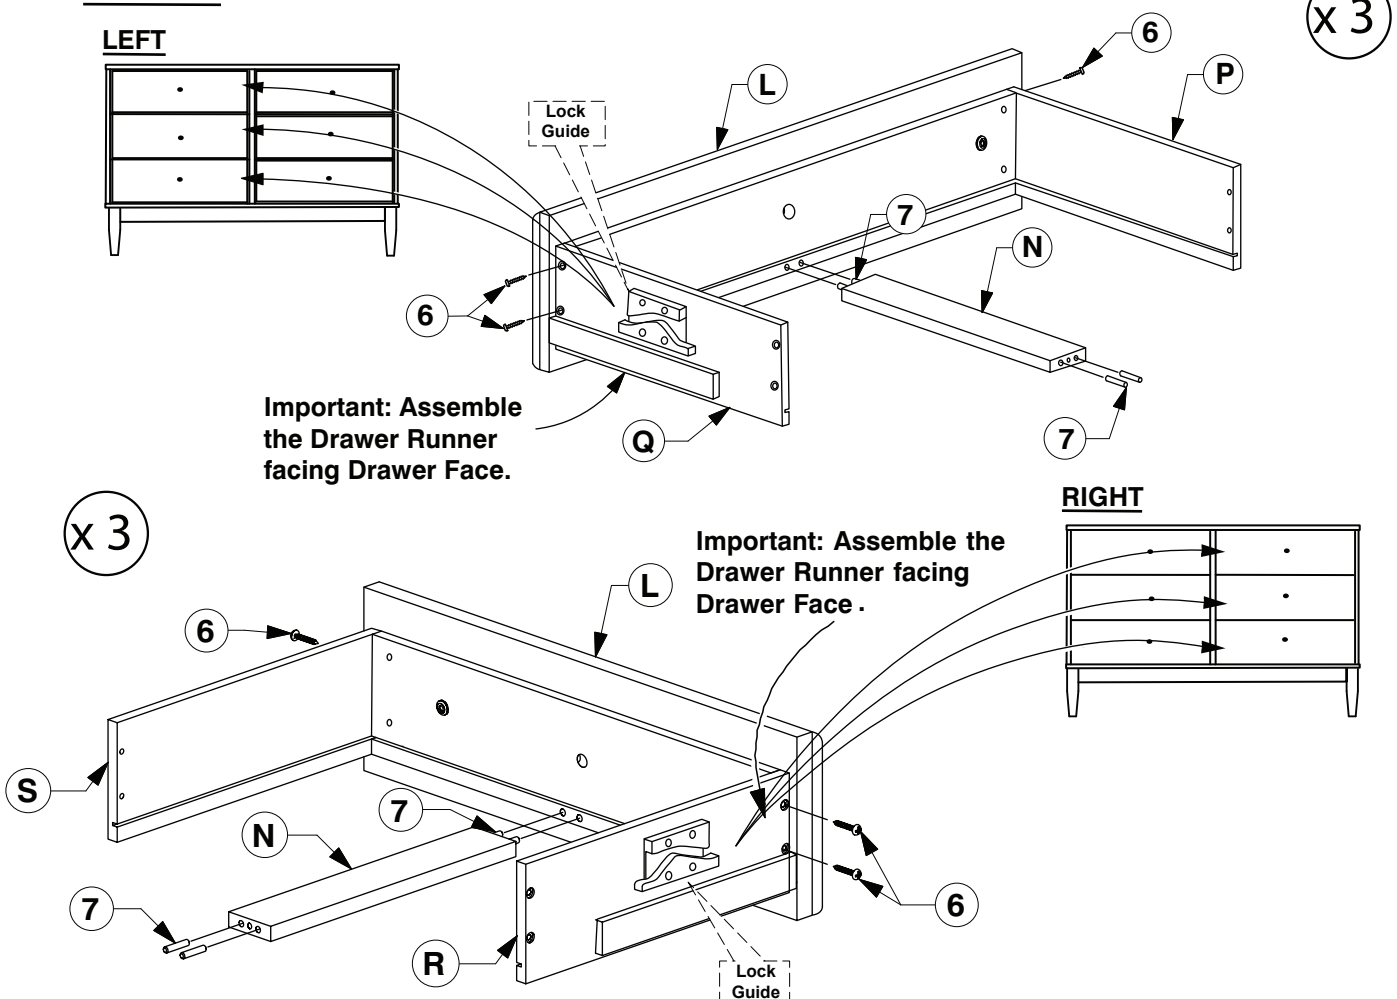

9009 6 Drawer Dresser

Assembly Instructions


WI-0724

3 Assemble the Drawers.

STEP 3.2


x6

* 3 Assemble the left and right drawers as shown below

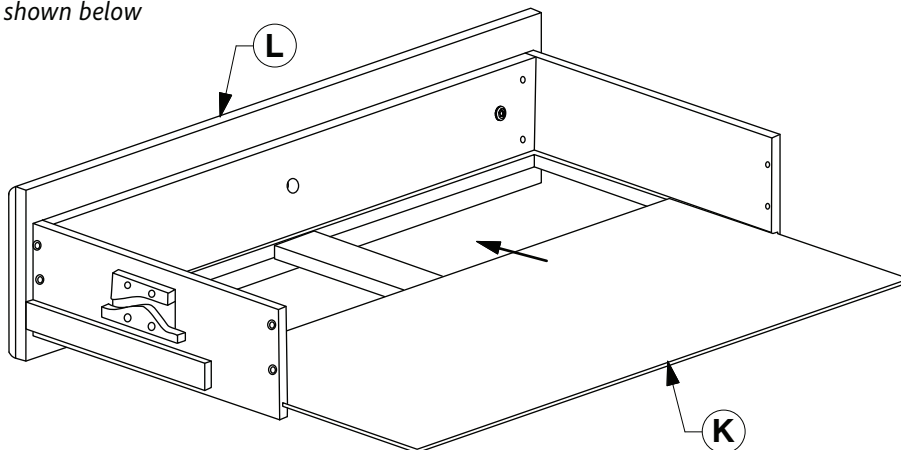


STEP 3.3

x6

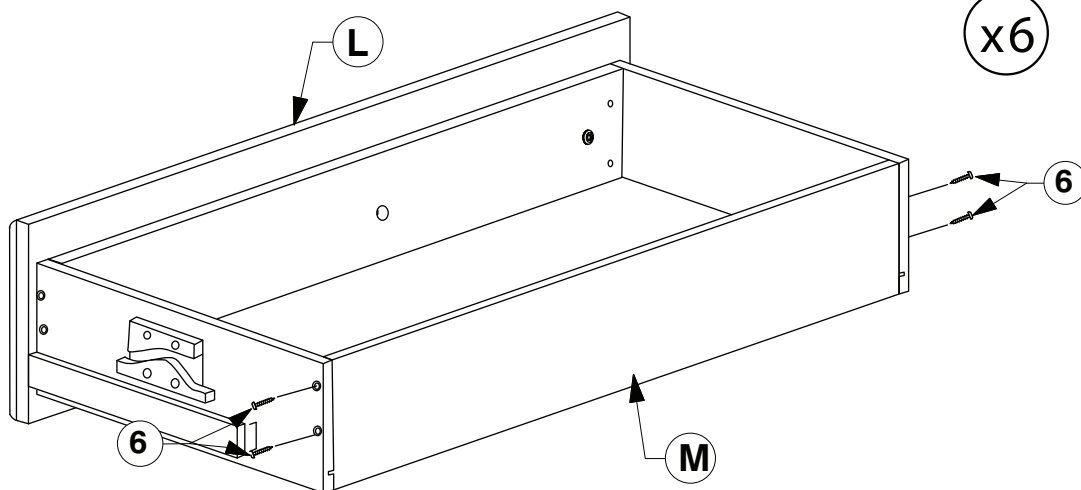

STEP 3.4

x6

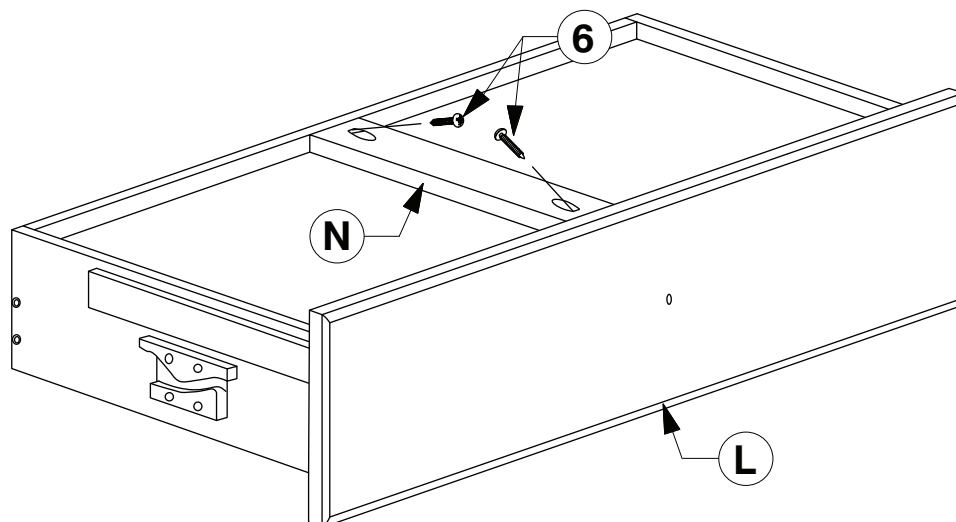


9009 6 Drawer Dresser


Assembly Instructions

WI-0724

4 Fit the 'L' Bracket to the Side Panel (G & J).

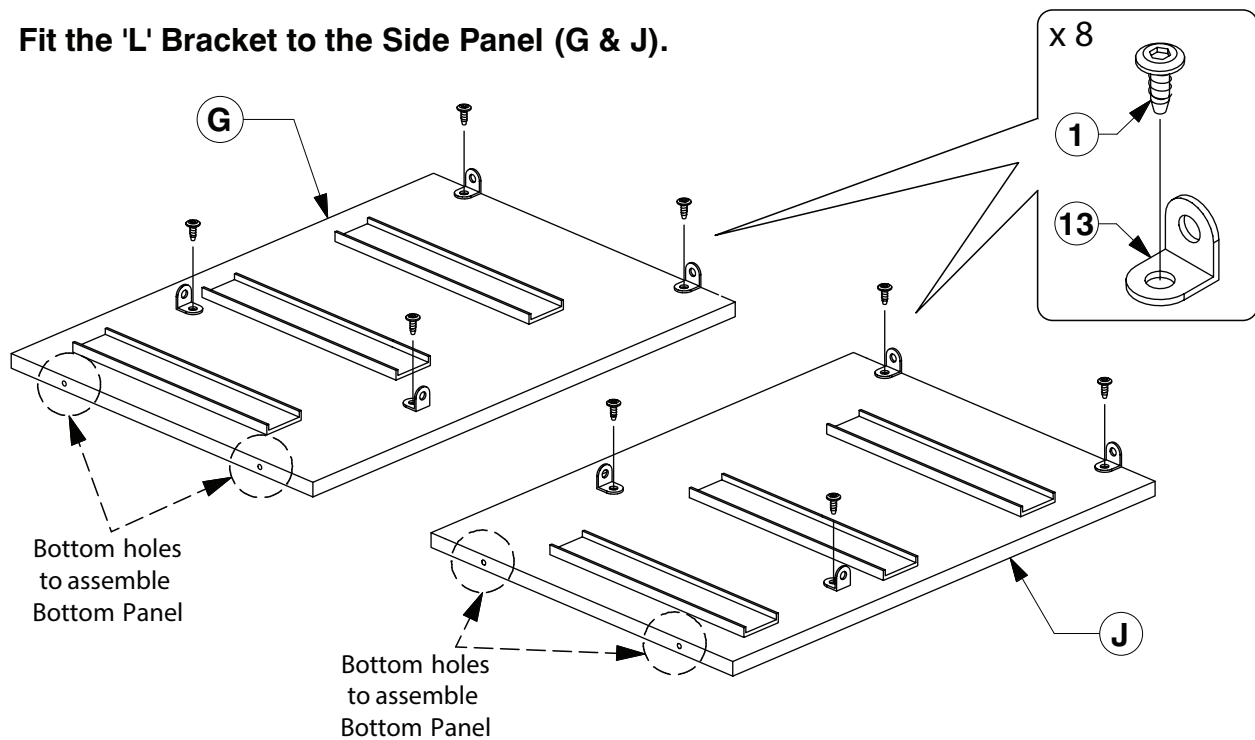

5 Fit the Side Panel- Right Hand (J) & Center Frame (H) to the Top Panel (A).

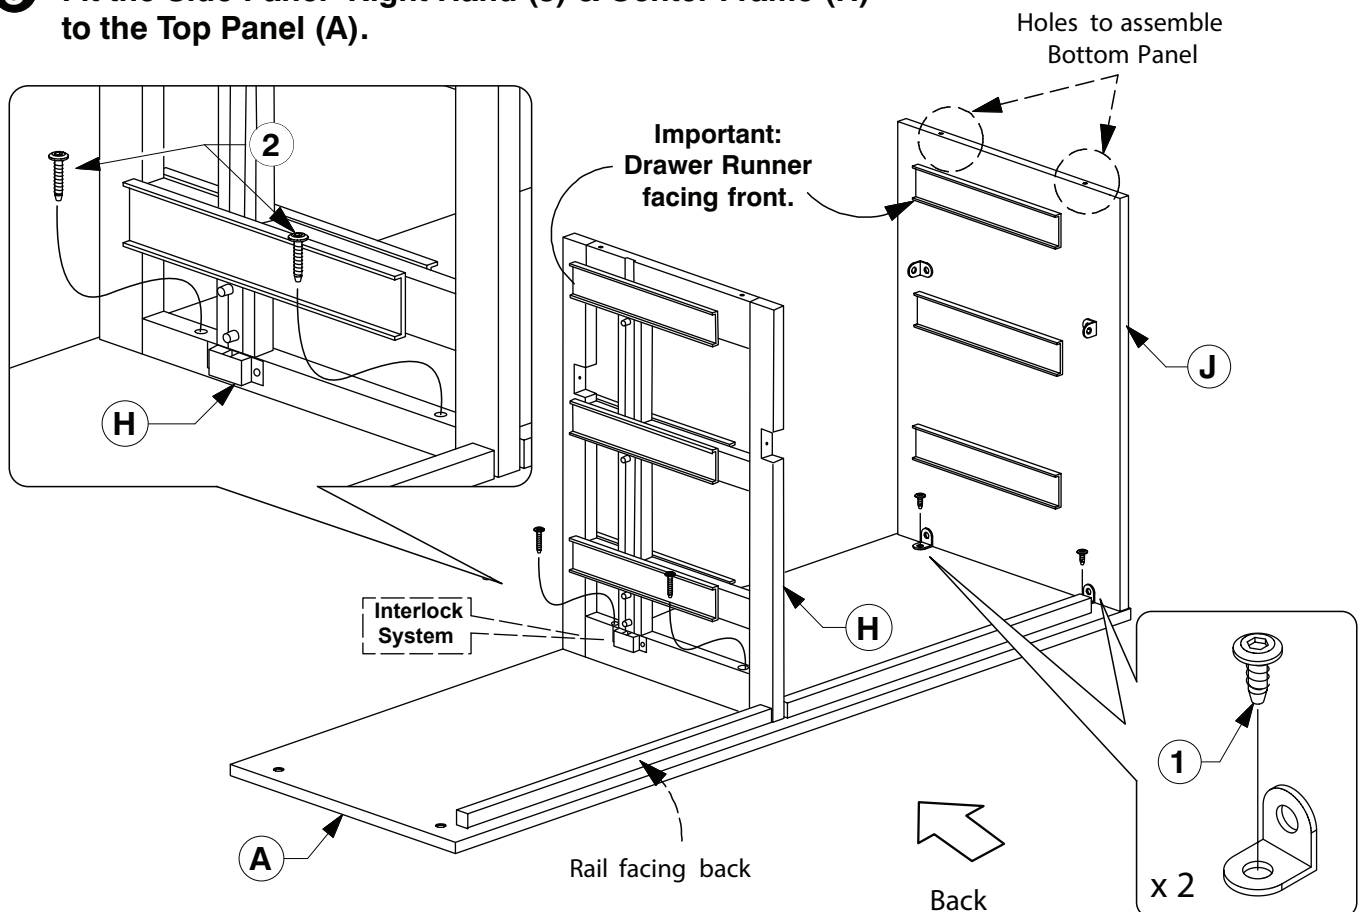


9009 6 Drawer Dresser


Assembly Instructions

WI-0724

- 6** Fit the Support Bar (C) to the Side Panel- Right Hand (J) & Center Frame (H) as shown.

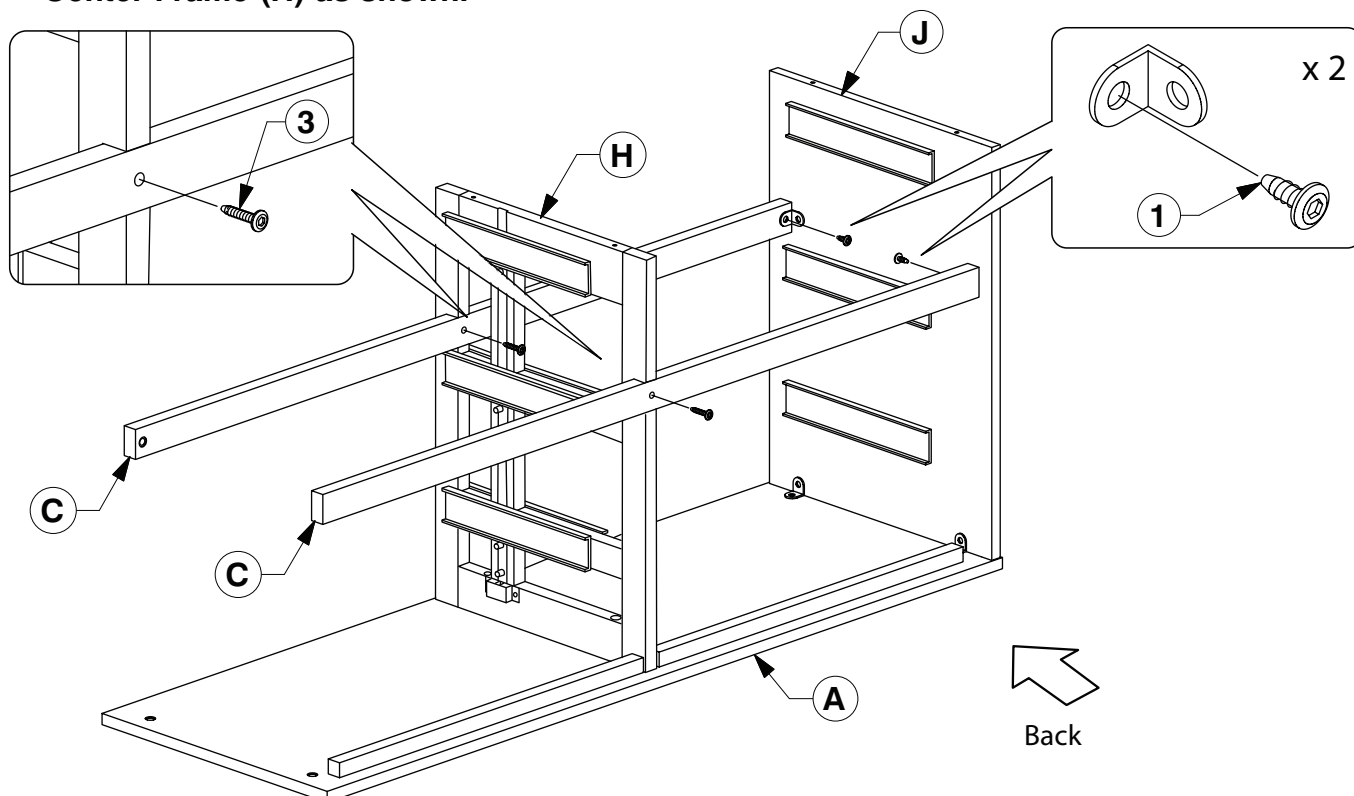

- 7** Fit the other side of Side Panel- Left Hand (G) to the Top Panel (A) & Support Bar (C).

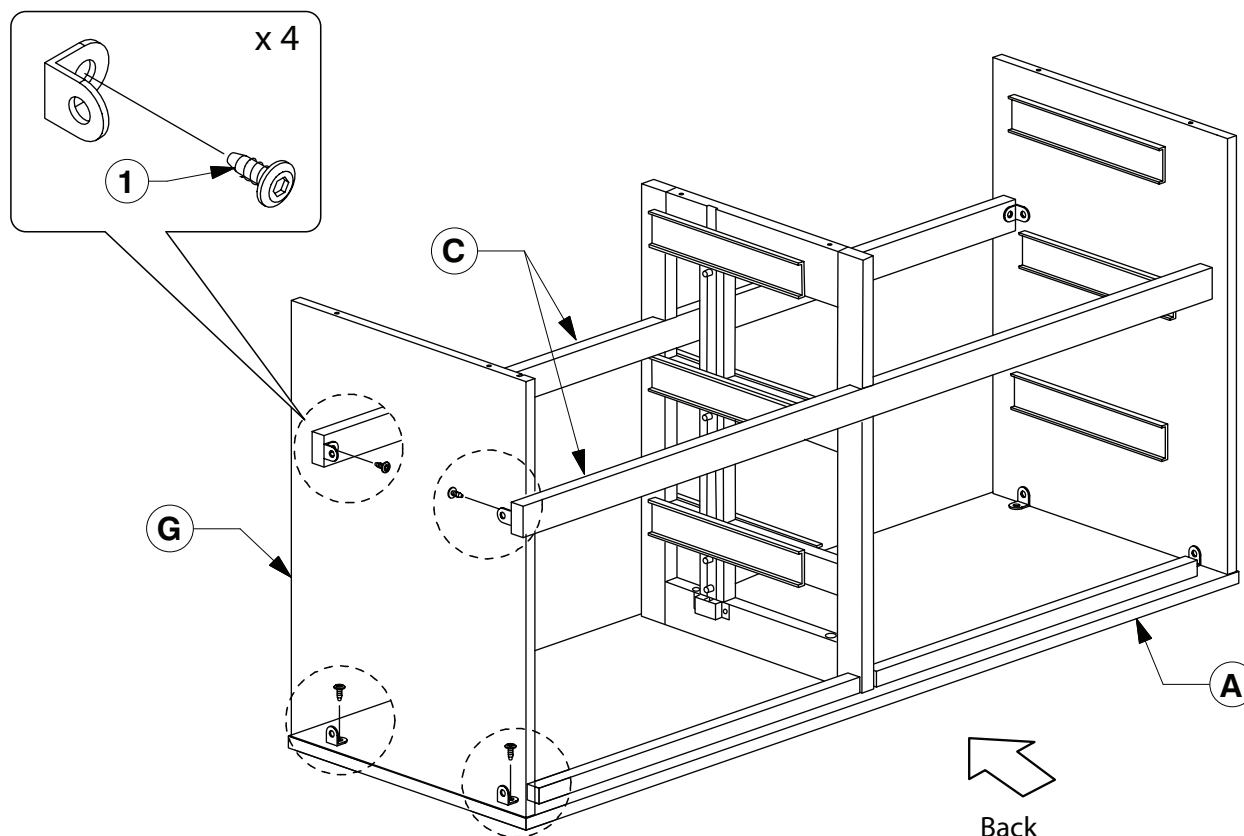


9009 6 Drawer Dresser


Assembly Instructions

WI-0724

- 8** Assembled the Bottom Panel (B) to the Frame.

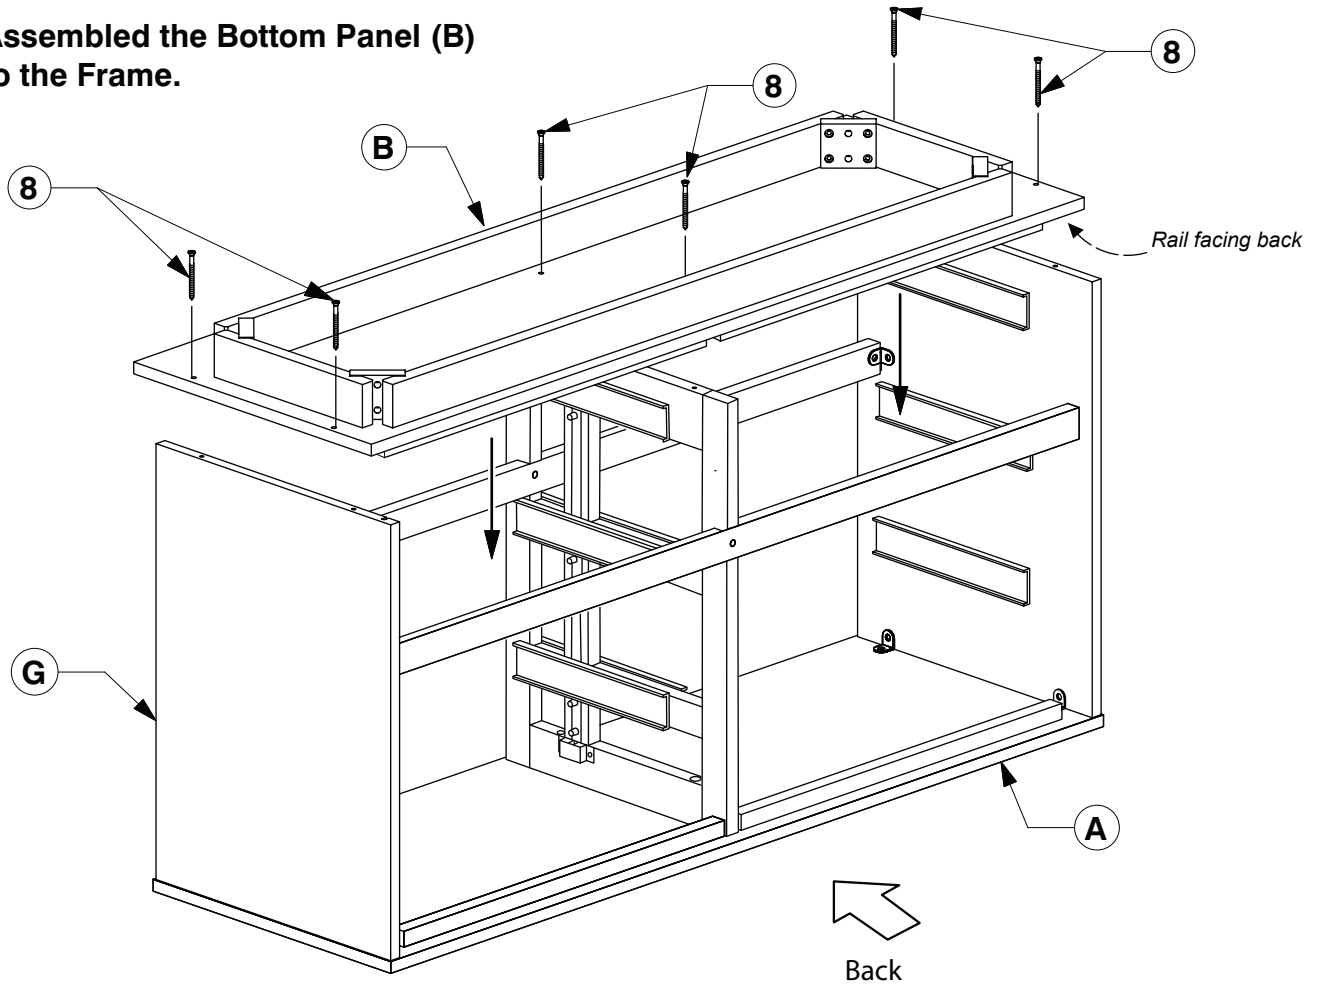

- 9** Attached the Back Panel- wider (D) to the back of the Frame.

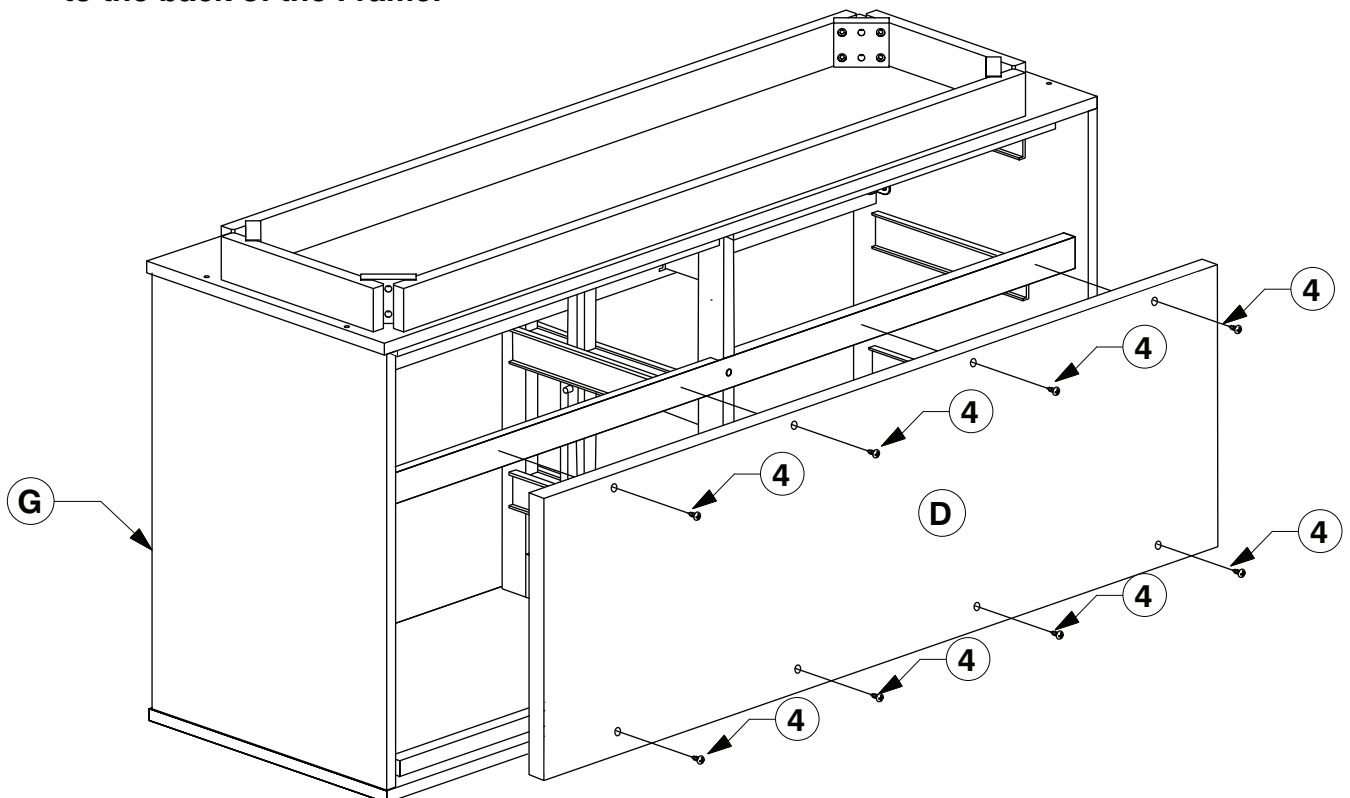


9009 6 Drawer Dresser


Assembly Instructions

WI-0724

- 10** Attached the Back Panel- narrow (E) to the back of the Frame.

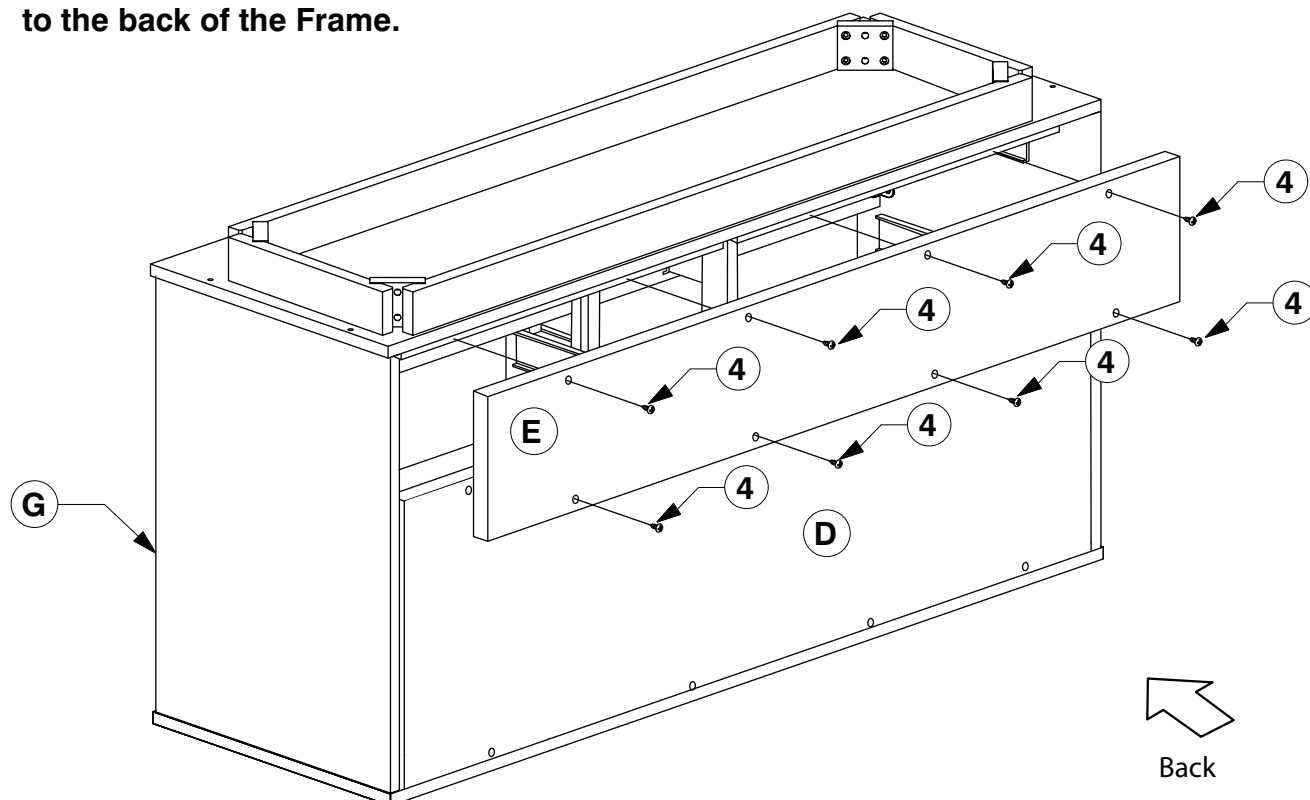

- 11** Fit the Post (F) to the Bottom Panel (B) as shown below.

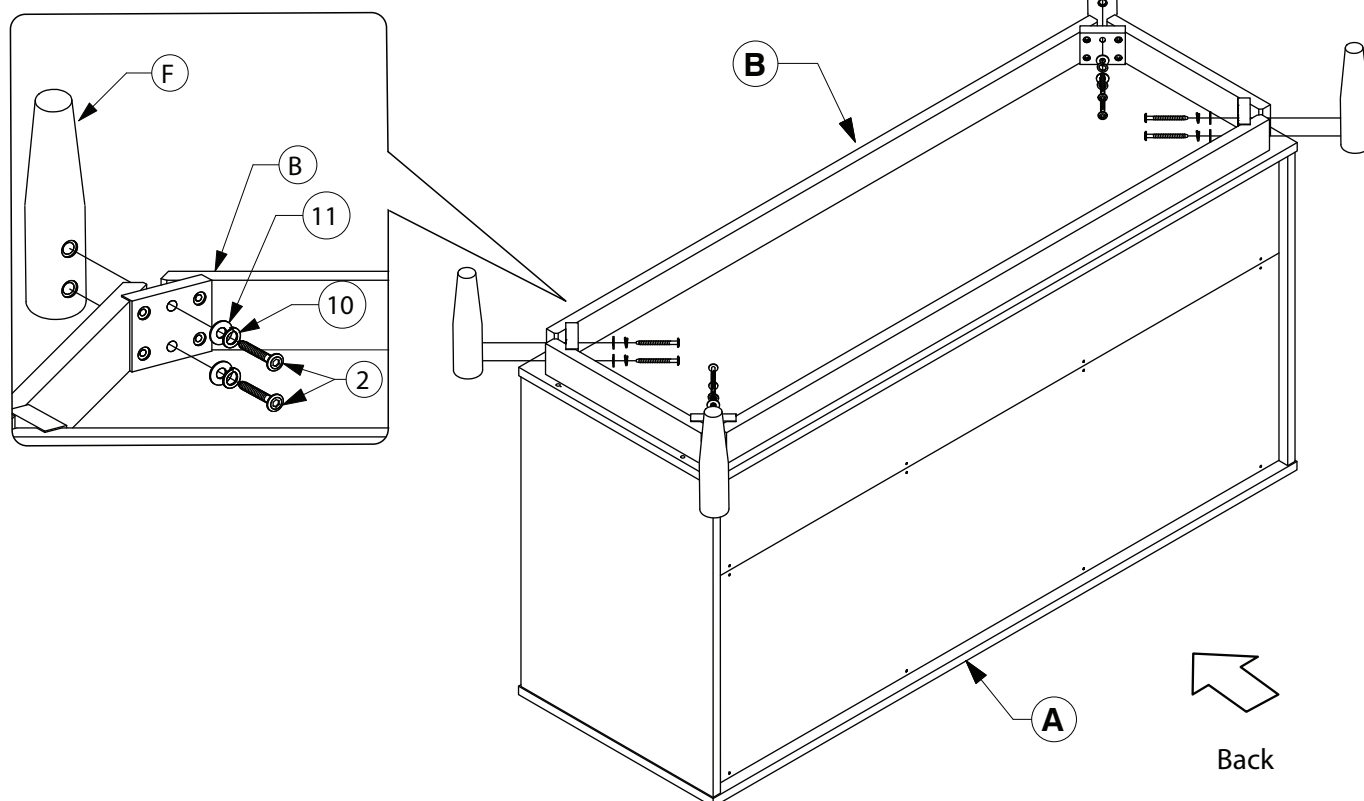

9009 6 Drawer Dresser


Assembly Instructions

WI-0724


12 Install the Drawers.

- Push the Interlock bar **upwards** before inserting the drawers.


LEFT

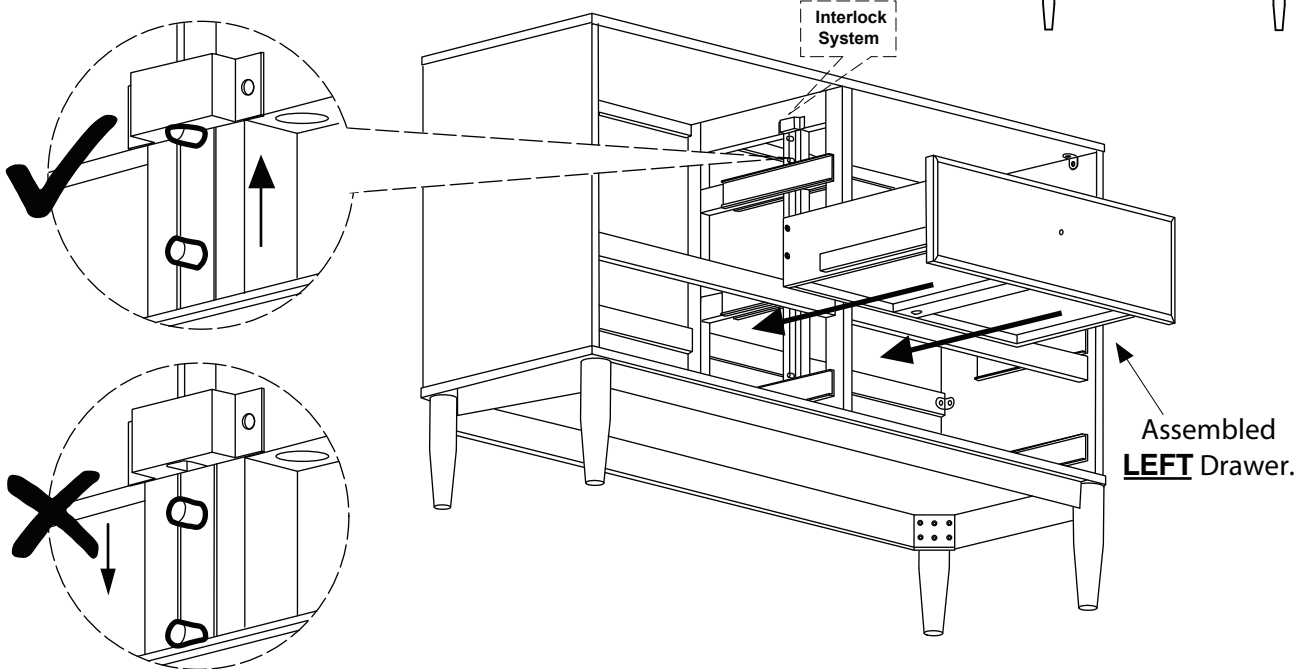

RIGHT

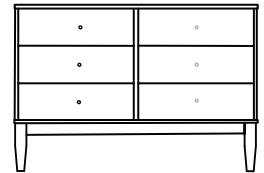

- Push the Interlock bar **upwards** before inserting the drawers.

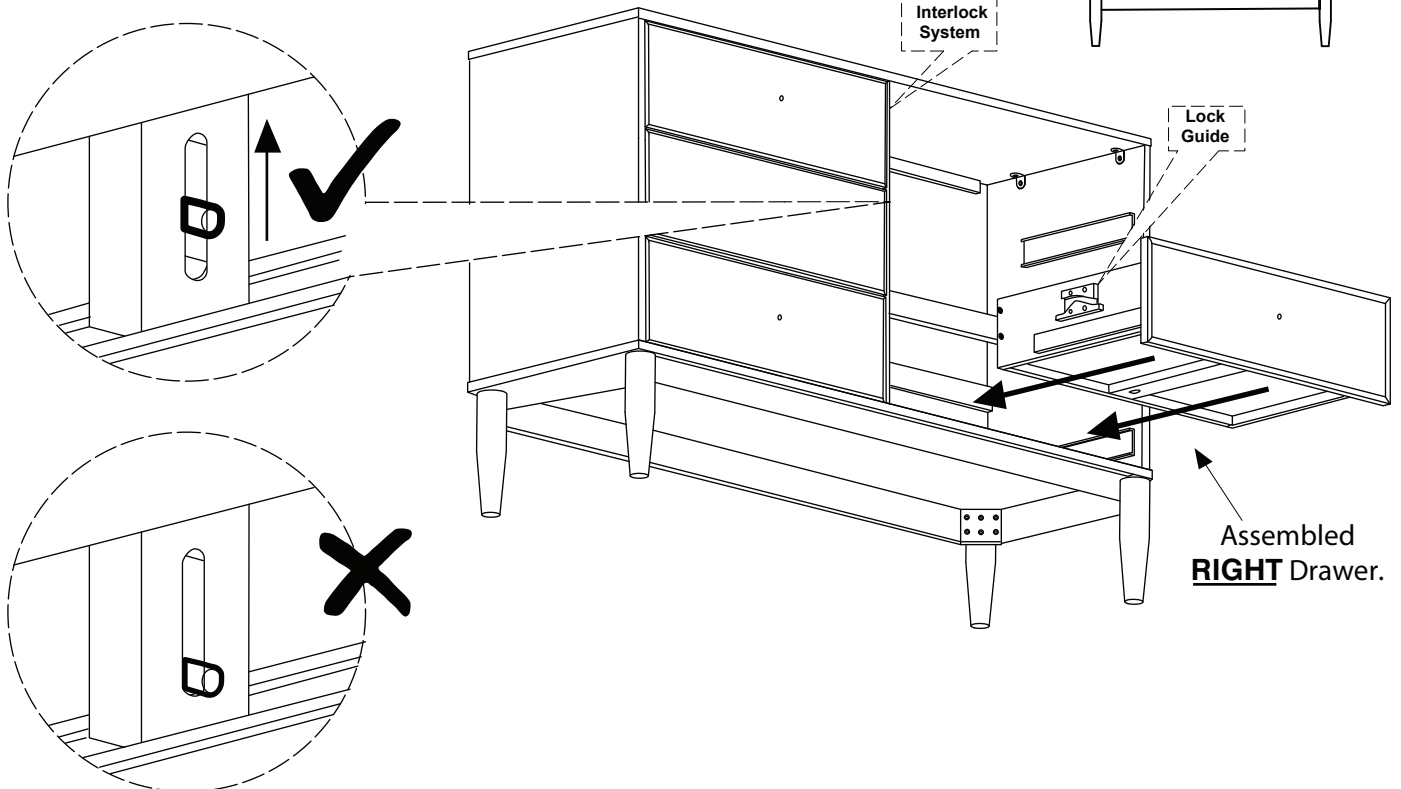


9009 6 Drawer Dresser

Assembly Instructions

WI-0724


13 Adjust the Drawer Face (L).

- * NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

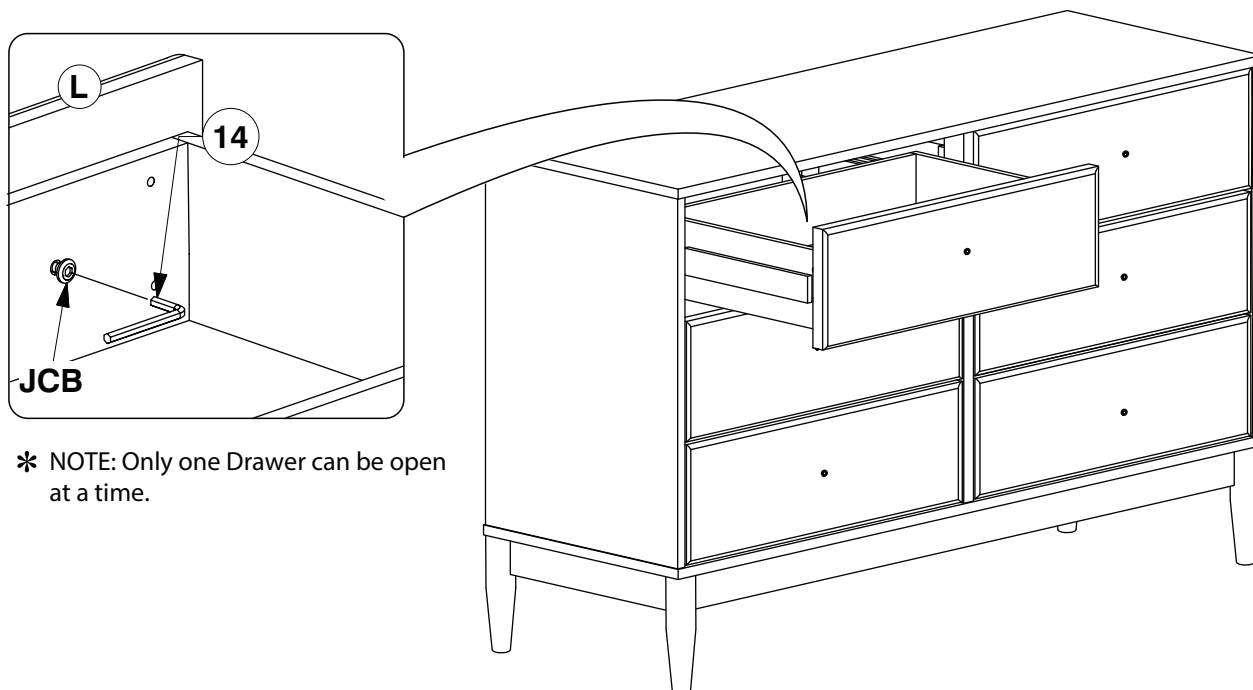

- * NOTE: Only one Drawer can be open
at a time.

14 After the Drawer Faces (L) are aligned, secure with wood screws.

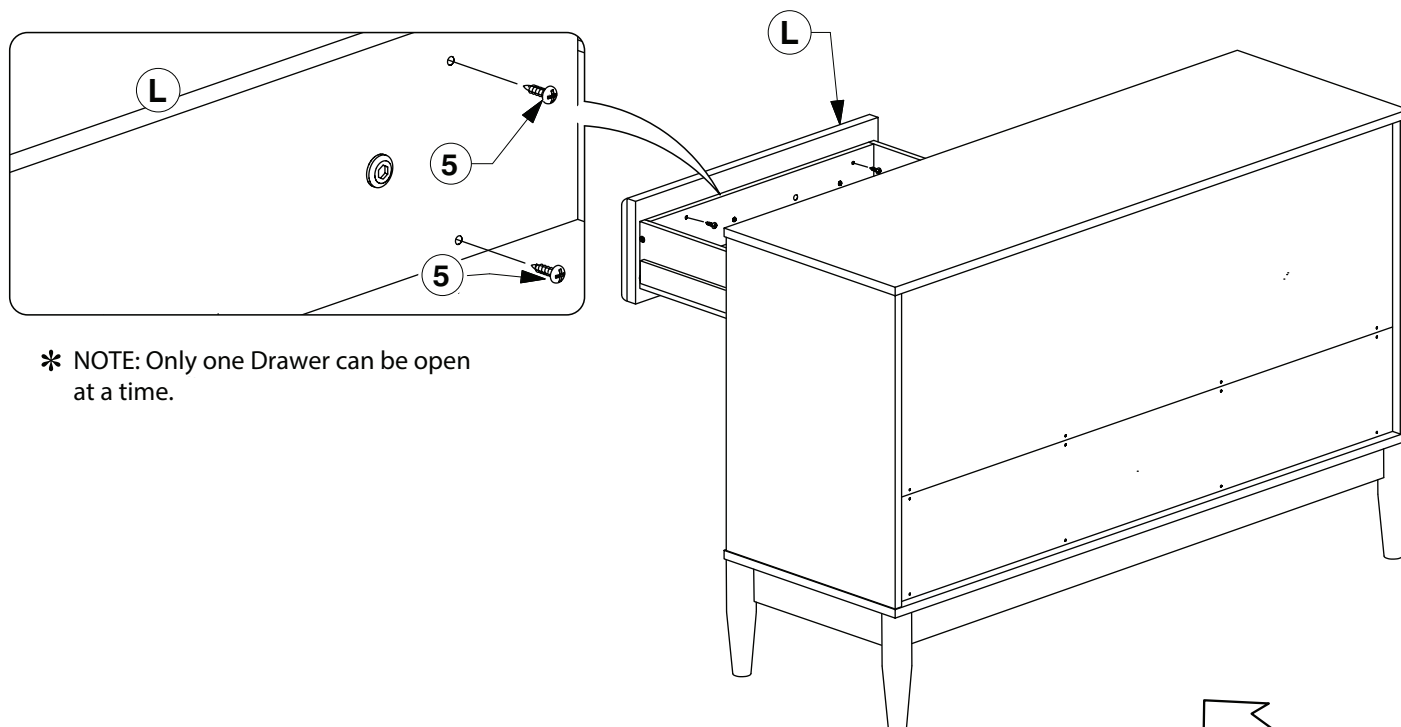

- * NOTE: Only one Drawer can be open
at a time.


Back


9009 6 Drawer Dresser

Assembly Instructions


WI-0724

15 Finally, fit the Handle to the Drawer Face (L).




* NOTE: Only one Drawer can be open at a time.

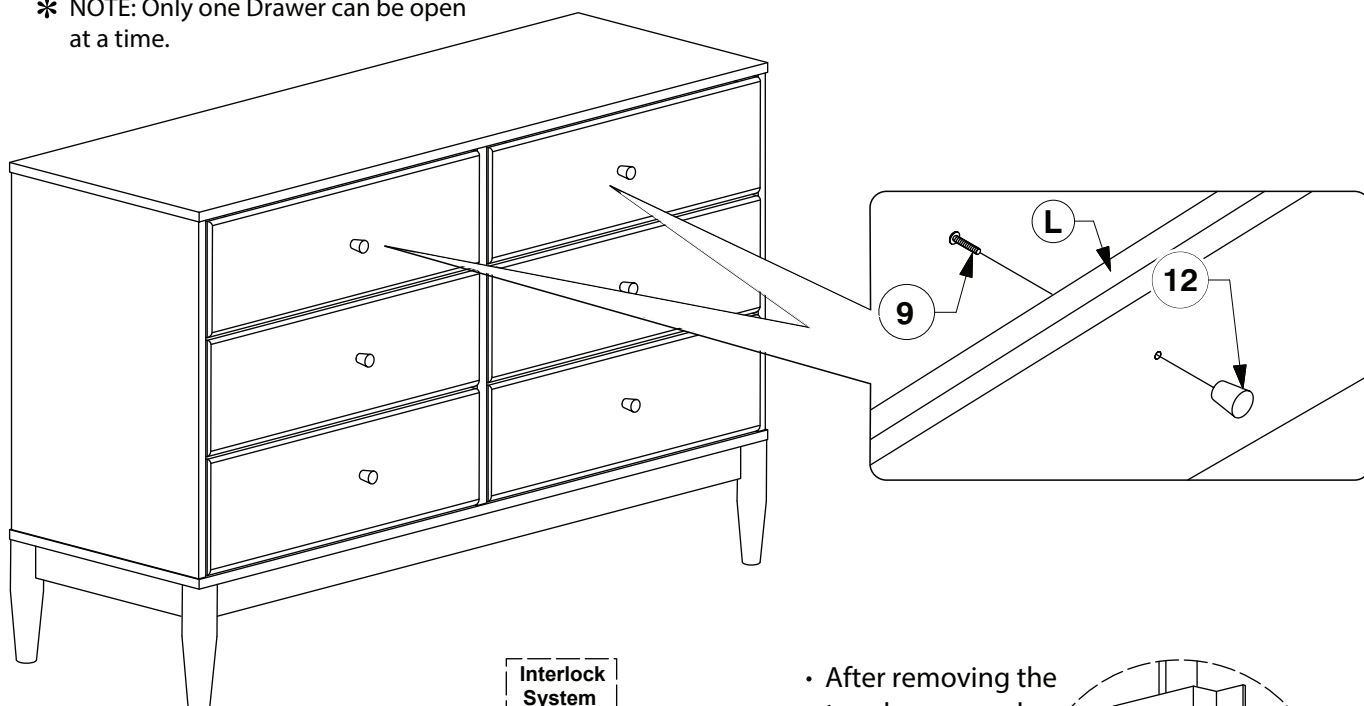


16 Remove the Drawers.

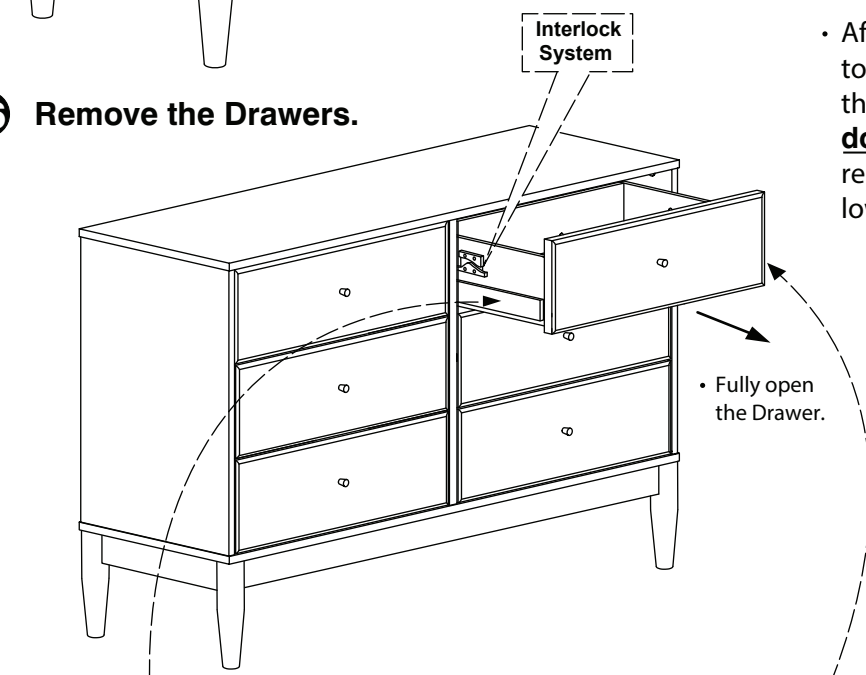

• After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

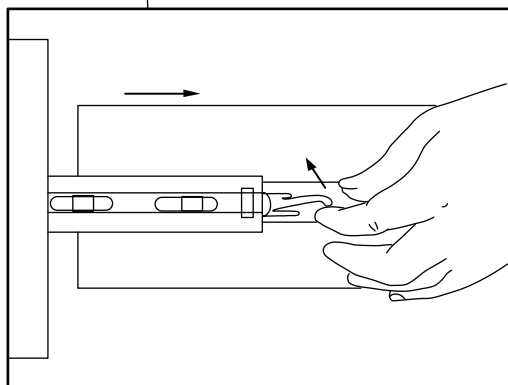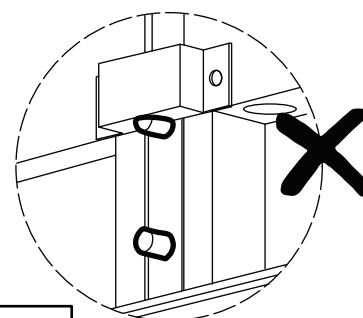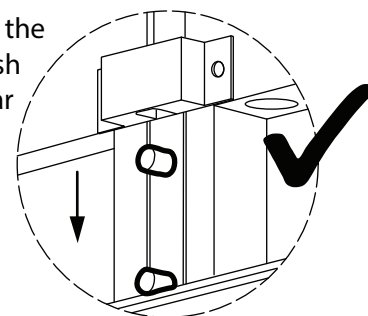

• Lift the **LEFT** side clip up.

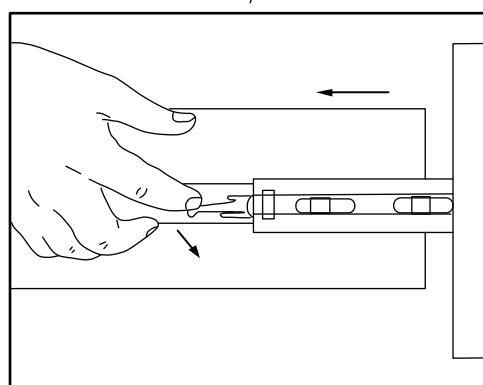


• Push the **RIGHT** side clip down.

9009 4 Drawer Chest


Assembly Instructions

WI-0724

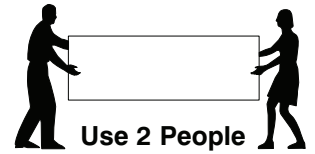

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

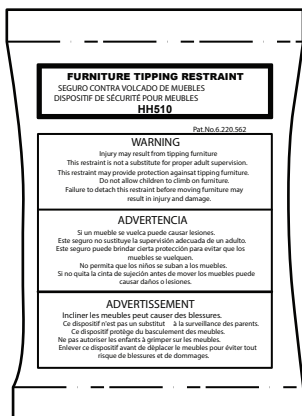

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9009 4 Drawer Chest

Assembly Instructions


WI-0724

1 Parts List


Parts in Box A:



A Top Panel x 1

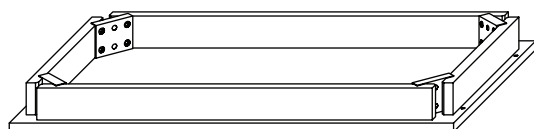

B Bottom Panel x 1




C Back Panel
(Wider) x 1




D Back Panel
(Narrow) x 1



F Support Bar x 2

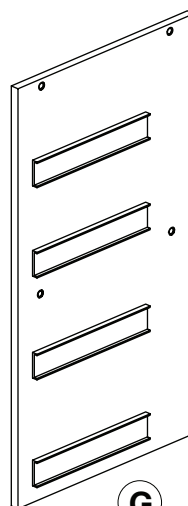

G Side Panel
(Left Hand) x 1

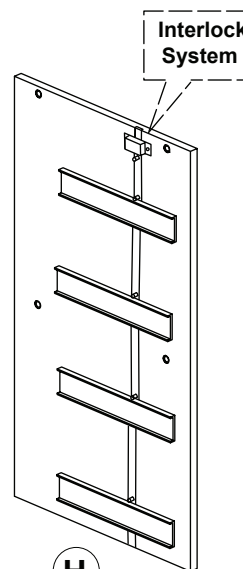

H Side Panel
(Right Hand) x 1



E Post x 4



J Drawer Bottom x 4


Parts in Box B:



K Drawer Face x 4




L Drawer Back x 4




M Drawer Rail x 4

N Drawer Side
(Left Hand) x 4

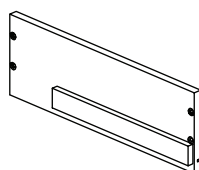

O Drawer Side
(Right Hand) x 4

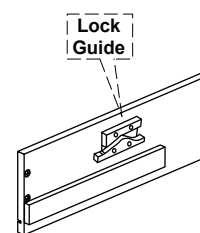


9009 4 Drawer Chest

Assembly Instructions


WI-0724

2 Hardware List

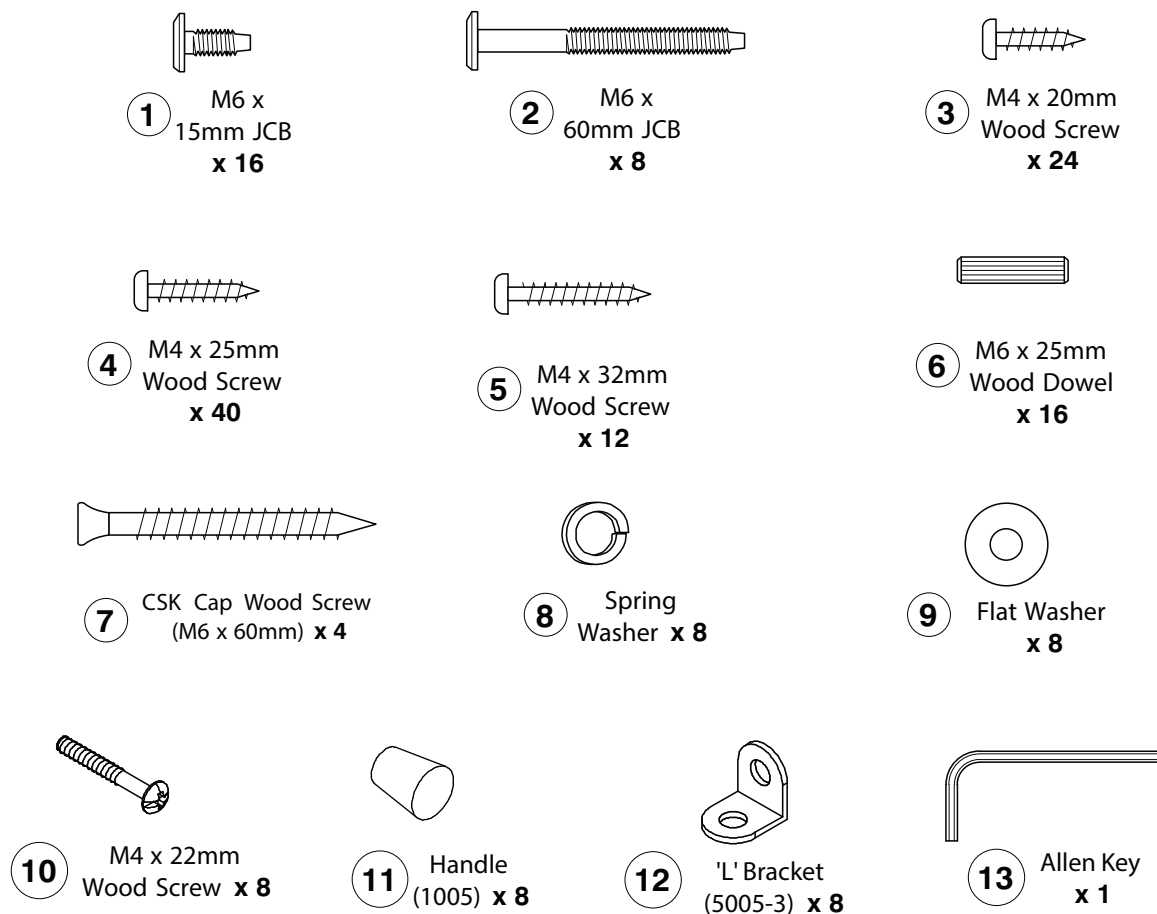

3 Assemble the Drawer Sides (N & O) & Drawer Rail (M) to the Drawer Face (K).

x4

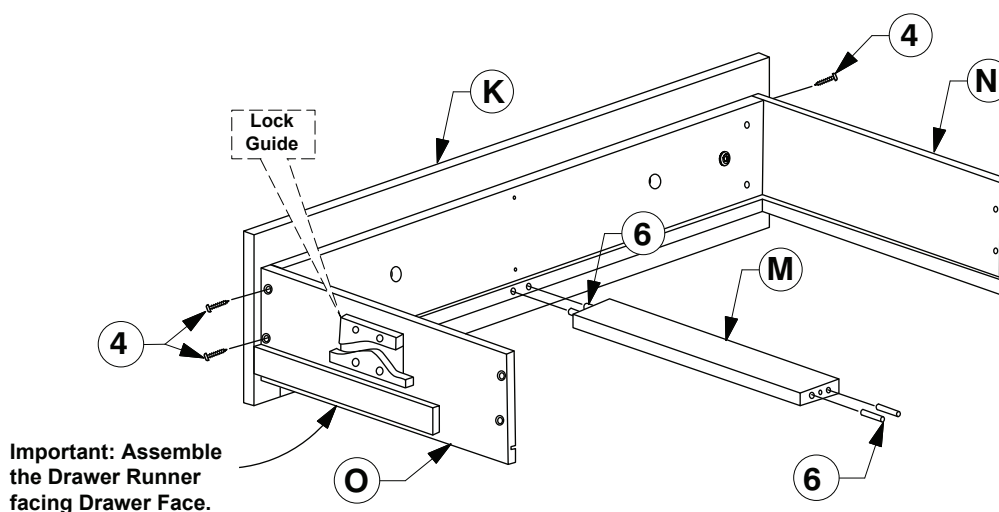


9009 4 Drawer Chest

Assembly Instructions


WI-0724

- 4** Slide the Drawer Bottom (J) into the groove on the Drawer Sides (N & O).

x4

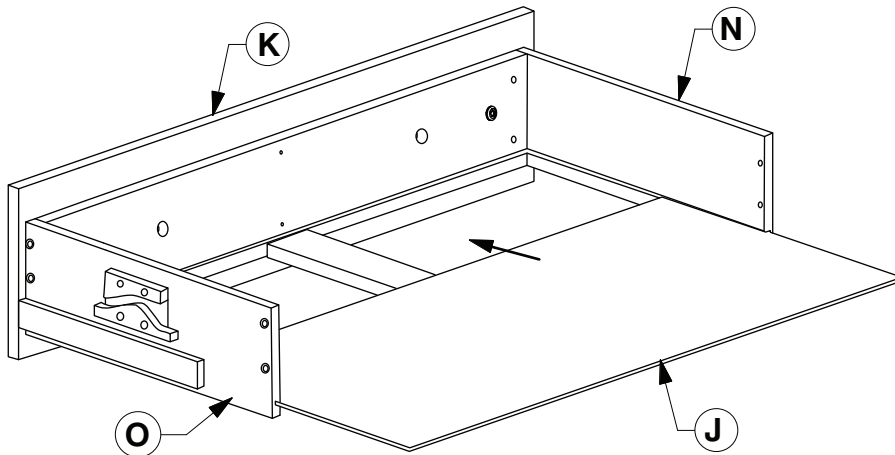

- 5** Assemble the Drawer Back (L) to the Drawer Sides (N & O).

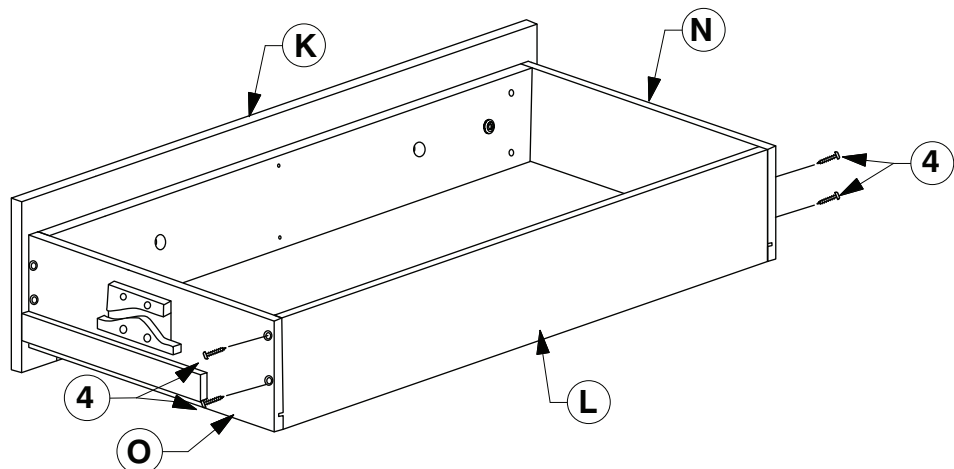

Assembly Instructions

6 Turn the Drawer over to fit angled 25mm Wood screws (4) to the Drawer Rail (M)



WI-0724

-
- Back
- Rail facing back
- Rail facing back
- Important: Drawer Runner facing front.
- A
- G
- H
- 7
- 7
- B
- Hole to assemble Bottom Panel
- 1
- 2


- Fit the Support Bar (F) to the Side Panel (G& H) as shown.**
-
- Diagram illustrating the assembly of the Support Bar (F) to the Side Panel (G & H) as shown.
- The diagram shows the internal structure of the unit, including the Side Panel (G & H) and the Support Bar (F). The Support Bar (F) is shown being inserted into the Side Panel (G & H) using a screw (1).
- Callout details:
- x 4**: Quantity of screws (1) required.
 - 1**: The screw used to secure the Support Bar (F) to the Side Panel (G & H).
- Labels in the diagram:
- A**: Back panel.
 - B**: Bottom panel.
 - F**: Support Bar.
 - G**: Side Panel.
 - H**: Side Panel.

9009 4 Drawer Chest


Assembly Instructions

WI-0724

- 10** Attached the Back Panel (C & D) to the back of the frame.

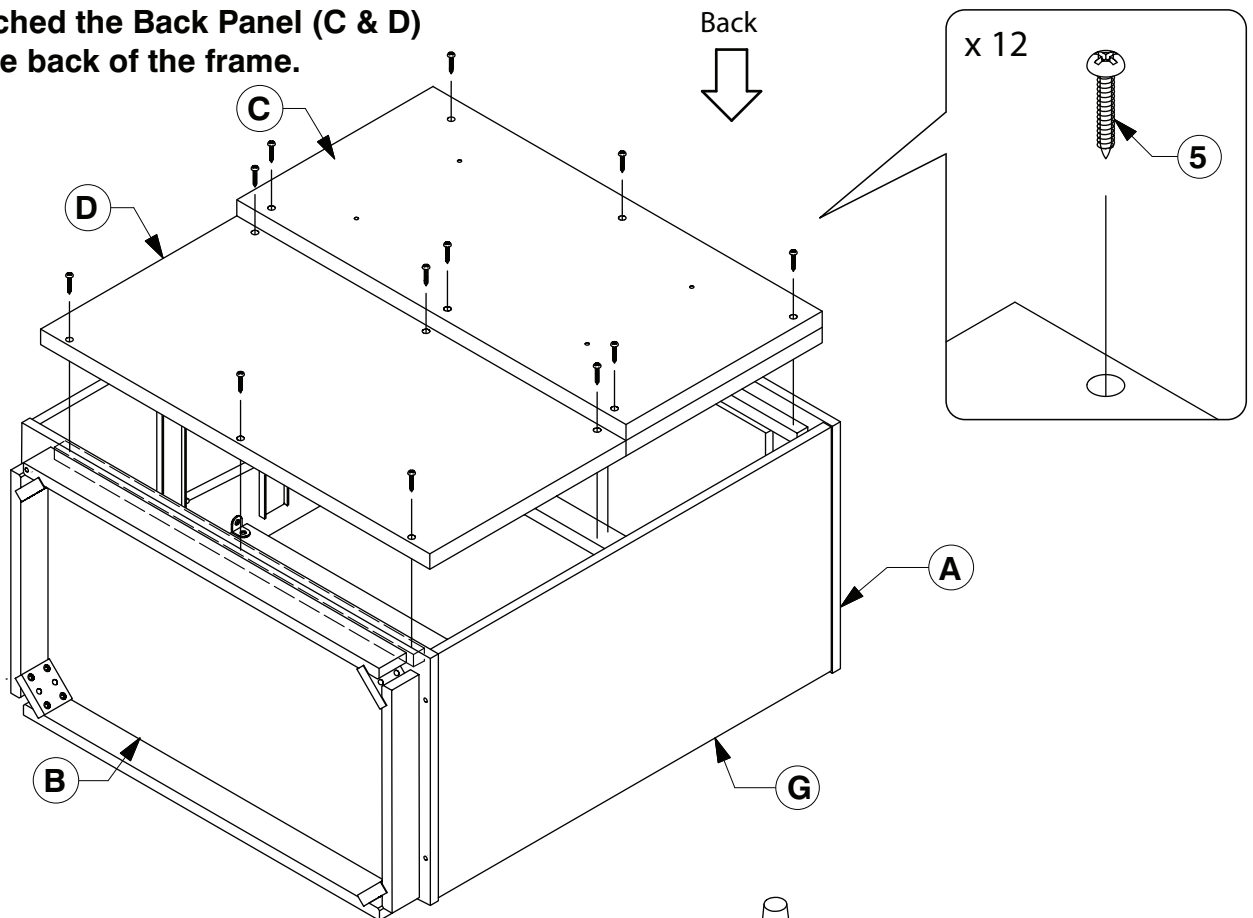

- 11** Turn the chest over to fit the Post (E) to the Bottom Panel (B).

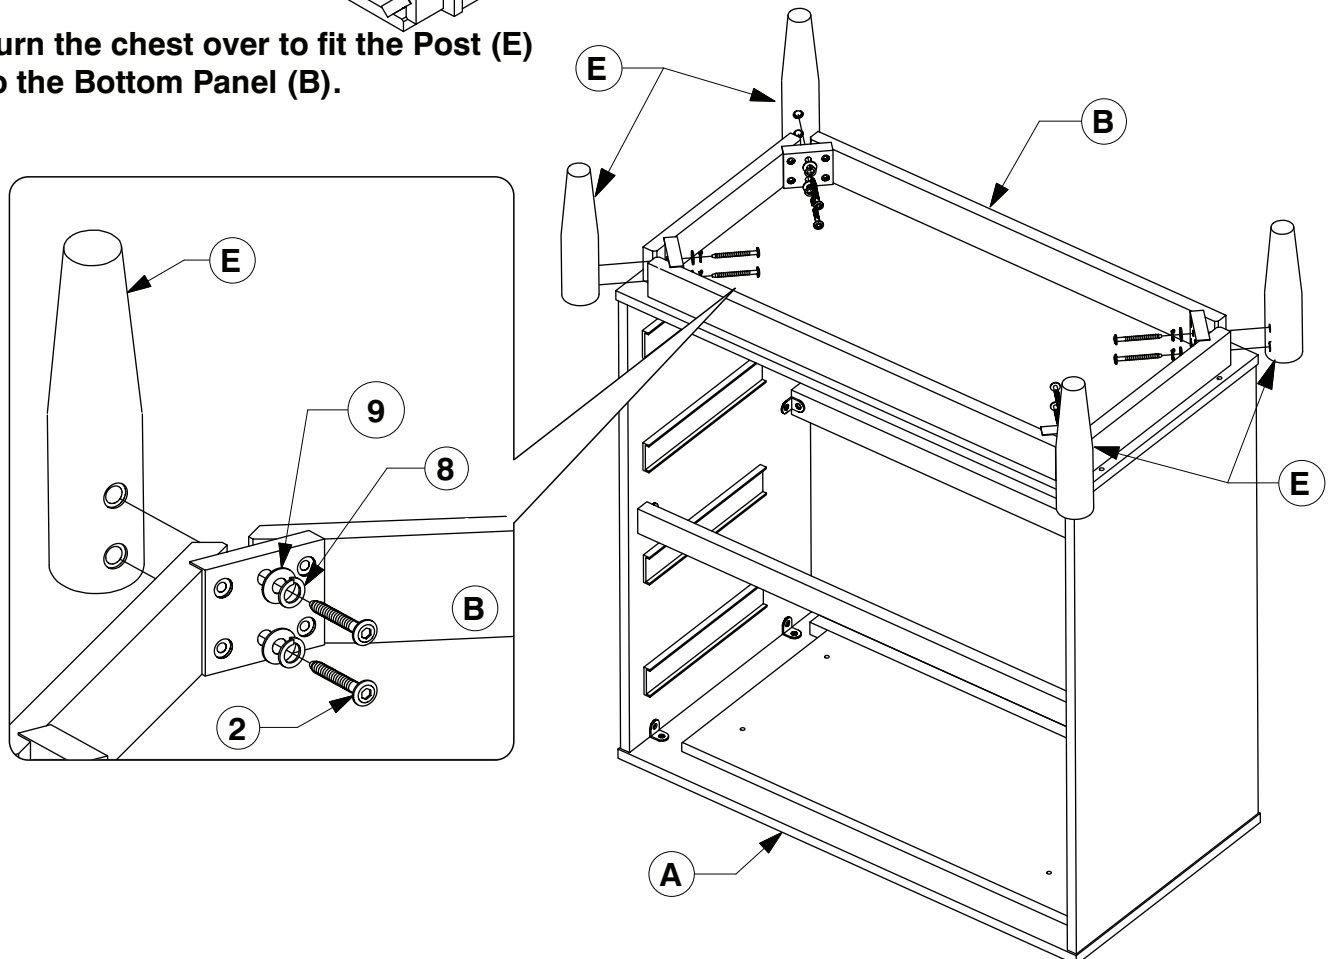


9009 4 Drawer Chest

Assembly Instructions

WI-0724



12 Install the Drawer.

- Push the Interlock bar **upwards** before inserting the drawers.

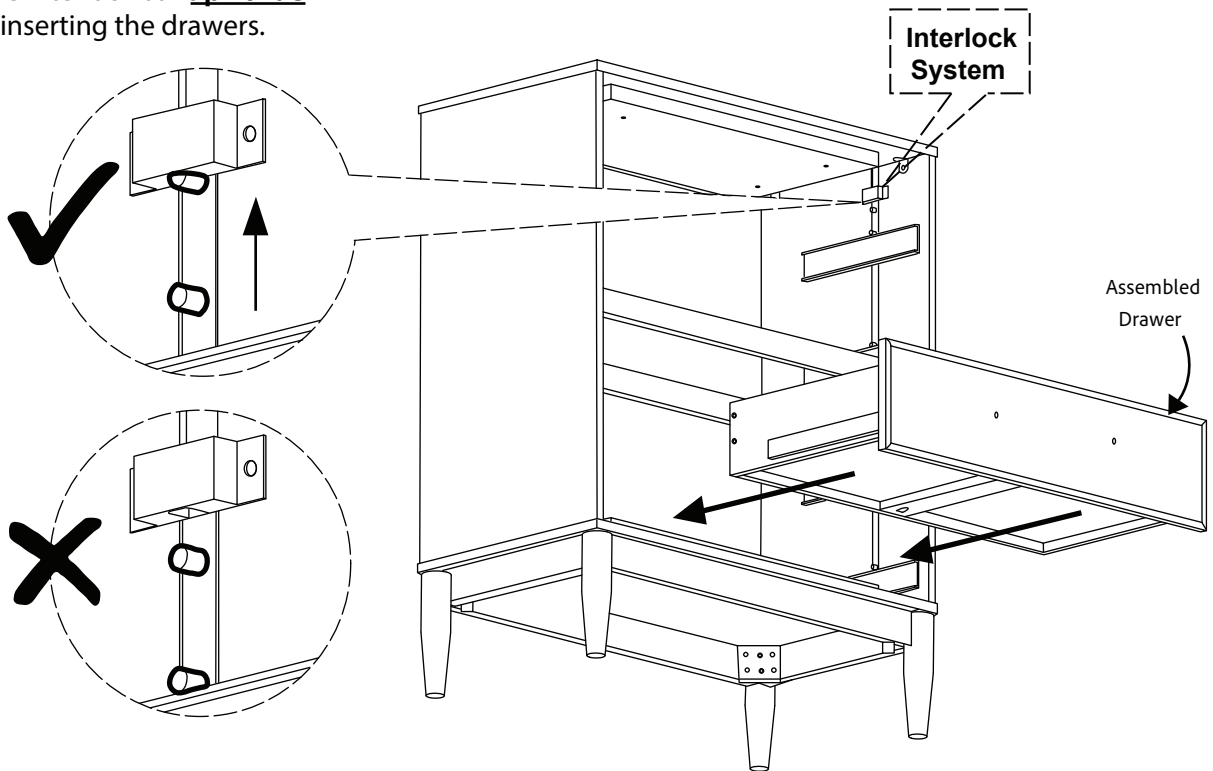

13 Fit and adjust the Drawer Face (K).

- * NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if the face needs alignment .

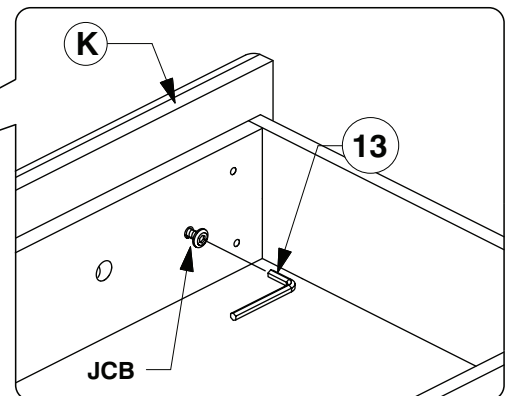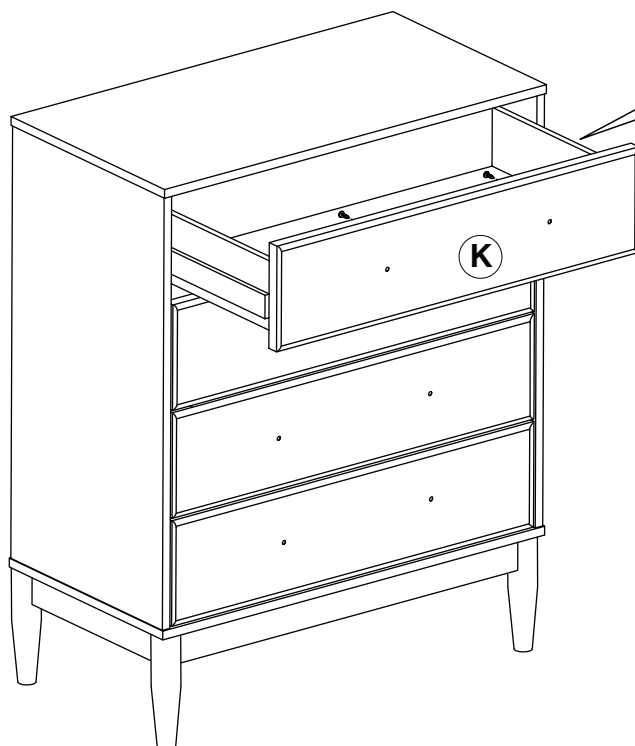


- * NOTE: Only one Drawer can be open at a time

9009 4 Drawer Chest

Assembly Instructions

WI-0724

- 14** After the Drawer Faces (K) are aligned, secure with wood screws.

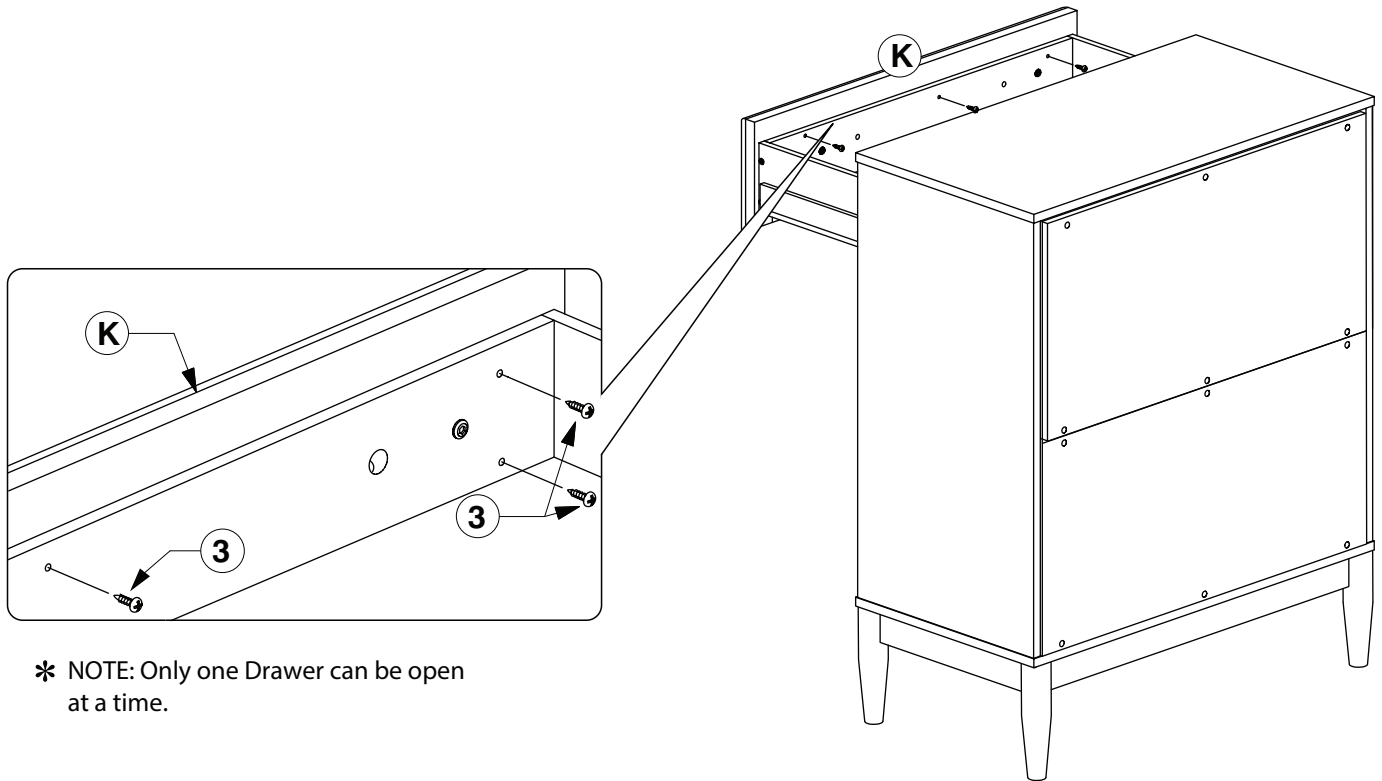


* NOTE: Only one Drawer can be open at a time.



- 15** Finally, fit the Handle to the Drawer Face (K).

* NOTE: Only one Drawer can be open at a time.

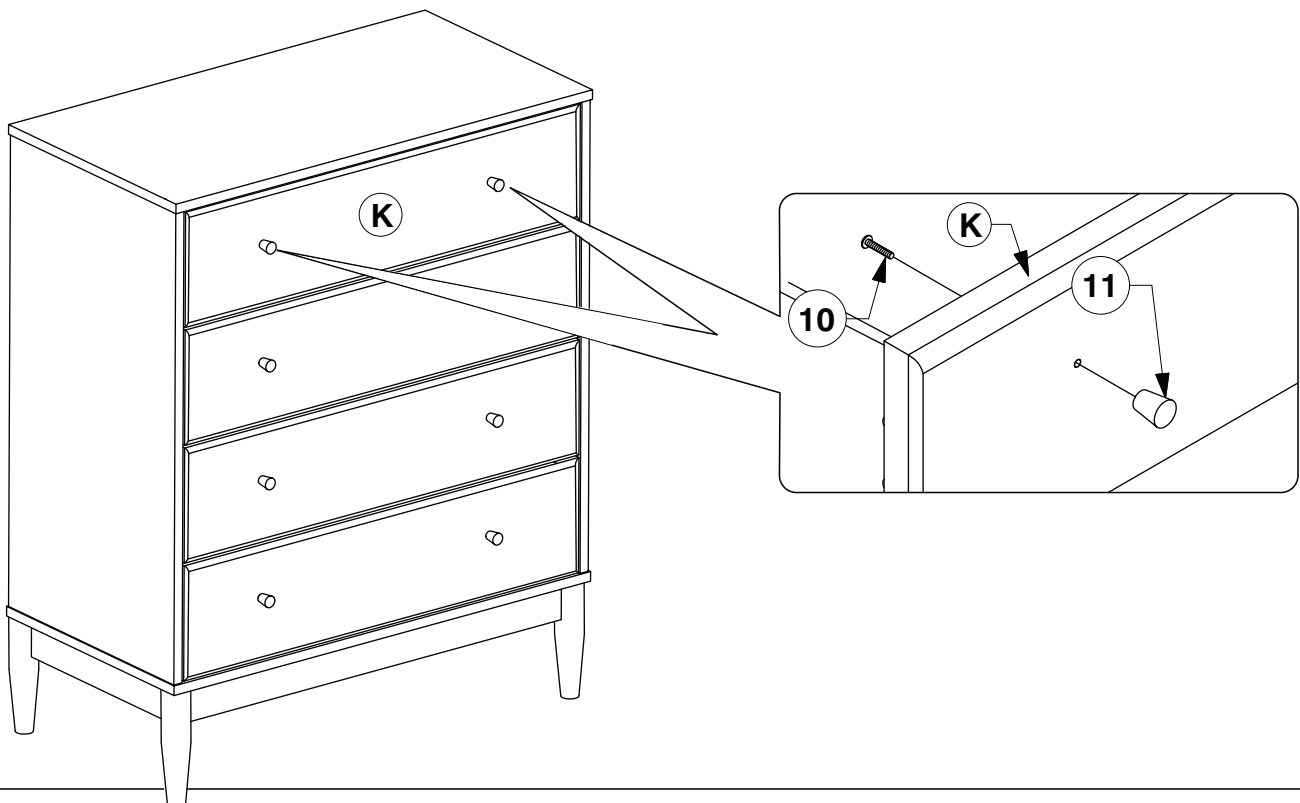


9009 4 Drawer Chest

Assembly Instructions



WI-0724

16 Remove the Drawers.


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

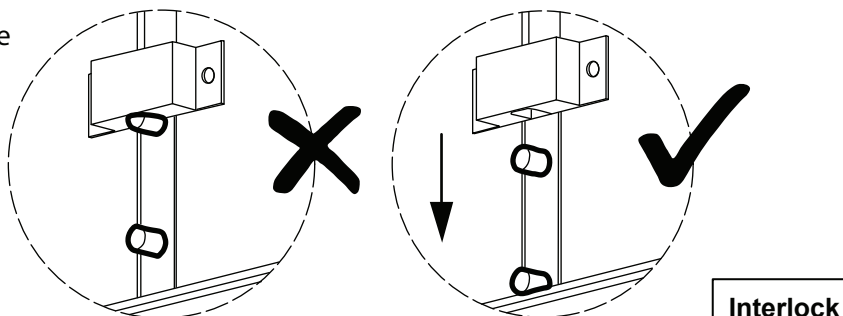

Interlock System

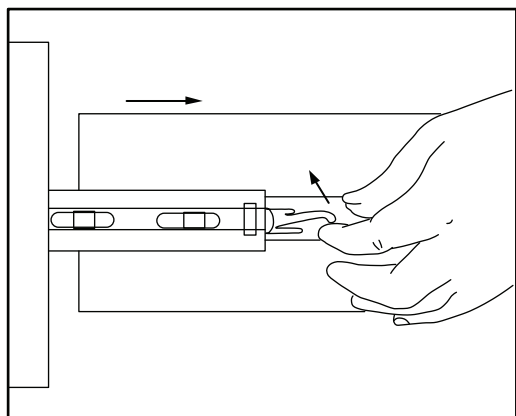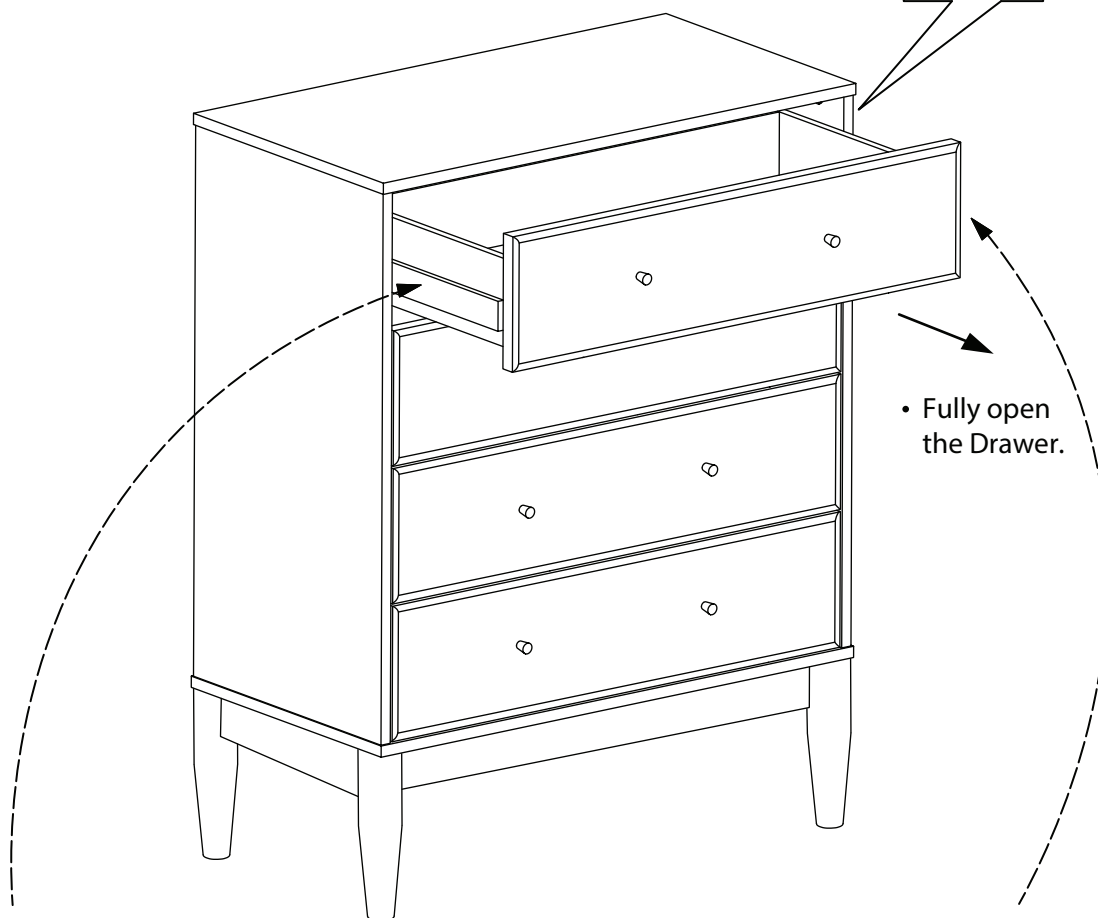

- Lift the **LEFT** side clip up.



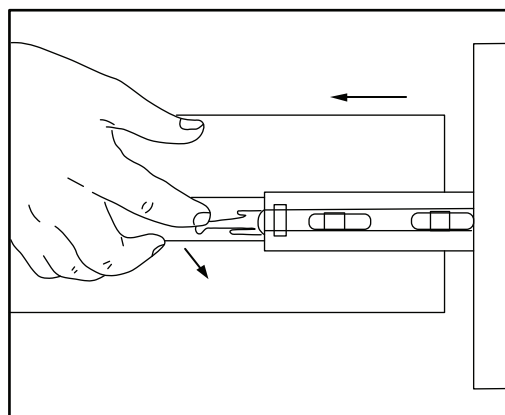


- Push the **RIGHT** side clip down.

9009 2D Night Stand


Assembly Instructions

WI-0624

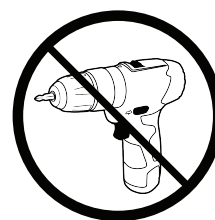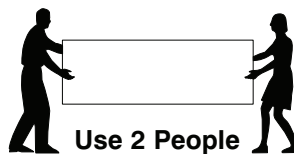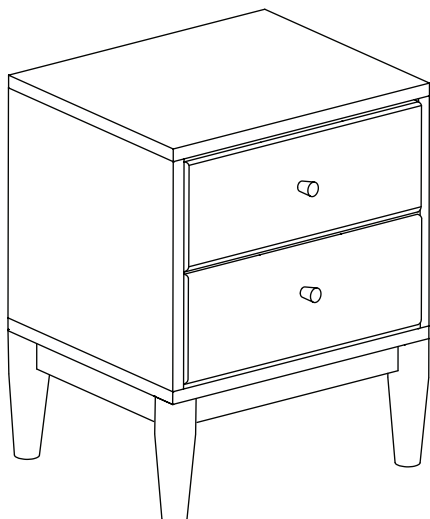


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


1 Parts List

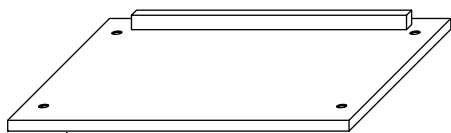


A Top Panel x 1




D Back Panel x 1

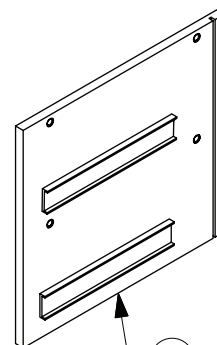

F Side Panel (Left Hand) x 1

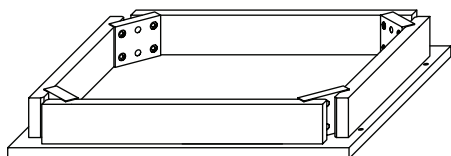


B Bottom Panel x 1




C Support Bar x 2




E Post x 4

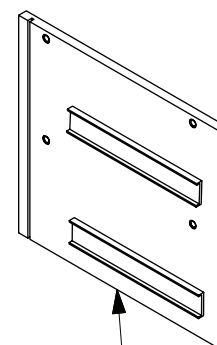


G Side Panel (Right Hand) x 1

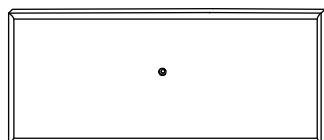


H Drawer Face x 2




J Drawer Back x 2



K Drawer Side (Left Hand) x 2



L Drawer Side (Right Hand) x 2




M Drawer Bottom x 2

9009 2D Night Stand


Assembly Instructions

WI-0724


2 Hardware List

- | | | | | | |
|---|--|---|---|---|--|
| 
1 M6 x 15mm
JCB x 16 | 
2 M6 x 60mm
JCB x 8 | 
3 CSK Cap
Wood Screw
(M6 x 60mm) x 4 | 
4 M4 x 16mm
Wood
Screw x 6 | 
5 M4 x 20mm
Wood
Screw x 8 | 
6 M4 x 25mm
Wood
Screw x 16 |
| 
7 M4 x 18mm
Wood Screw
x 2 | 
8 Handle
(1005)
x 2 | 
9 'L' Bracket
(5005-3)
x 8 | 
10 Spring
Washer
x 8 | 
11 Flat
Washer
x 8 | 
12 Allen Key
x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

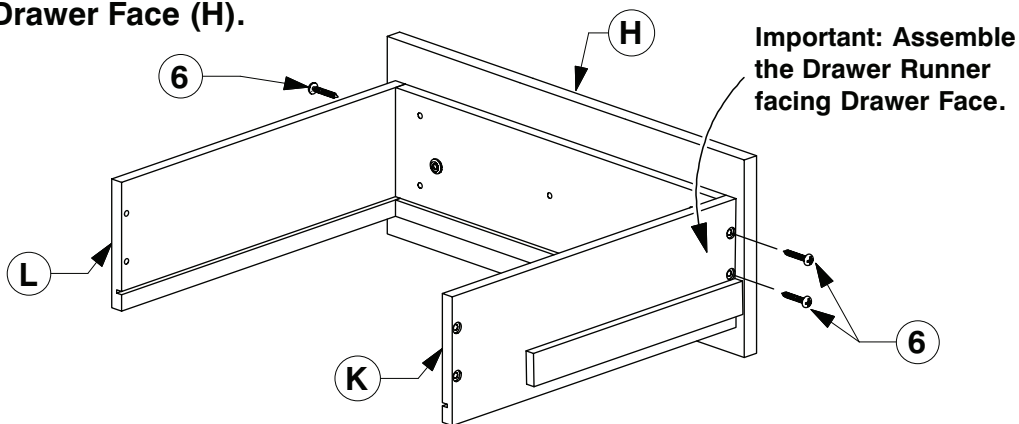

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

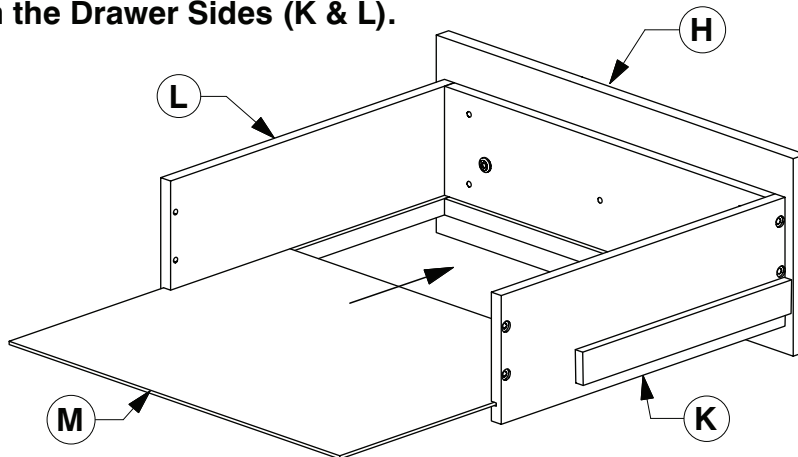

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

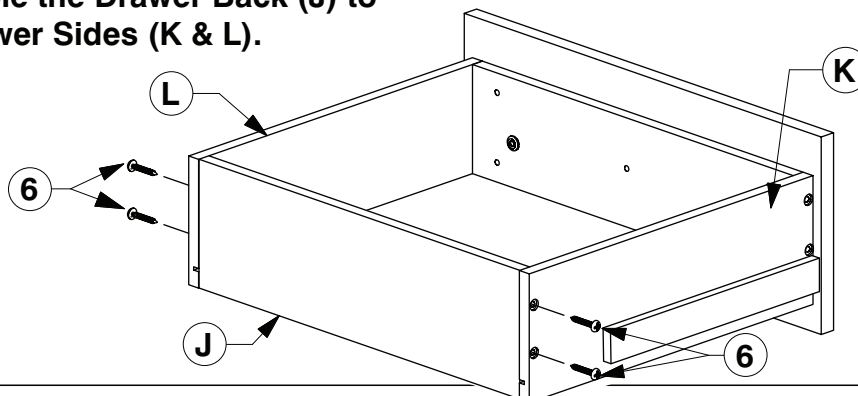


9009 2D Night Stand


Assembly Instructions

WI-0724

6 Fit the 'L' Bracket to the Side Panel (F & G).

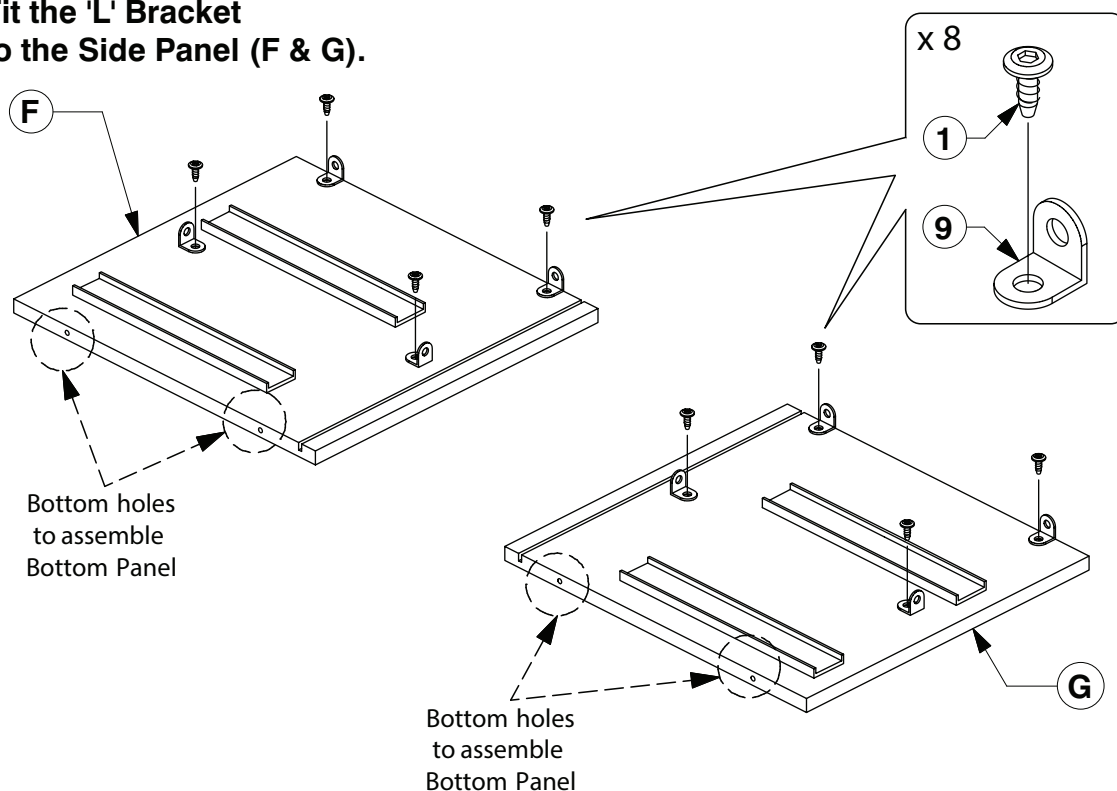

7 Assembled the Side Panel (F & G) to the Top Panel (A).

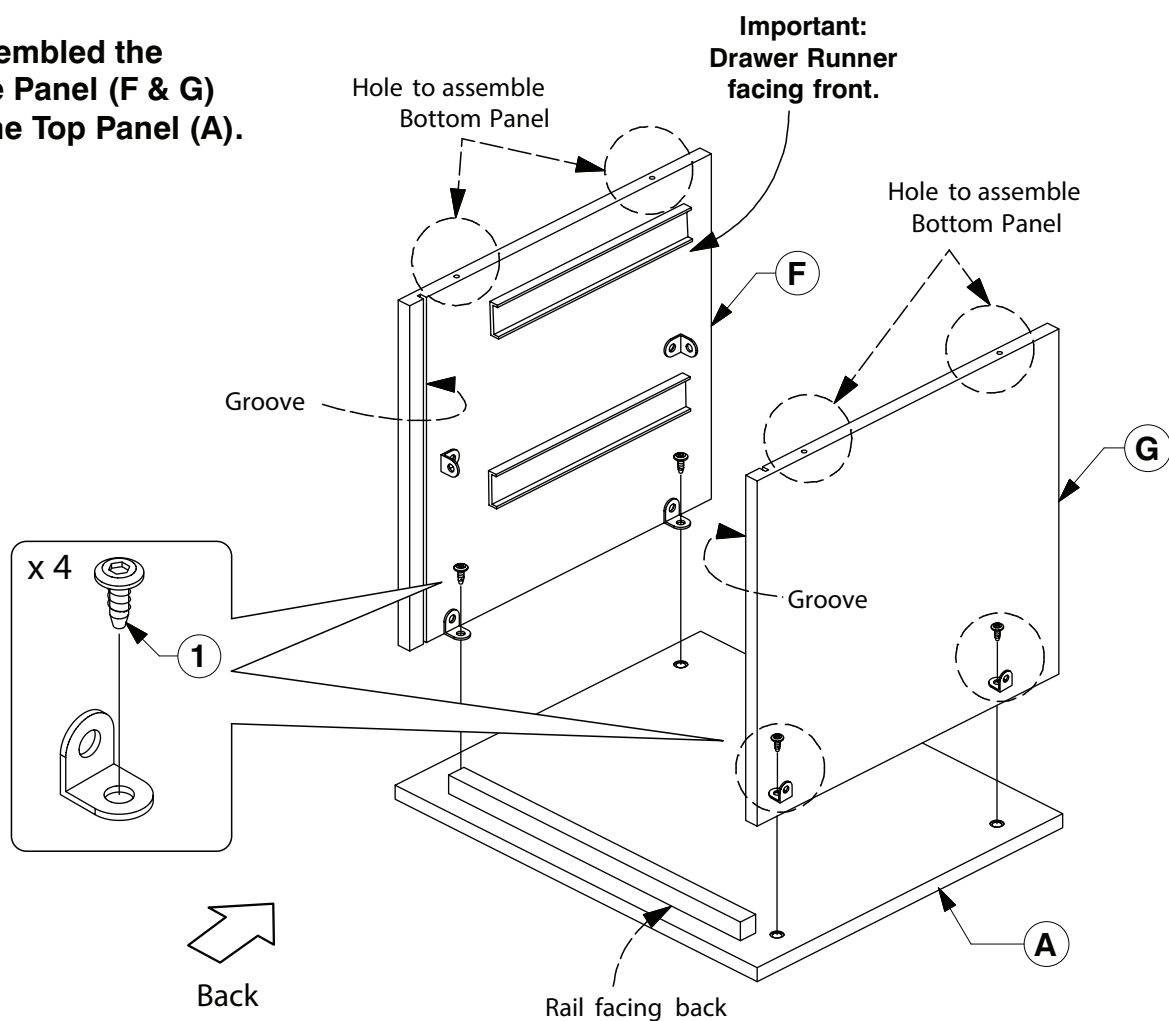


9009 2D Night Stand


Assembly Instructions

WI-0724

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

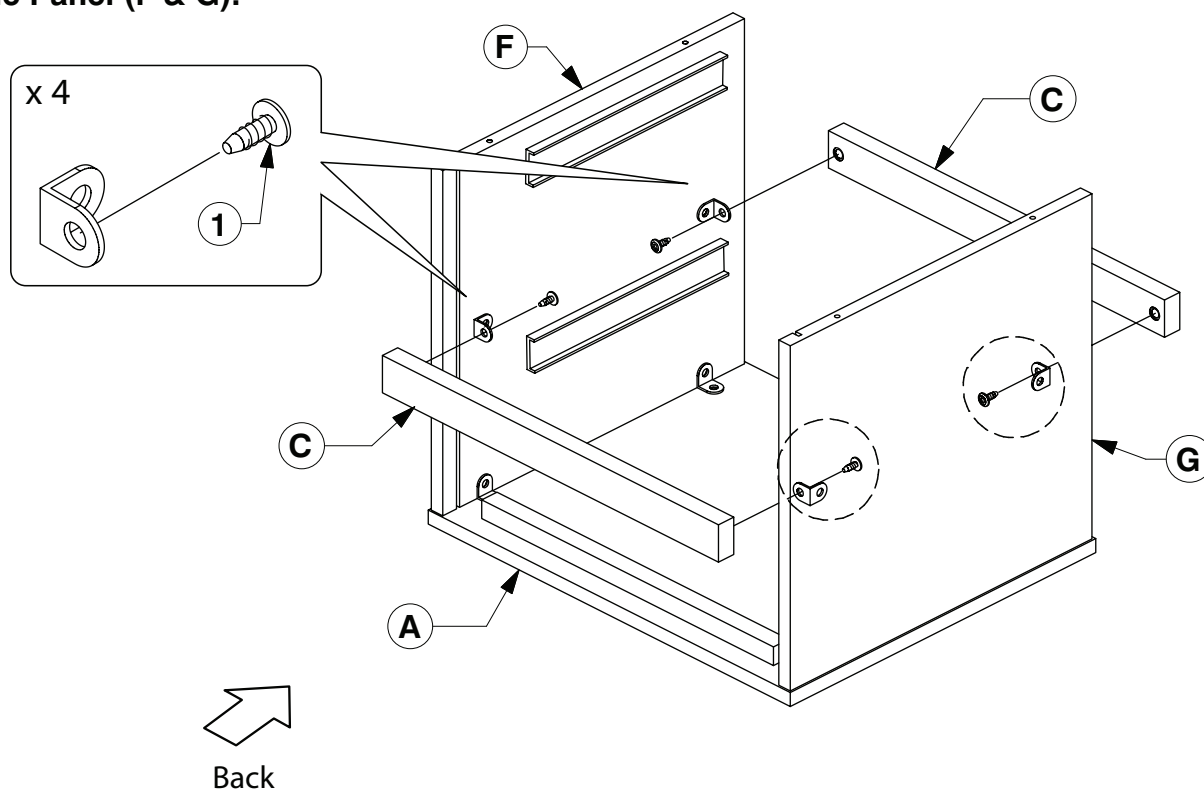

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

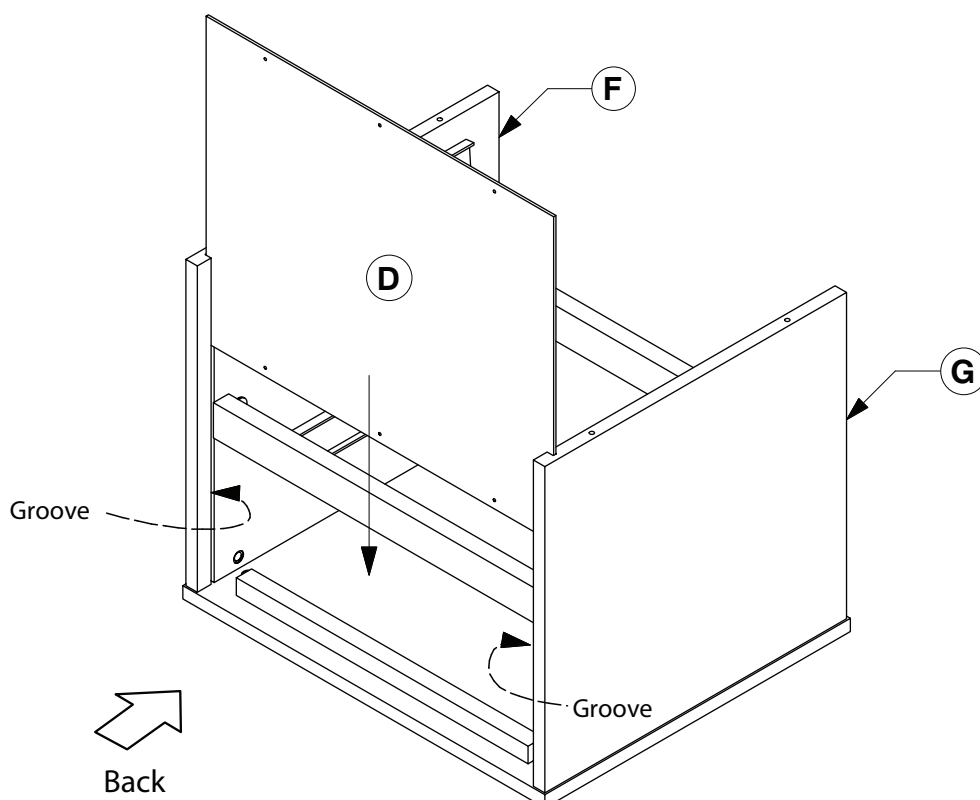


9009 2D Night Stand


Assembly Instructions

WI-0724

- 10** Fit the Bottom Panel (B) to the Bottom of the Side Panel (F & G).

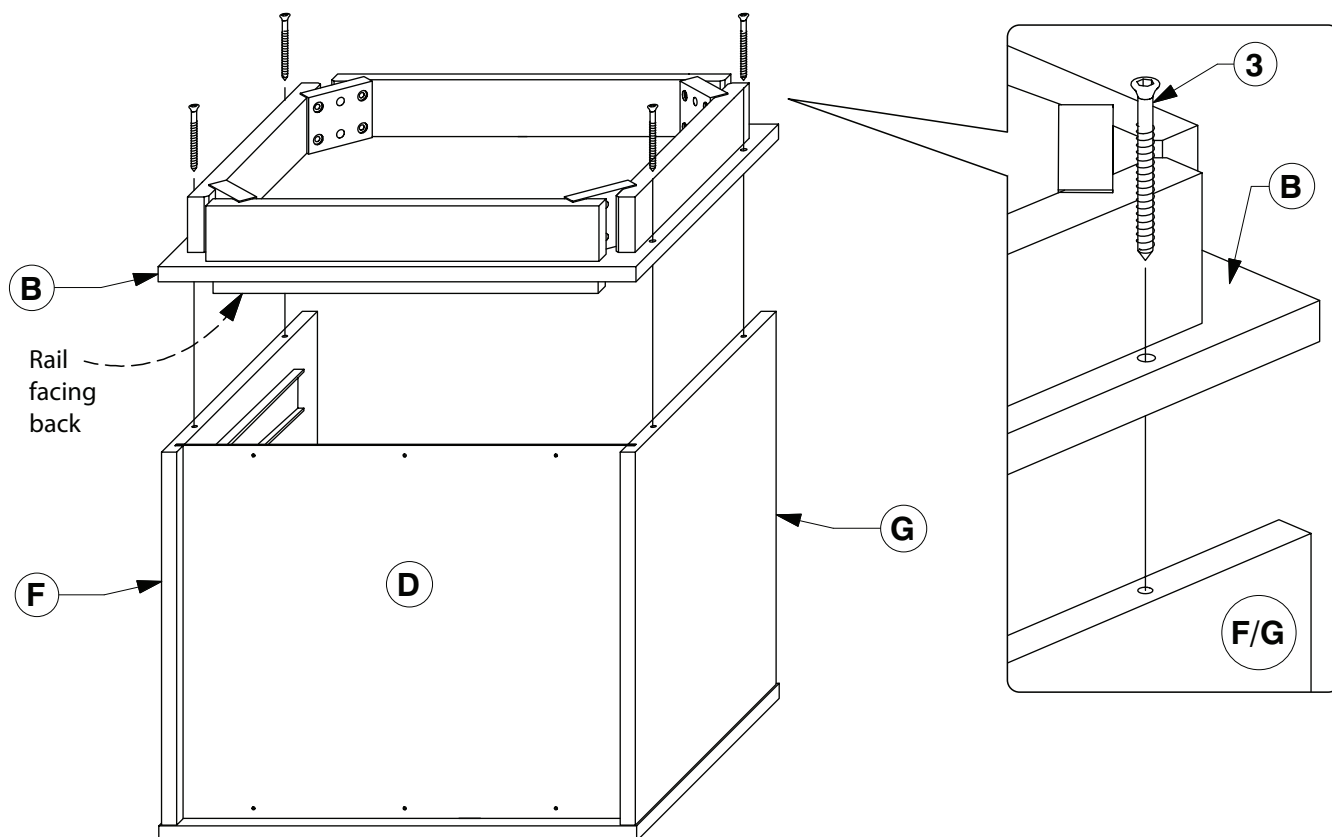

- 11** Use screws to tighten the Back Panel (D) to the back of the frame.

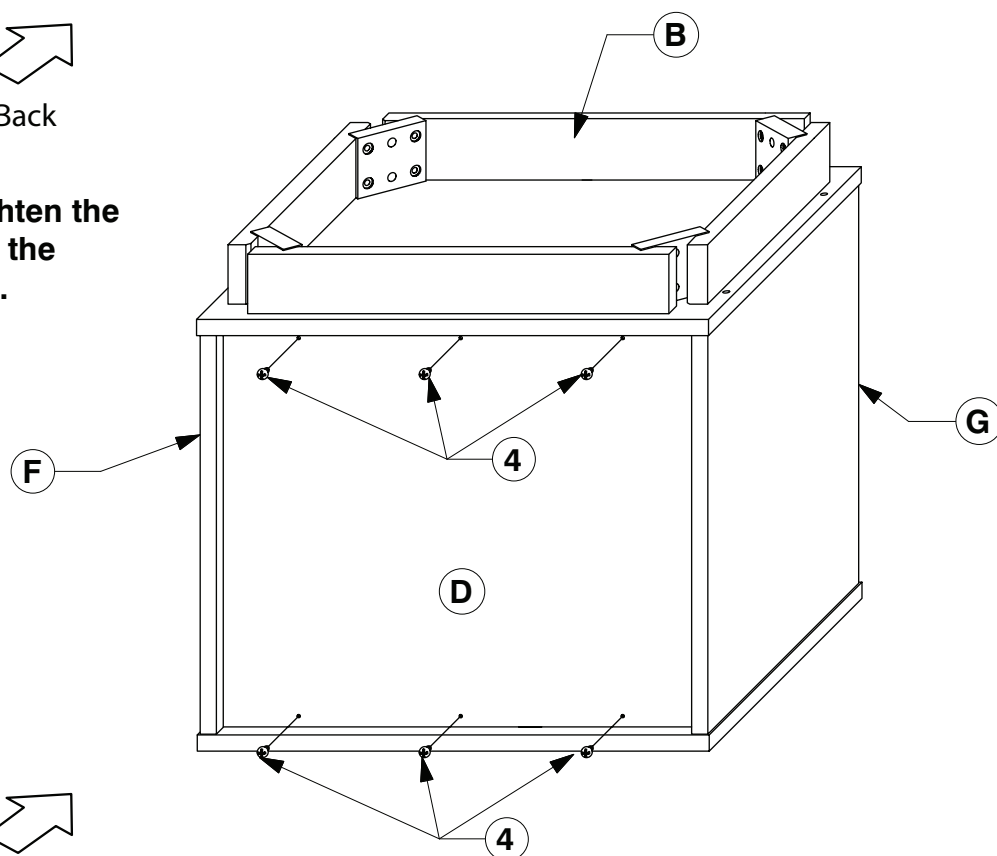


9010 2D Night Stand

Assembly Instructions


WI-0724

12 Fit the Post (E) to the Bottom Panel (B).

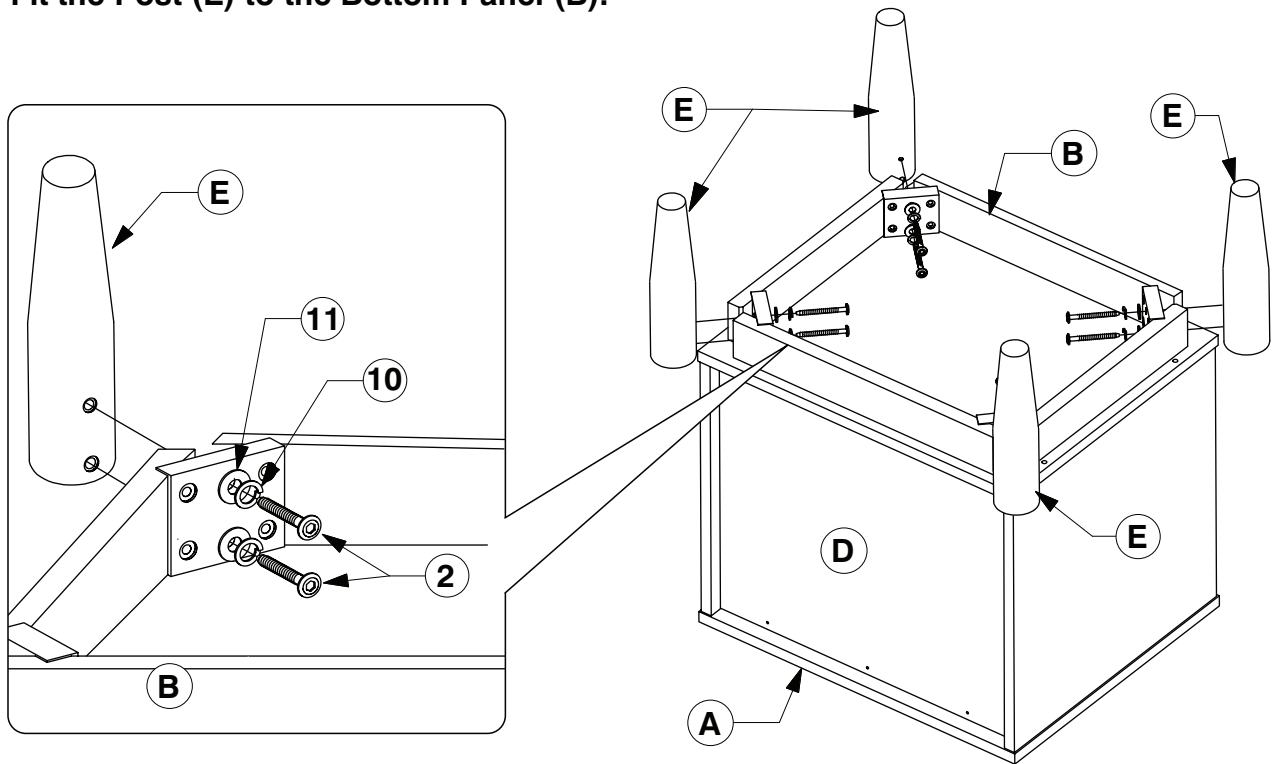

13 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if
the face needs alignment .

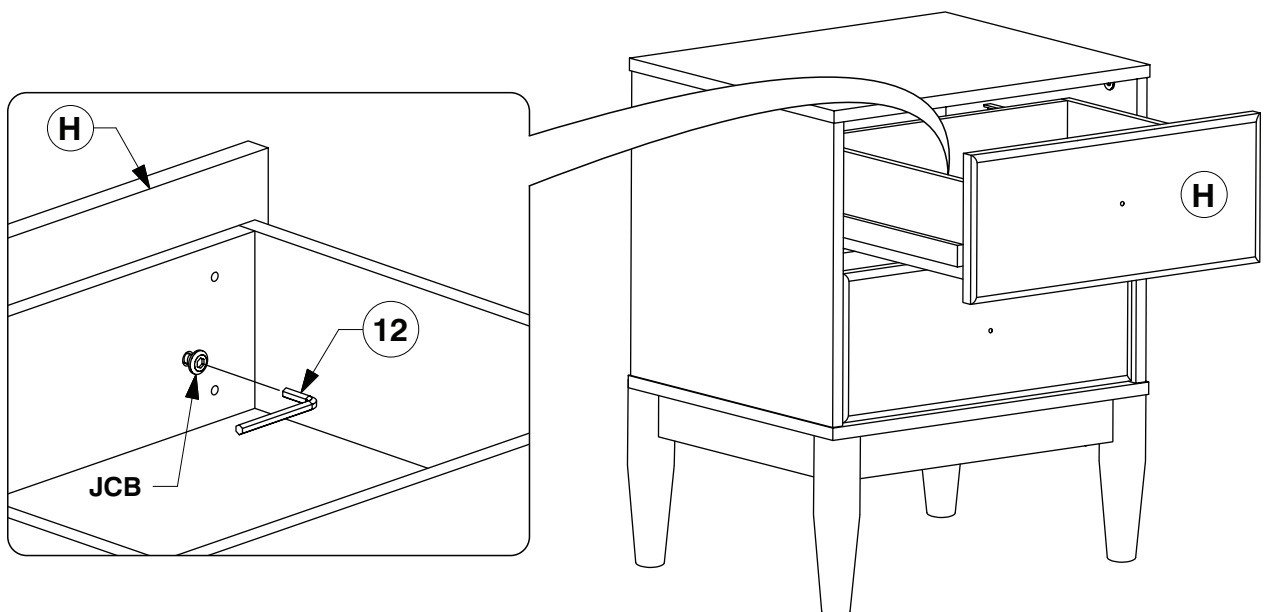


9010 2D Night Stand


Assembly Instructions

WI-0724

- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

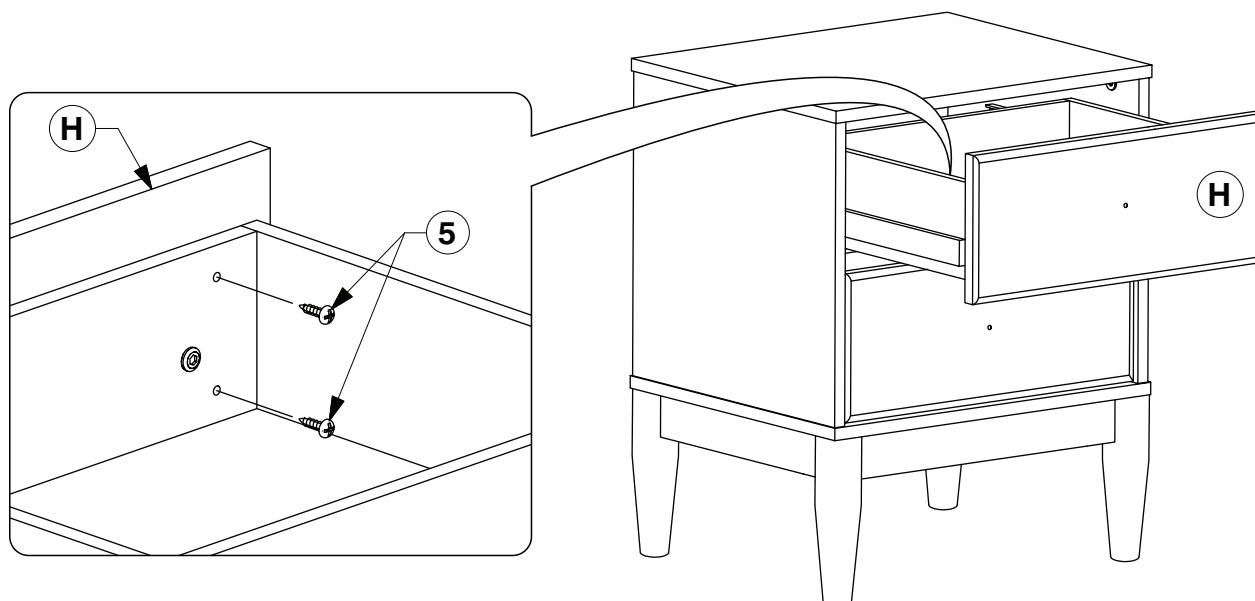

- 15** Fit the Handle to the Face Drawer ().

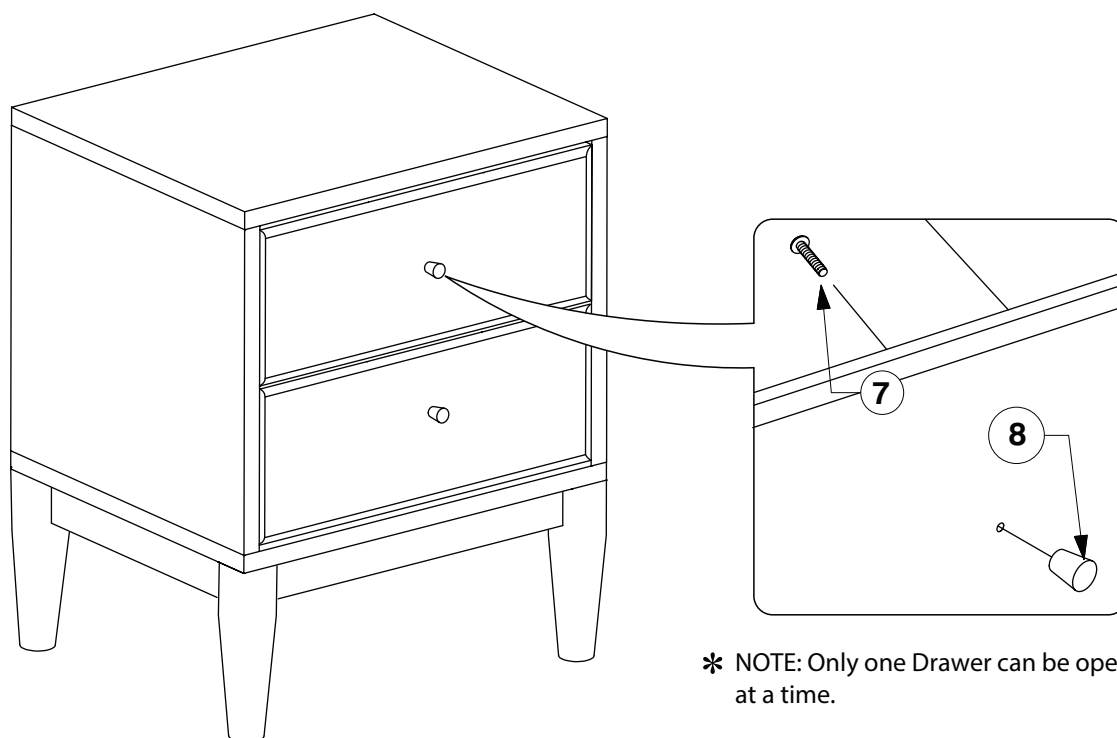

* NOTE: Only one Drawer can be open at a time.