




ASSEMBLY INSTRUCTIONS

MODEL : Roni Day Bed Twin


NO	Hardware	QTY
1	JCBC M6 X 80 mm 	8
2	JCBC M6 X 30 mm 	4
3	BARRET NUT 	8
4	WOOD DOWEL M8 X 30 mm 	4
5	CSK M4 x 25mm 	24
6	ALLEN KEY - M4 	1

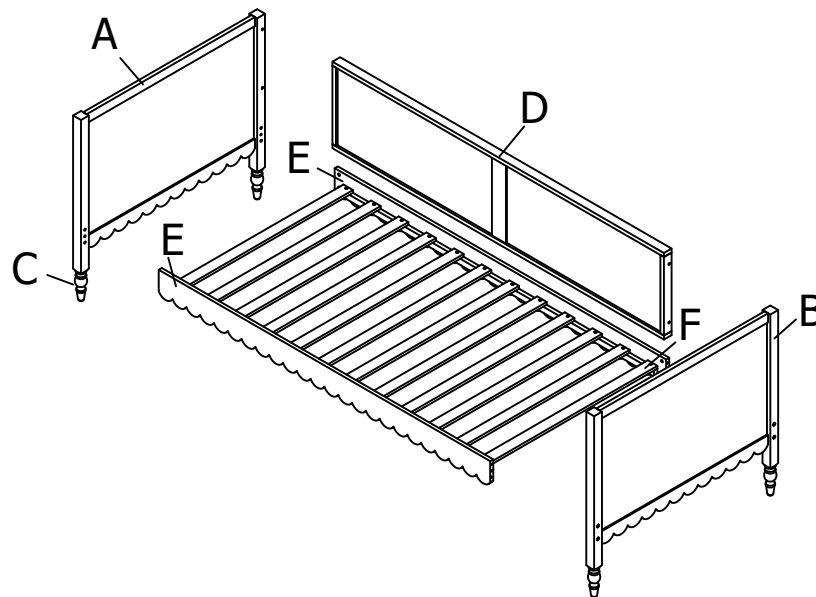


STEP 2

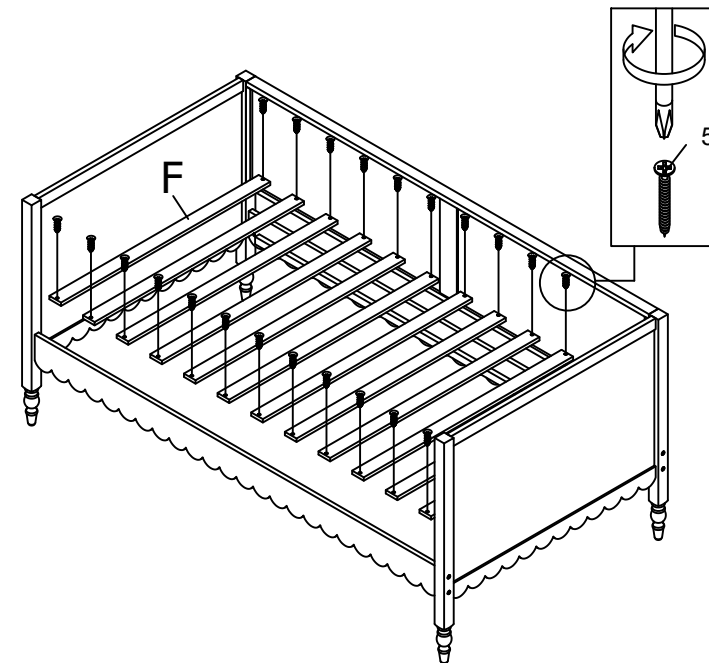



STEP 1

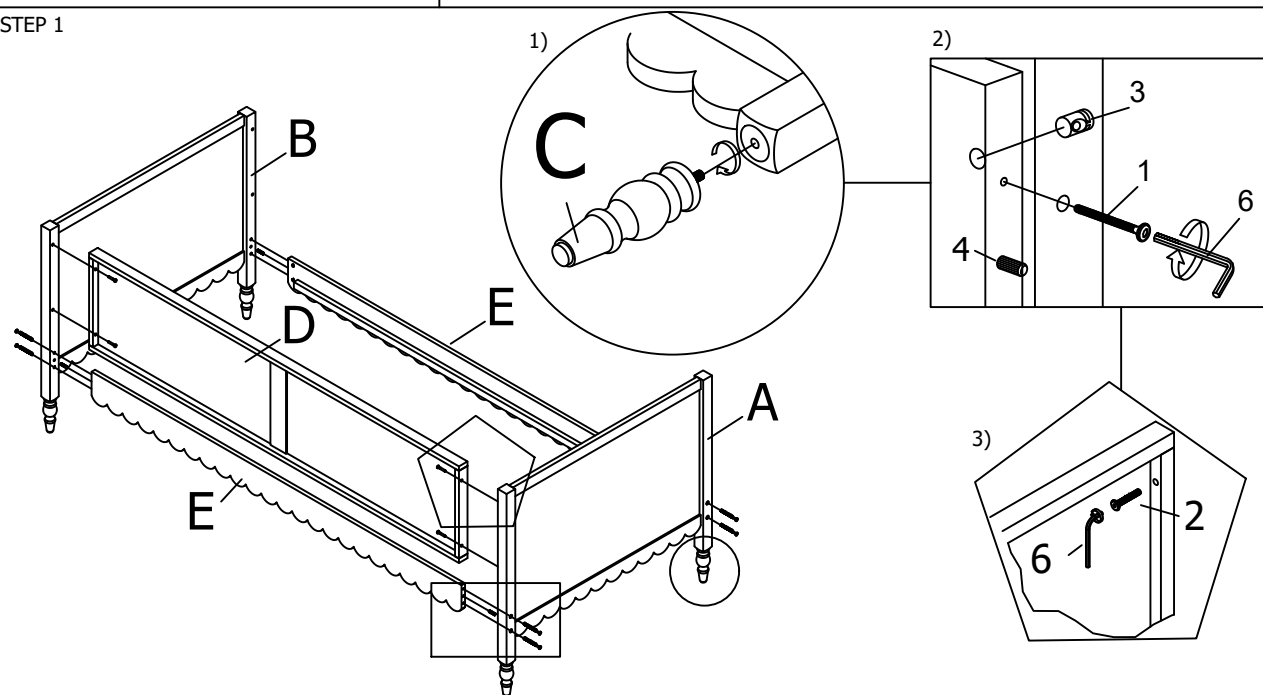

completed

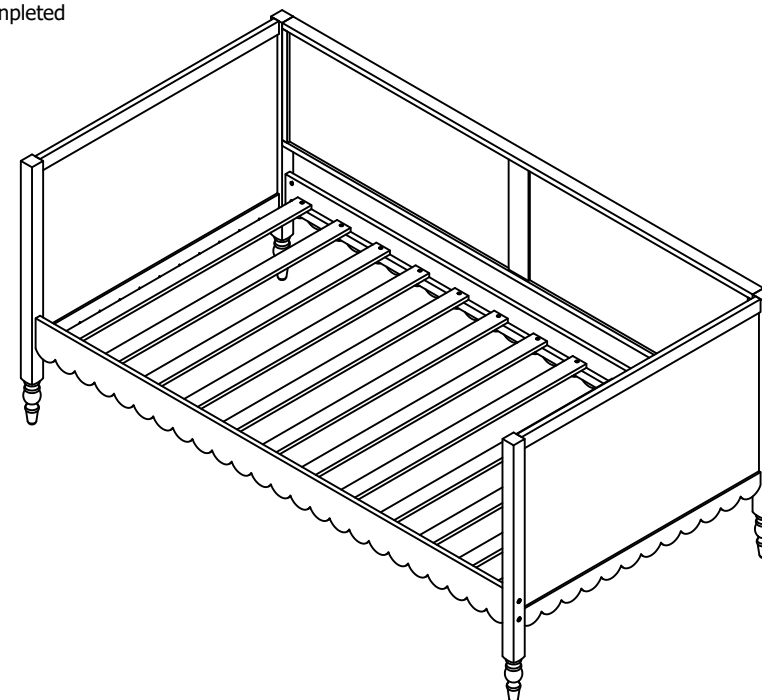

ASSEMBLY INSTRUCTIONS

MODEL : Roni Trundle		
NO	Hardware	QTY
1	JCBC M6 X 30 mm 	8
2	CSK M4 x 25mm 	24
3	Roller 	4
4	JCBC M6 X 16 mm 	8
5	Washer Spring 	8
6	ALLEN KEY - M4 	1

