
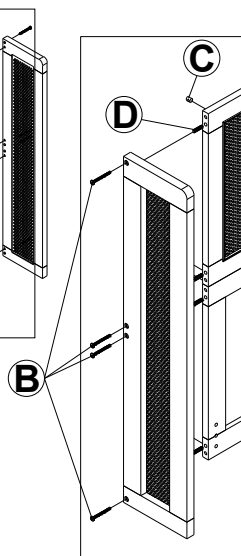


SW 8611 - F/Q/K


1.

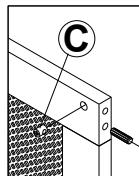


Attach the headboard upper (P1) and headboard lower (P2) to the headboard side panel (P3). You will need to use hardware:

B = 8pcs
C = 8pc
D = 8pcs
E = 1pc


2.

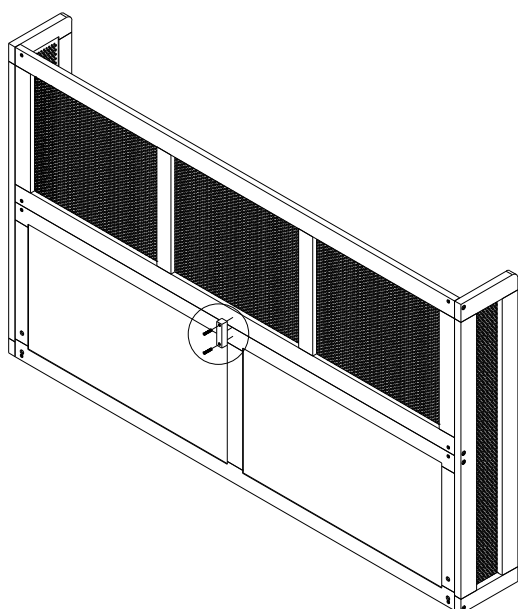

Tie the support block (P4) between the headboard upper (P1) and headboard lower (P2) sections using hardware:
G = 2pcs

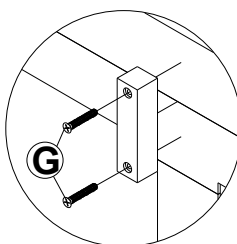

3.

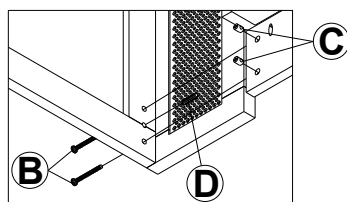

Attach the side rail (P5) to the headboard side panel (P3) using hardware:

B = 4pcs
C = 4pcs
D = 2pcs
E = 1pc

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST


P1		Headboard Upper	=	1pc
P2		Headboard Lower	=	1pc
P3		Headboard Side Panel	=	L-1pc R-1pc
P4		Support Block	=	1pc
P5		Side Rail	=	L-1pc R-1pc
P6		Footboard	=	1pc
P7		Center Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Support Leg	=	4pcs

HARDWARE LIST

A		M6 X 50MM JCBC	=	4pcs
B		M6 X 60MM JCBC	=	12pcs
C		BARREL NUT	=	16pcs
D		WOOD DOWEL M8 X 30MM	=	12pcs
E		ALLEN KEY M4	=	1pc
F		M4 X 25MM SCREW	=	8pcs
G		M4 X 30MM SCREW	=	2pcs
H		ADJUSTER	=	4pcs
I		M6 X 90MM JCBC	=	4pcs
J		M4 X 16MM SCREW	=	4pcs
K		L BRACKET	=	2pcs




4.

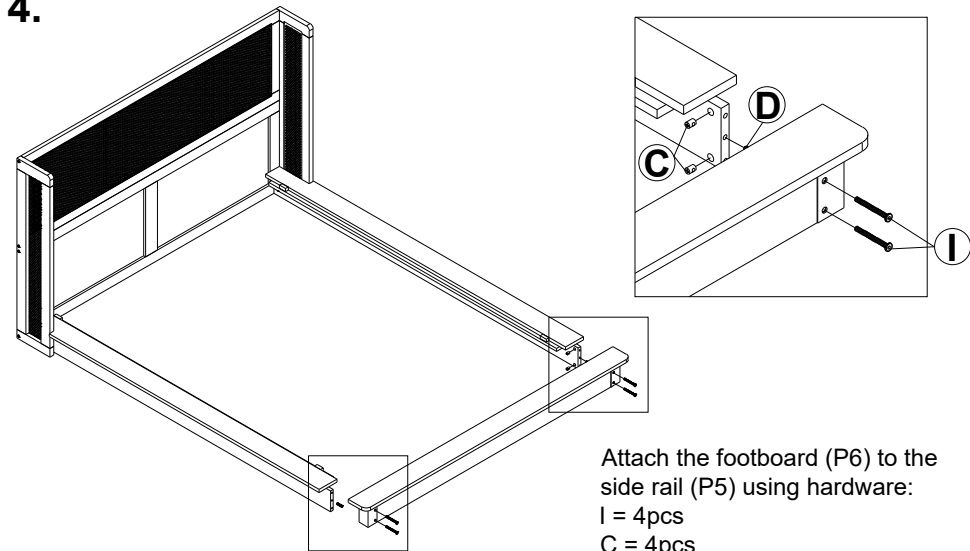

Attach the footboard (P6) to the side rail (P5) using hardware:
I = 4pcs
C = 4pcs
D = 2pcs
E = 1pc


5.

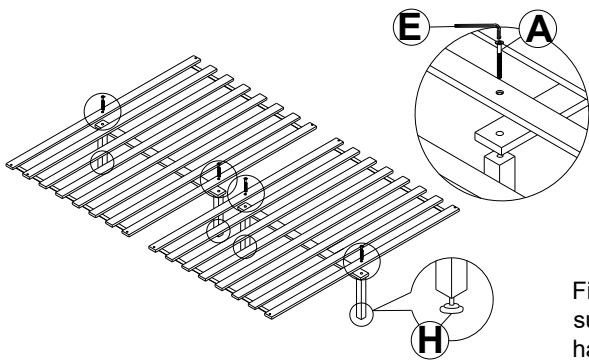

Attach the support leg (P9) to the center rail (P7) and bed slats (P8) using hardware:
A = 4pcs
E = 1pc

Fix the adjuster (H) to the support leg (P9) using hardware:
H = 4pcs

6.

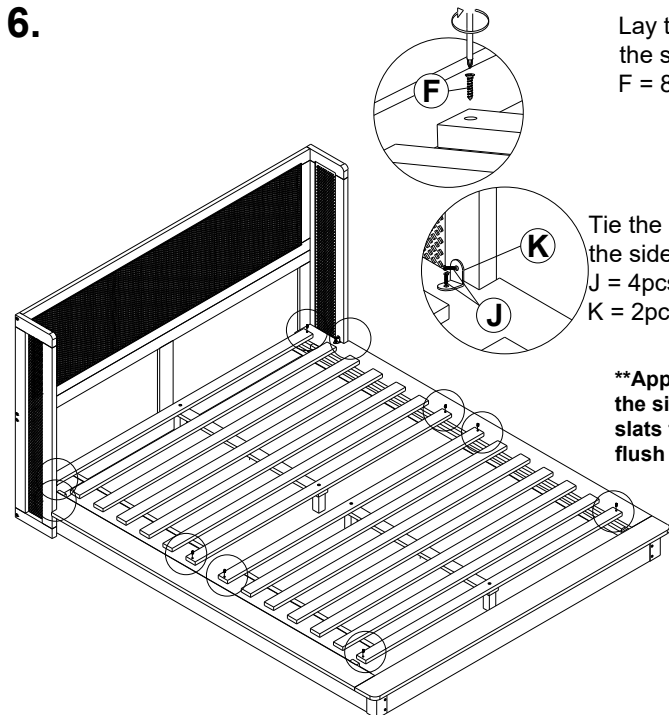

Lay the bed slats (P8) between the side rail (P5) using hardware:
F = 8pcs








Tie the headboard side panel (P3) and the side rail (P5) using hardware:
J = 4pcs
K = 2pcs

****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

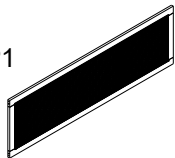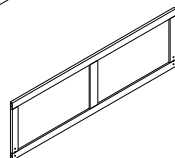P1		Headboard Upper = 1pc
P2		Headboard Lower = 1pc
P3		Headboard Side Panel = L-1pc R-1pc
P4		Support Block = 1pc
P5		Side Rail = L-1pc R-1pc
P6		Footboard = 1pc
P7		Center Rail = 2pcs
P8		Bed Slats = 14pcs
P9		Support Leg = 4pcs

HARDWARE LIST

A		M6 X 50MM JCBC = 4pcs
B		M6 X 60MM JCBC = 12pcs
C		BARREL NUT = 16pcs
D		WOOD DOWEL M8 X 30MM = 12pcs
E		ALLEN KEY M4 = 1pc
F		M4 X 25MM SCREW = 8pcs
G		M4 X 30MM SCREW = 2pcs
H		ADJUSTER = 4pcs
I		M6 X 90MM JCBC = 4pcs
J		M4 X 16MM SCREW = 4pcs
K		L BRACKET = 2pcs

