
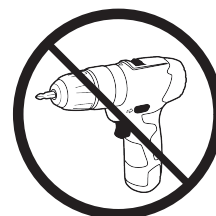
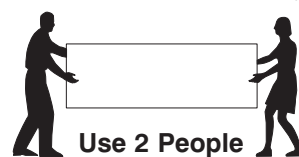


0243 Queen Bed

Assembly Instructions

WI-0724


1 Assembled View

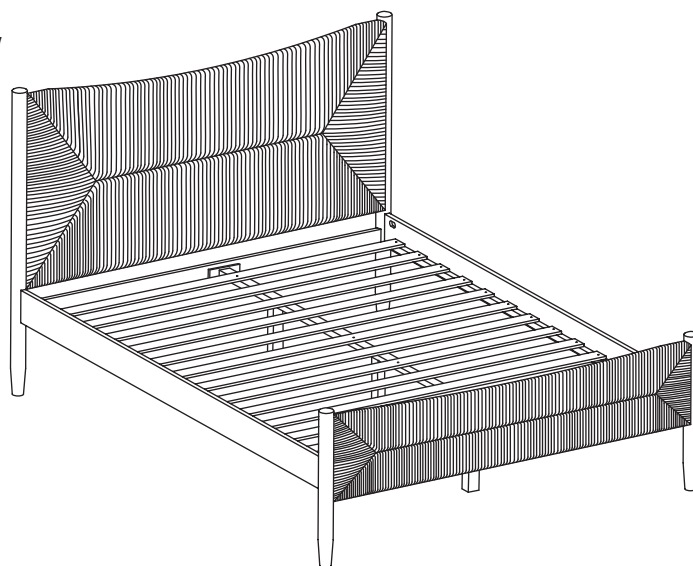


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

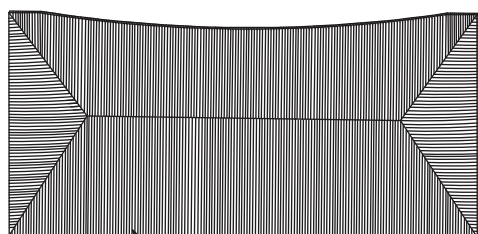


A Headboard Panel

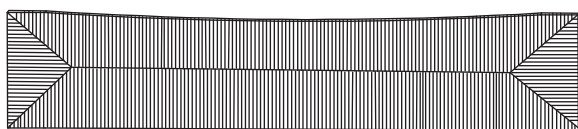

B Footboard Panel
x 1




C Headboard Support x 1

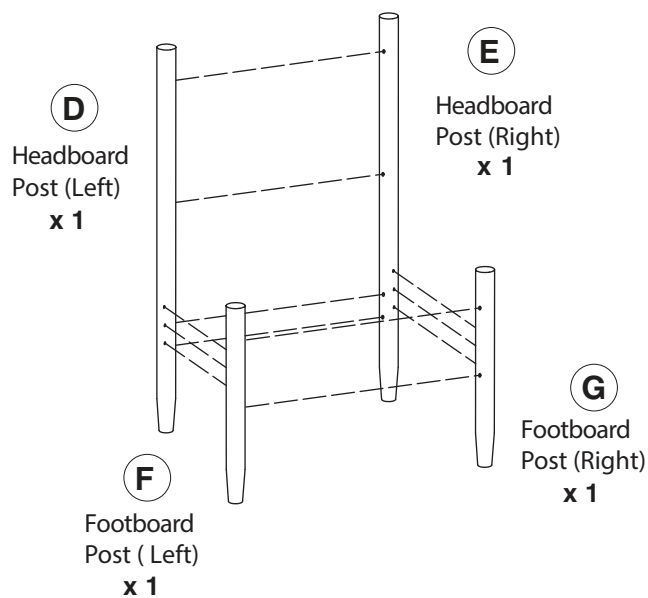

Parts in Box B:




H Side Rail x 2



J Long Support x 1



K Support Leg
x 3

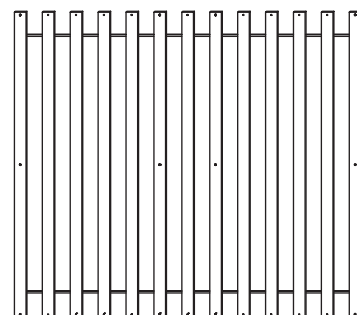


L Set of Bed Slats
x 1

0243 Queen Bed


Assembly Instructions

WI-0724


3 Hardware List

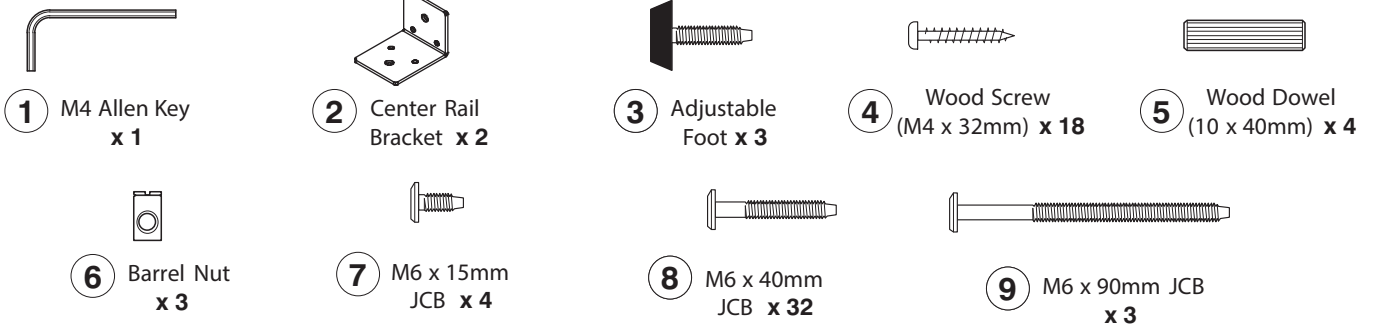

4 Assembled the Support Leg (K) to the Long Support (J) .

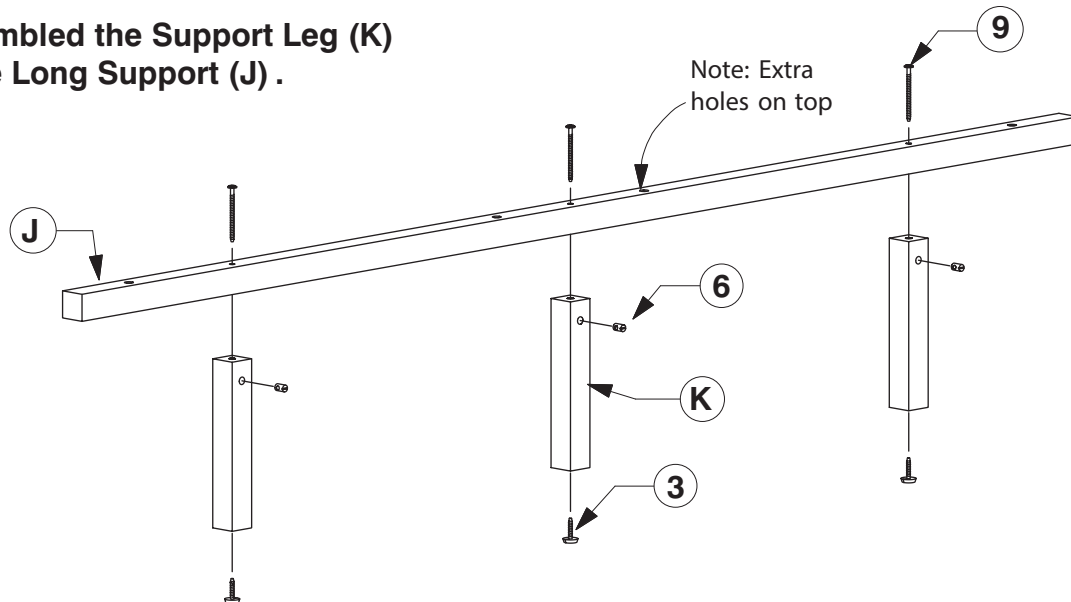

5 Fit the Center Rail Bracket (2) to the Headboard Support (C).

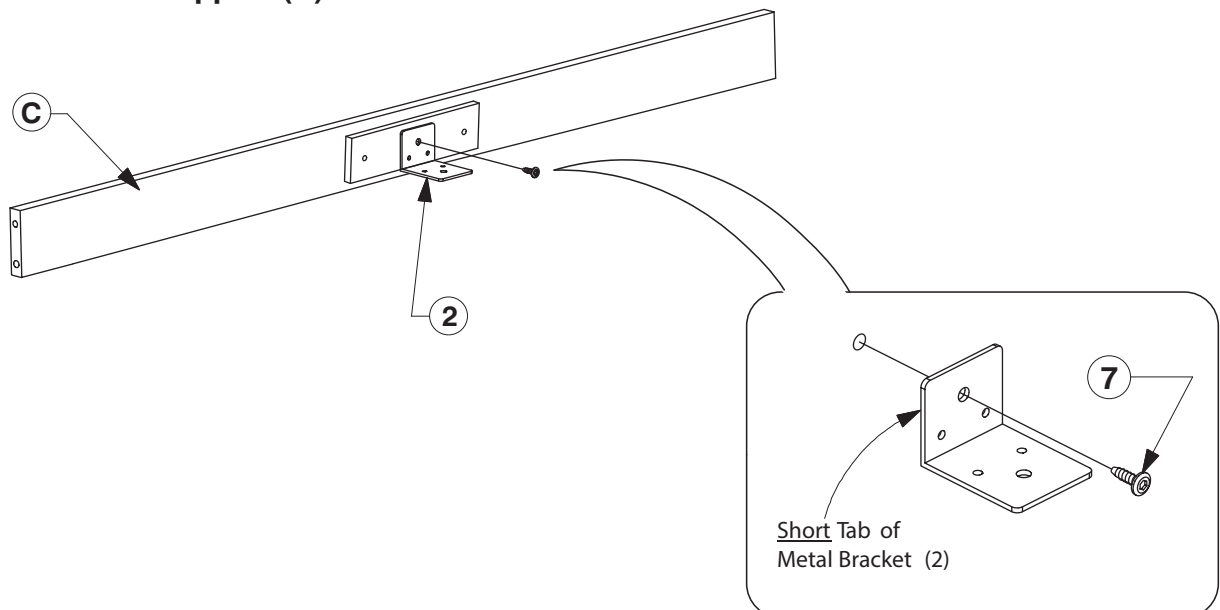


0243 Queen Bed


Assembly Instructions

WI-0724

- 6** Assembled the Headboard Post (D & E) to the Headboard Panel (A) and Headboard Support (C).

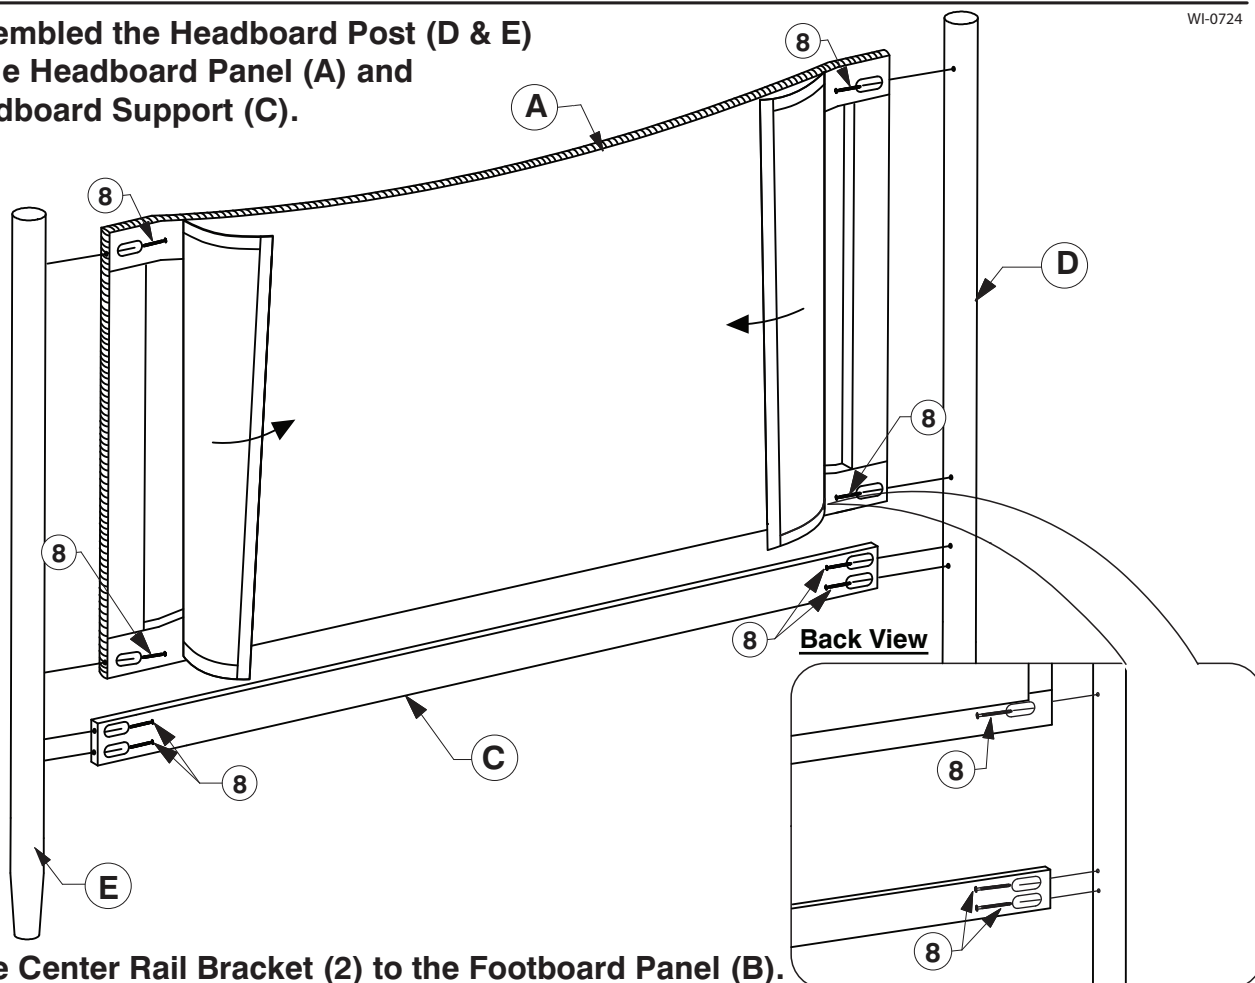

- 7** Fit the Center Rail Bracket (2) to the Footboard Panel (B). Assembled the Footboard Post (F & G) to the Footboard Panel (B).

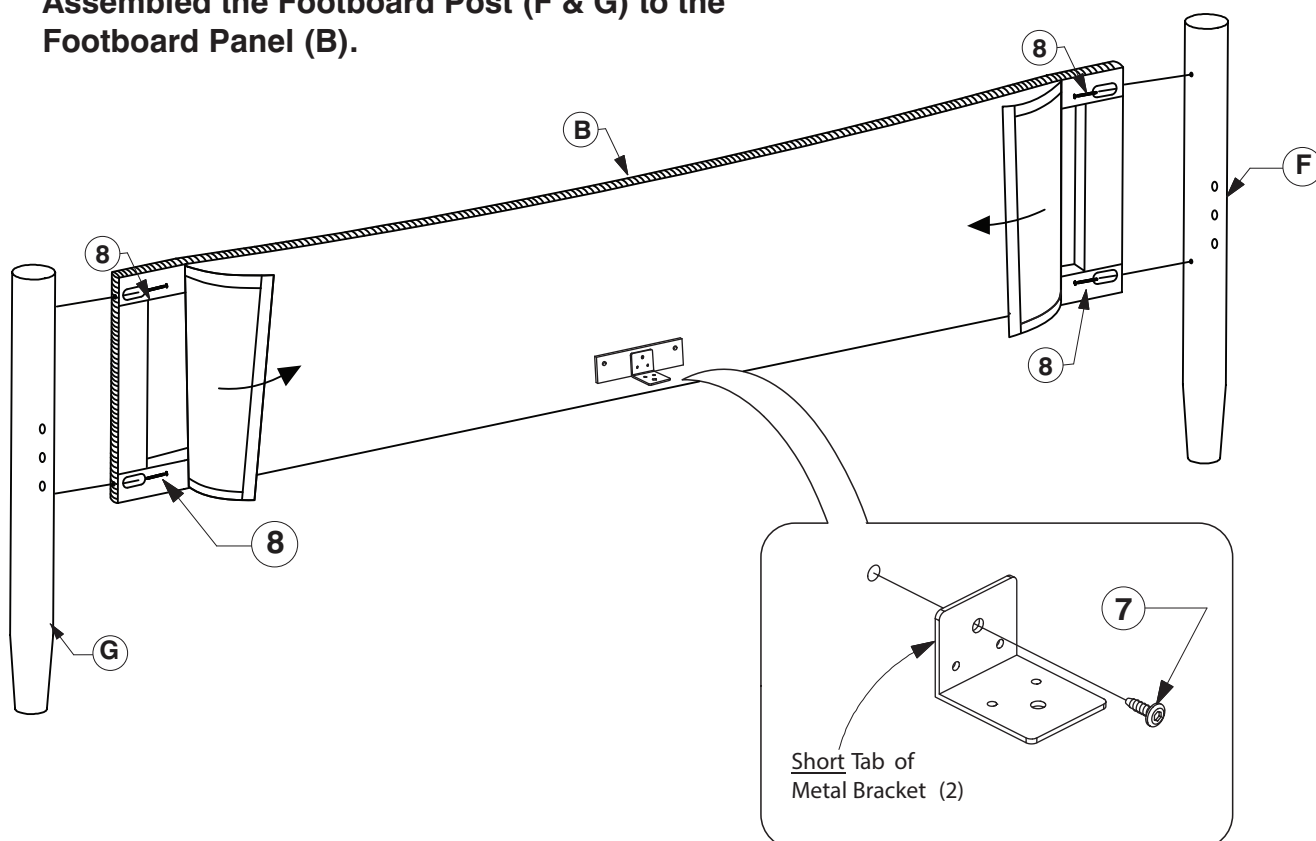


0243 Queen Bed


Assembly Instructions

WI-0724

- 8 Assemble the Side Rail (H) to the Headboard Post (D & E) & Footboard Post (F & G).**

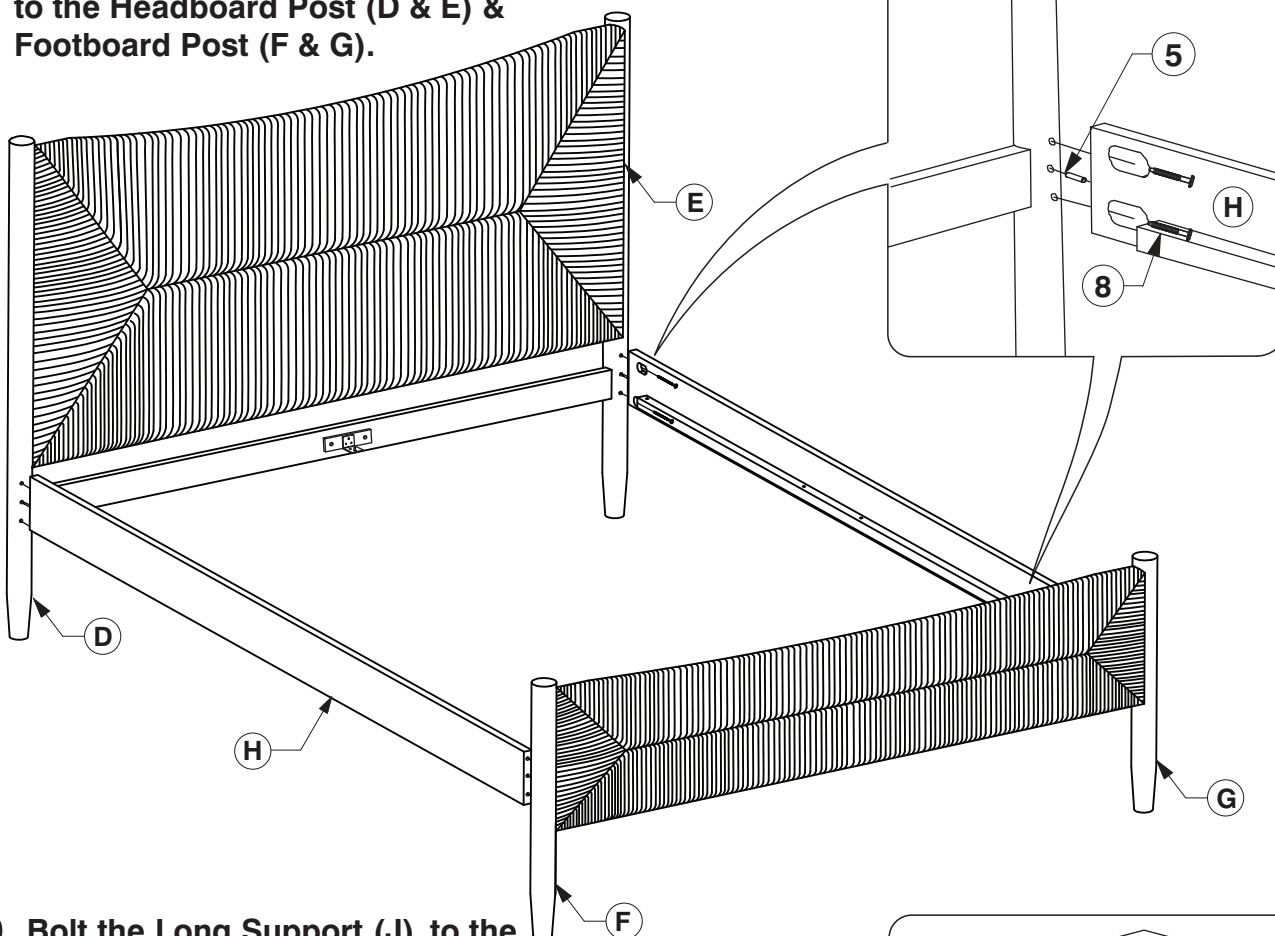

- 9 Bolt the Long Support (J) to the Center Rail Brackets (2) on the Headboard Support (C) & Footboard Panel (B).**

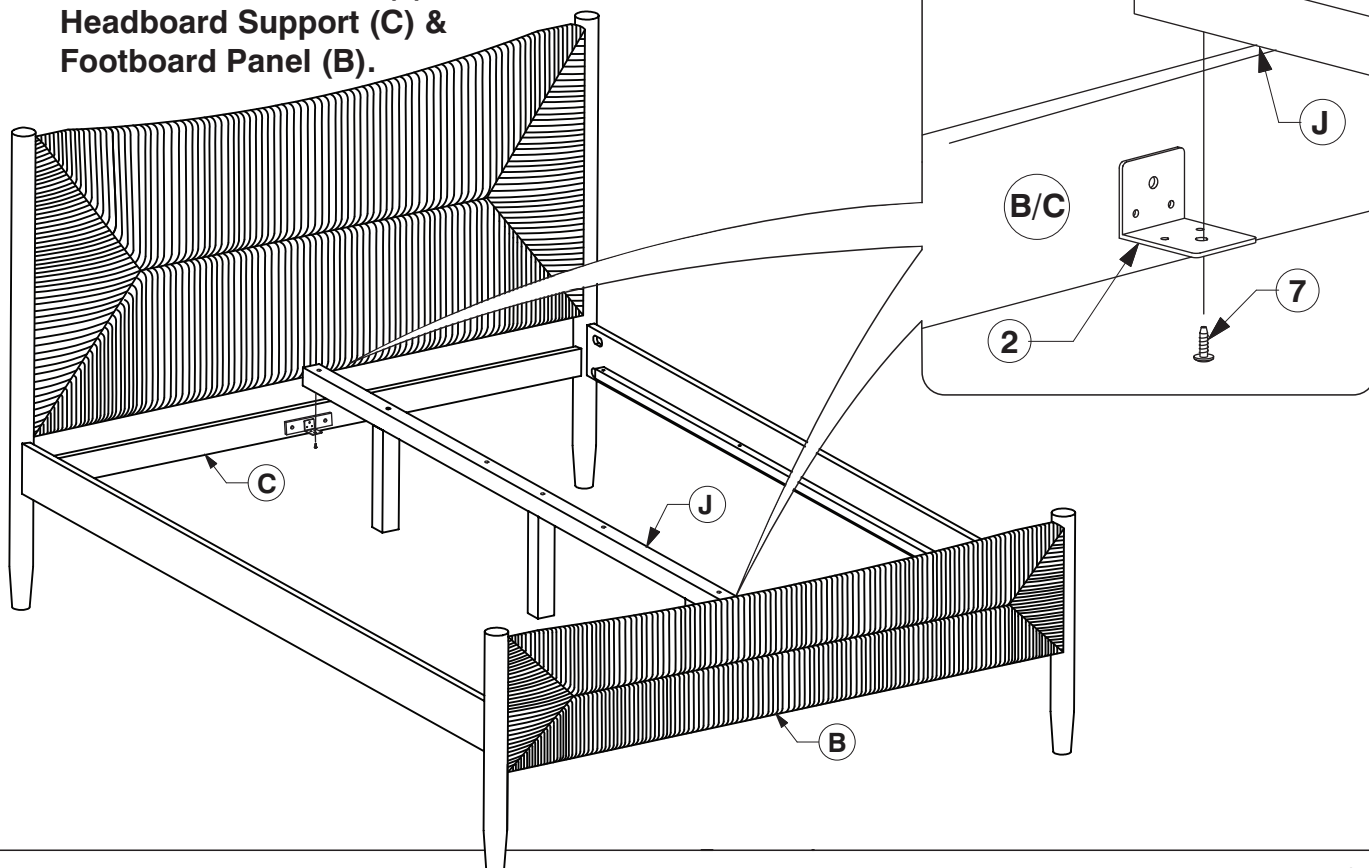


0243 Queen Bed

Assembly Instructions

WI-0724



10 Bolt & screw the Bed Slats (L) to the Side Rail (H).

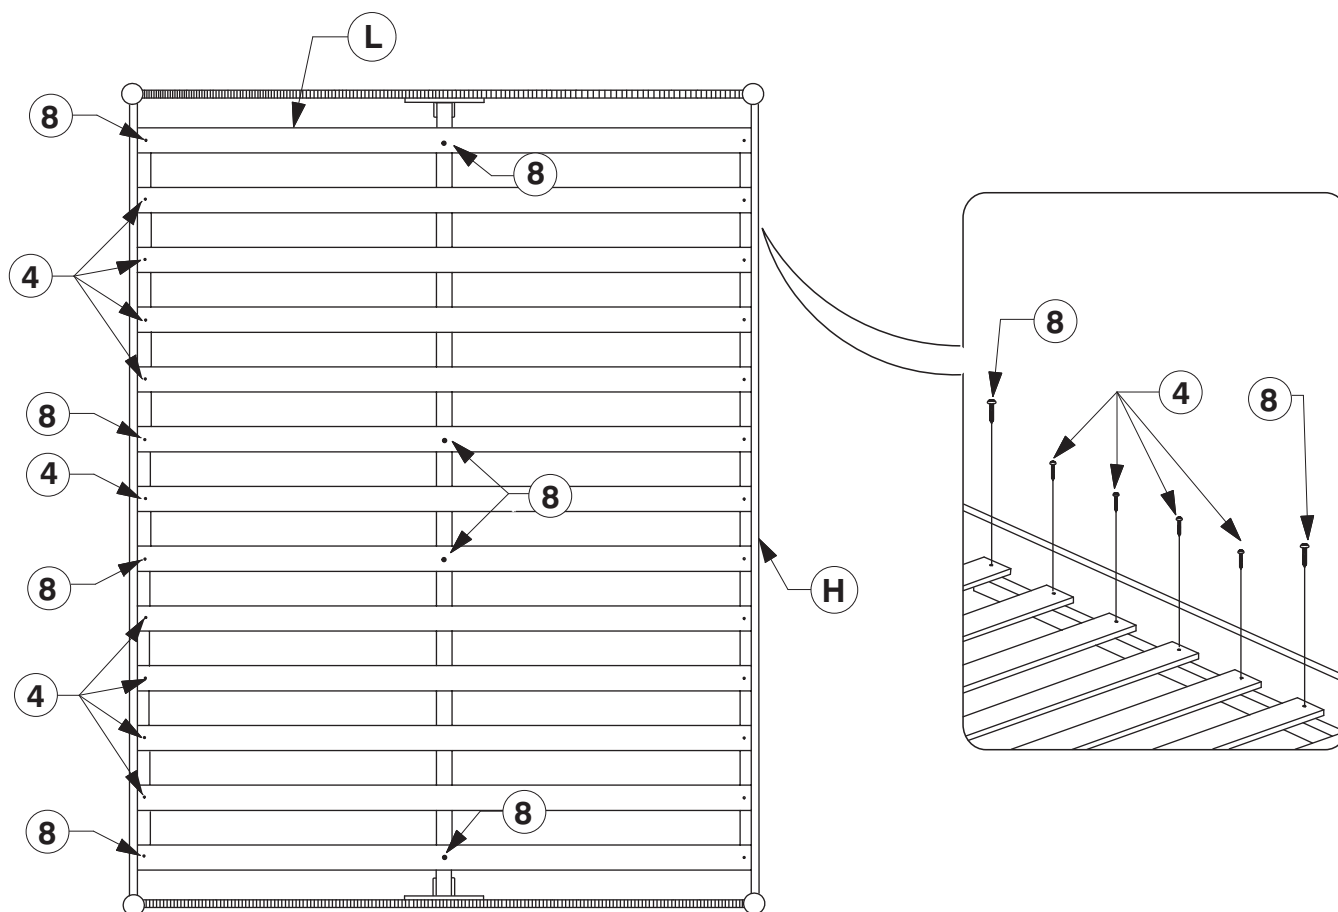

9012 6 Drawer Dresser


Assembly Instructions

WI-0724

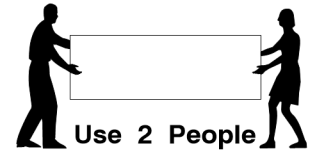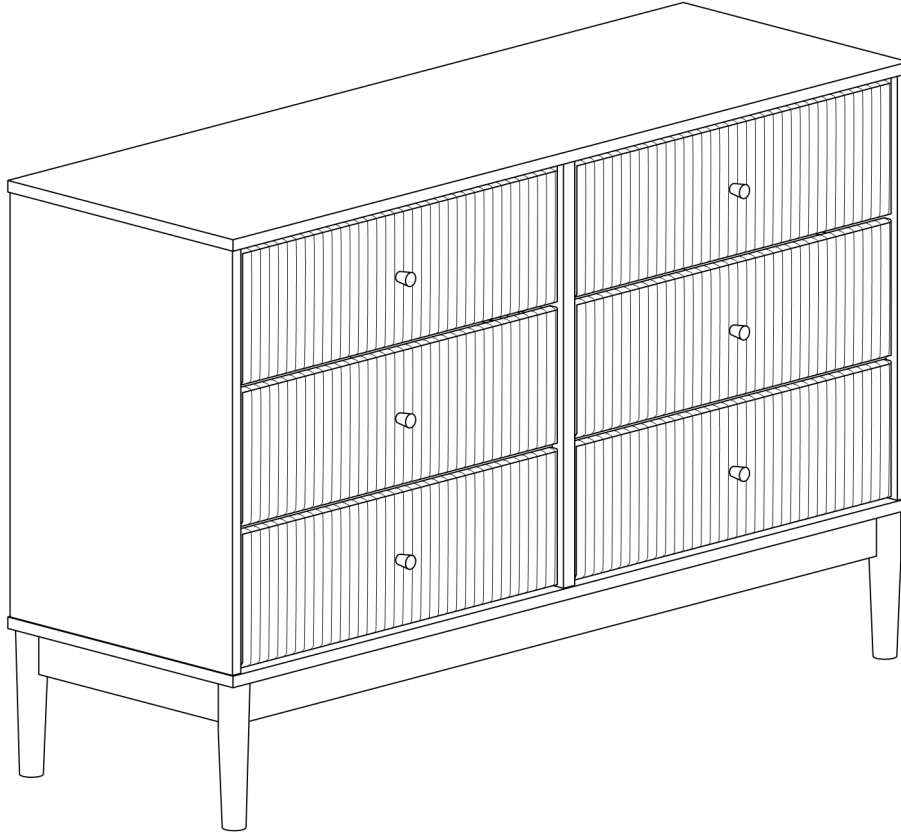

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

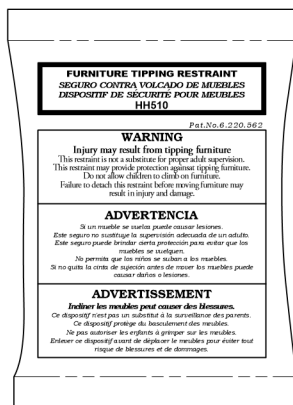

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9012 6 Drawer Dresser

Assembly Instructions


WI-0724

1 Parts List


Parts in Box A:




A Top Panel x 1



B Bottom Panel x 1



C Support Bar x 2

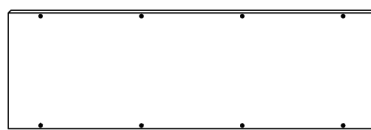


D Back Panel (Wider) x 1




E Back Panel (Narrow) x 1




F Post x 4

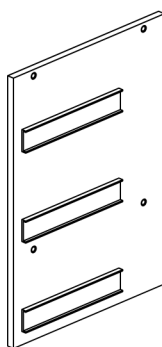

G Side Panel (Left Hand) x 1

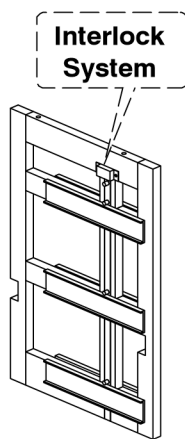


H Center Frame x 1

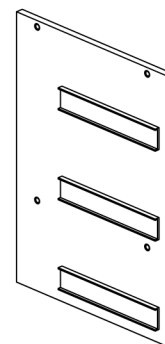

J Side Panel (Right Hand) x 1

Parts in Box B:



K Drawer Face x 6



L Drawer Back x 6




M Drawer Rail x 6




N Drawer Bottom x 6


Parts for **LEFT** Side Drawer

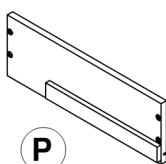



P LEFT Drawer Side (Left Hand) x 3

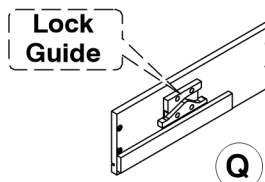


Q LEFT Drawer Side (Right Hand) x 3

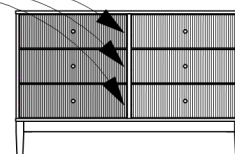

Parts for **RIGHT** Side Drawer

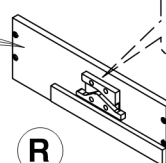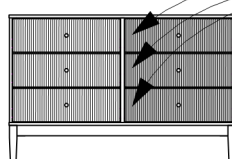

R RIGHT Drawer Side (Left Hand) x 3

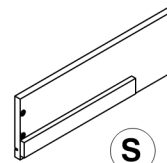







S RIGHT Drawer Side (Right Hand) x 3

9012 6 Drawer Dresser

Assembly Instructions

WI-0724


2 Hardware List

- | | | | | |
|---|---|--|---|---|
| 
1 M6 x
15mm JCB
x 16 | 
2 M6 x
60mm JCB
x 10 | 
3 M6 x
30mm JCB
x 2 | 
4 Wood Screw
(M4 x 32mm)
x 16 | 
5 Wood Screw
(M4 x 20mm)
x 24 |
| 
6 Wood Screw
(M4 x 25mm)
x 60 | 
7 M6 x 25mm
Wood Dowel
x 24 | 
8 CSK Cap Wood Screw
(M6 x 60mm) x 6 | 
9 'L' Bracket
(5005-3) x 8 | |
| 
10 Spring
Washer x 8 | 
11 Flat Washer
x 8 | 
12 M4 x 22mm
Wood Screw x 6 | 
13 Handle
(1005) x 6 | 
14 Allen Key
x 1 |


3 Assemble the Drawers.

STEP 3.1


LEFT

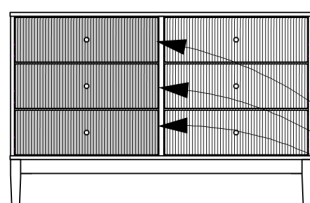

Important: Assemble the Drawer Runner facing Drawer Face.

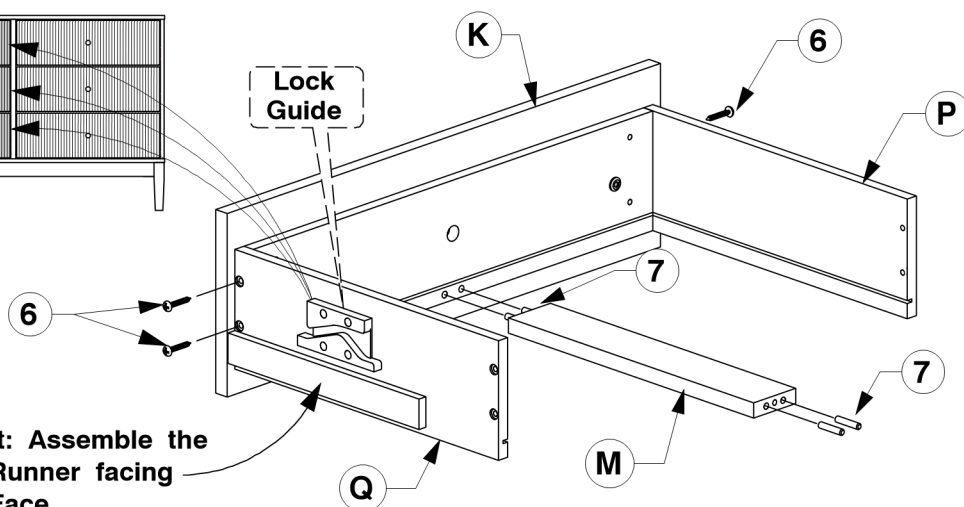

x 3

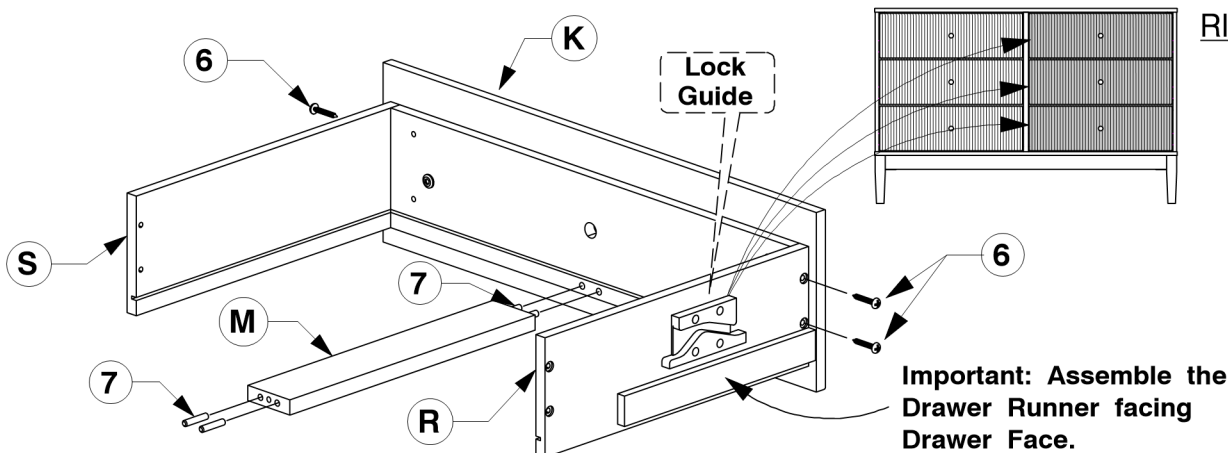

Important: Assemble the Drawer Runner facing Drawer Face.

RIGHT

x 3

9012 6 Drawer Dresser


Assembly Instructions

WI-0724


③ Assemble the Drawers.

STEP 3.2


* 3 Assemble the left and right drawers as shown below

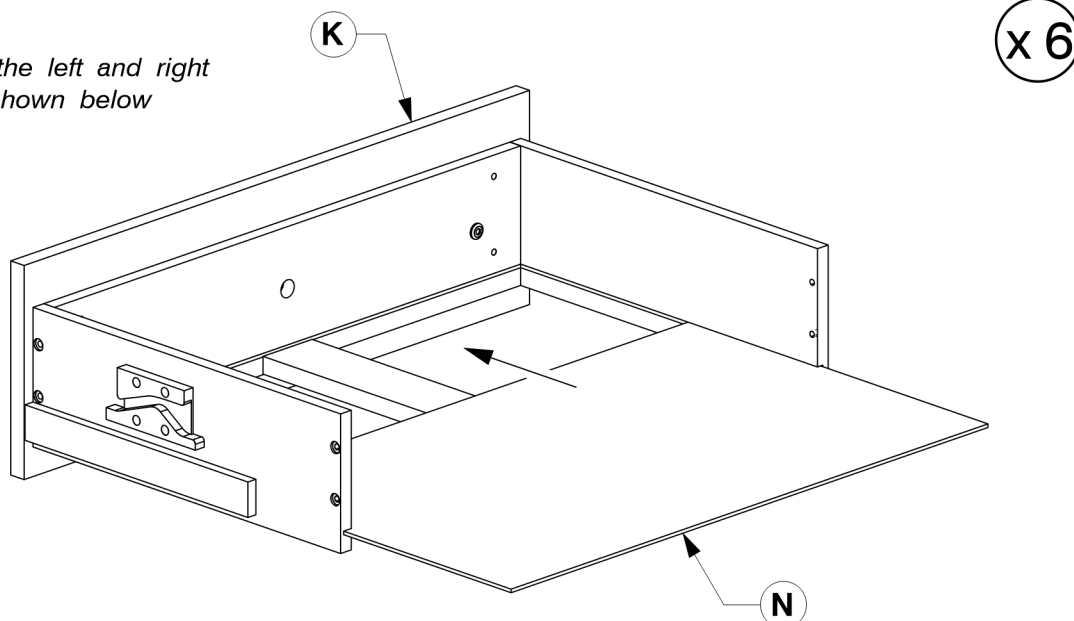

STEP 3.3

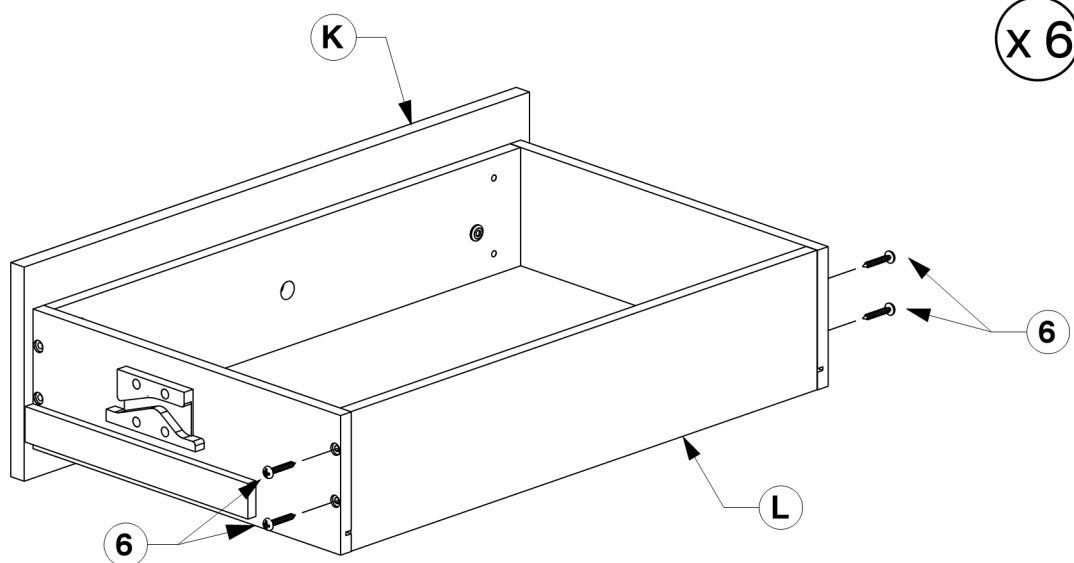

STEP 3.4

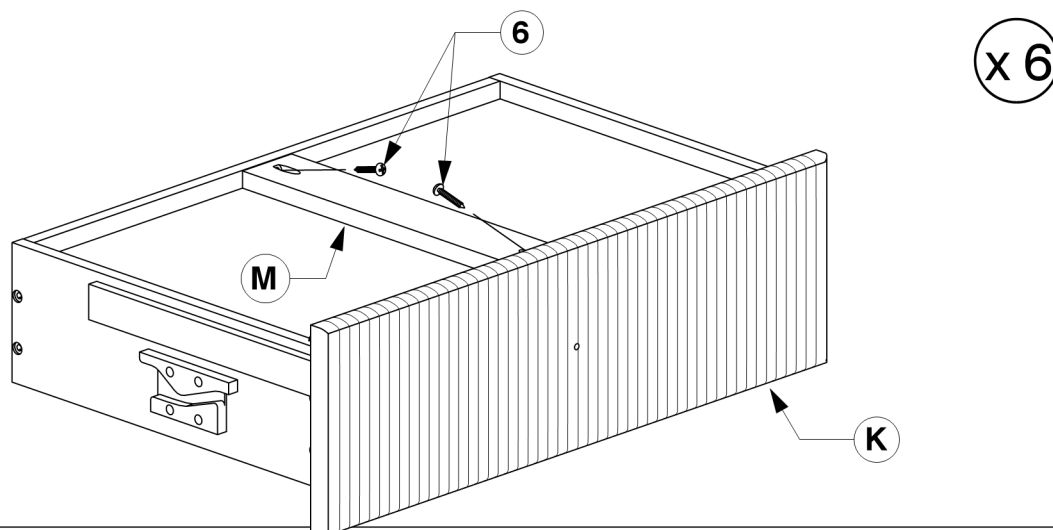


9012 6 Drawer Dresser


Assembly Instructions

WI-0724

4 Fit the 'L' Bracket to the Side Panel (G & J).

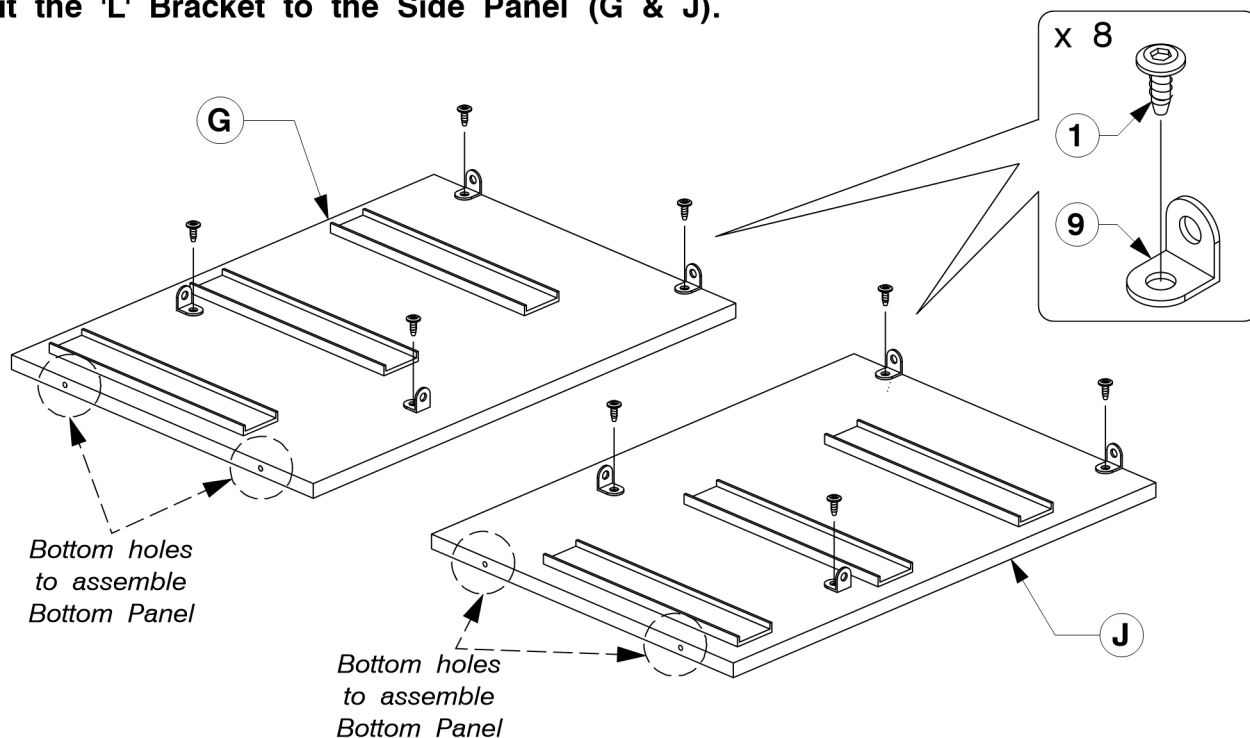

5 Fit the Side Panel- Right Hand (J) & Center Frame (H) to the Top Panel (A).

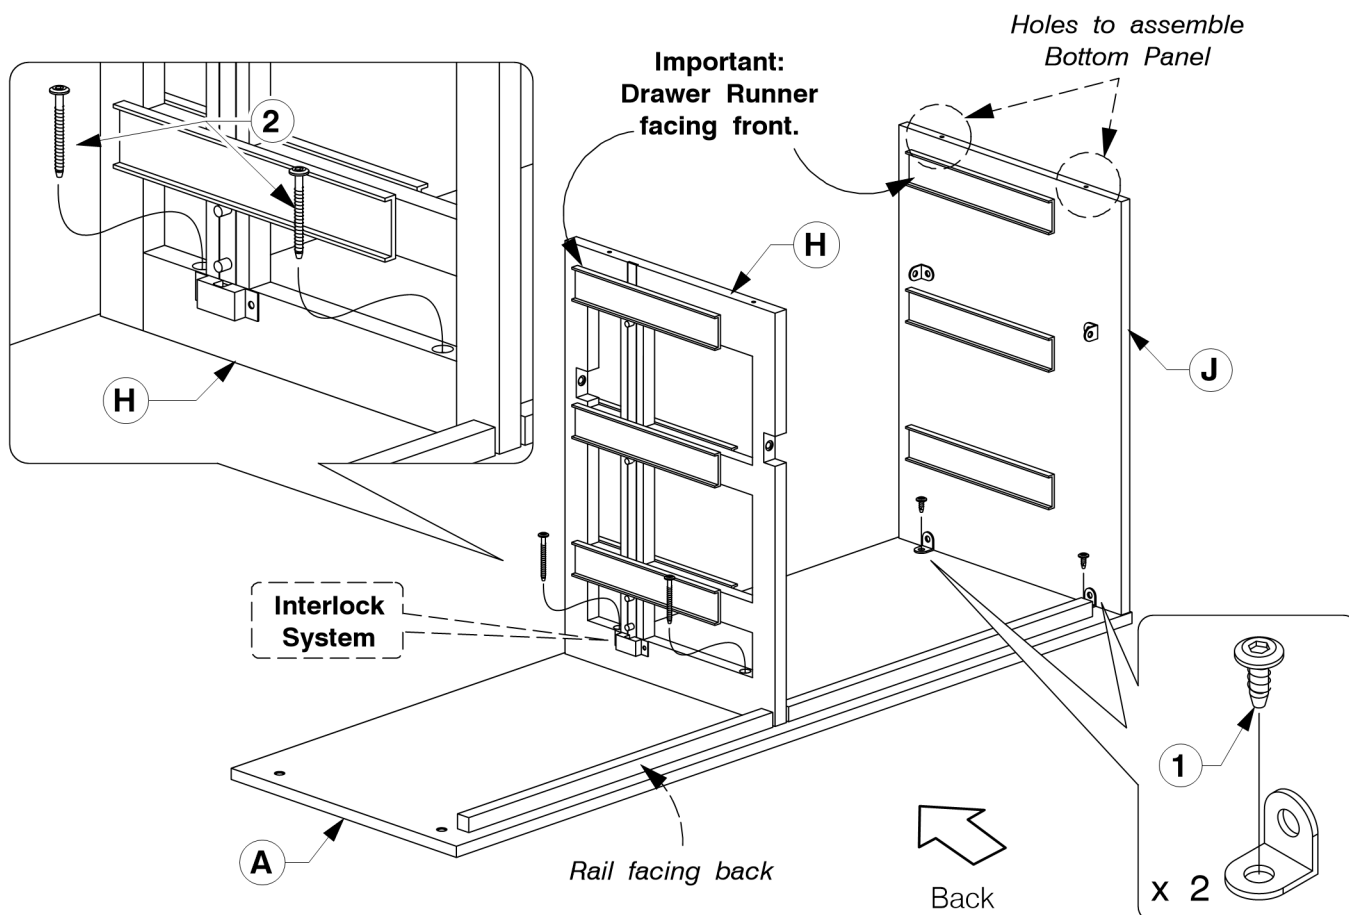


9012 6 Drawer Dresser


Assembly Instructions

WI-1123

- 6** Fit the Support Bar (C) to the Side Panel- Right Hand (J) & Center Frame (H) as shown.

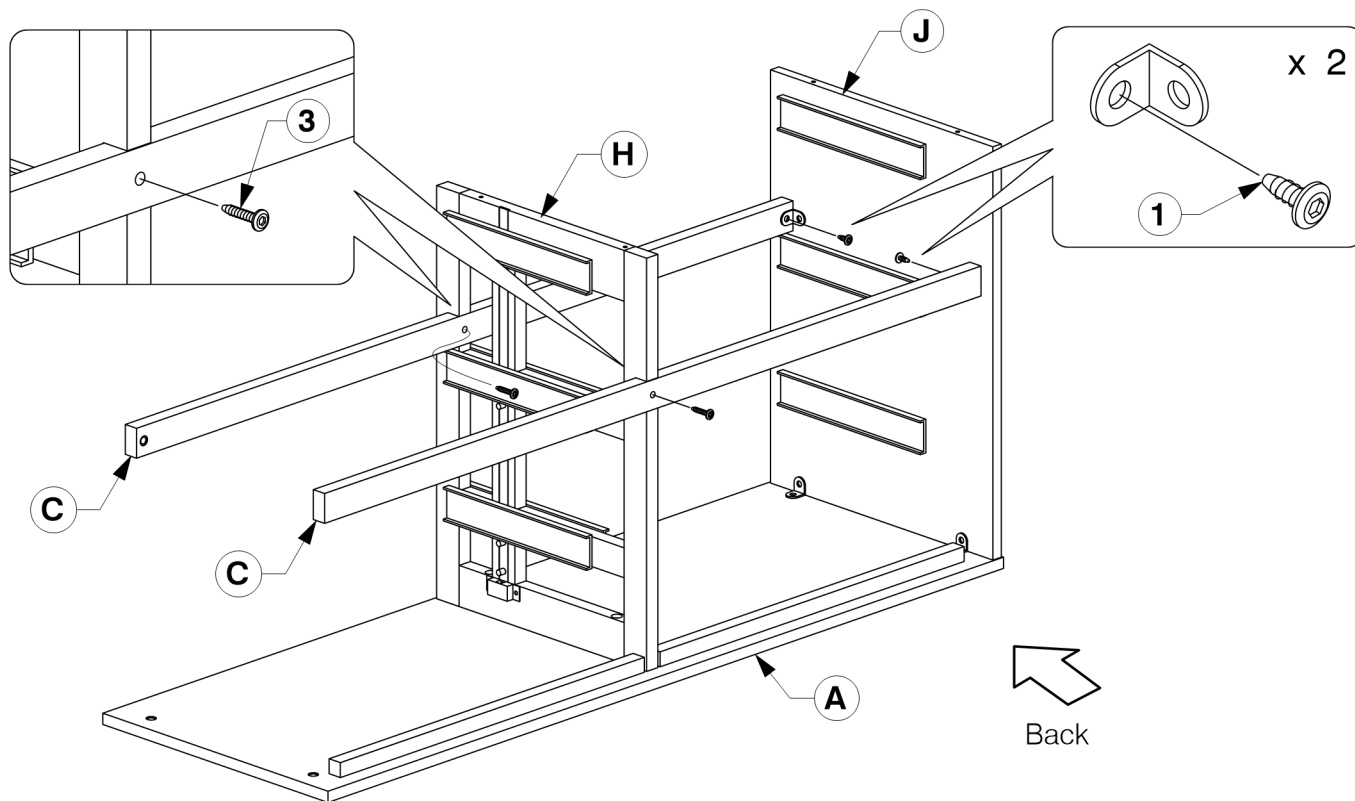

- 7** Fit the other side of Side Panel- Left Hand (G) to the Top Panel (A) & Support Bar (C).

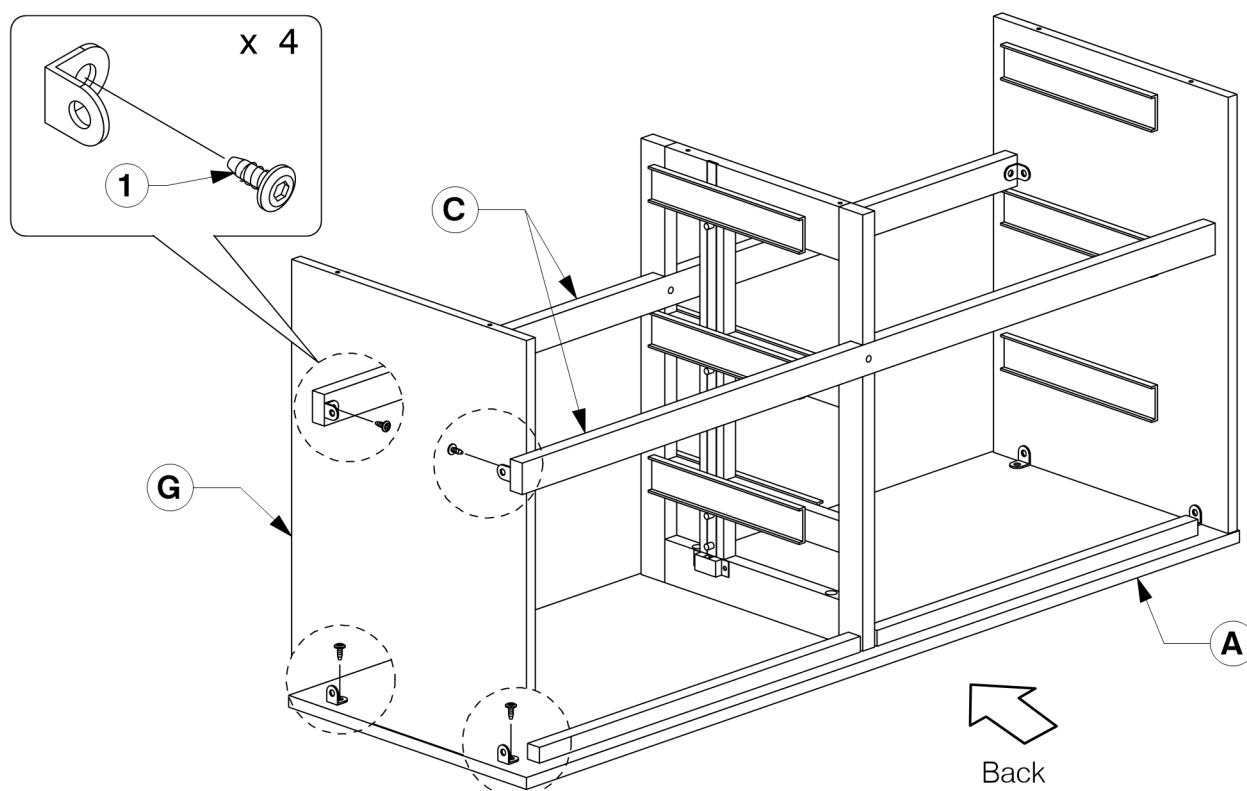


9012 6 Drawer Dresser


Assembly Instructions

WI-0724

- 8** Assembled the Bottom Panel (B) to the frame.

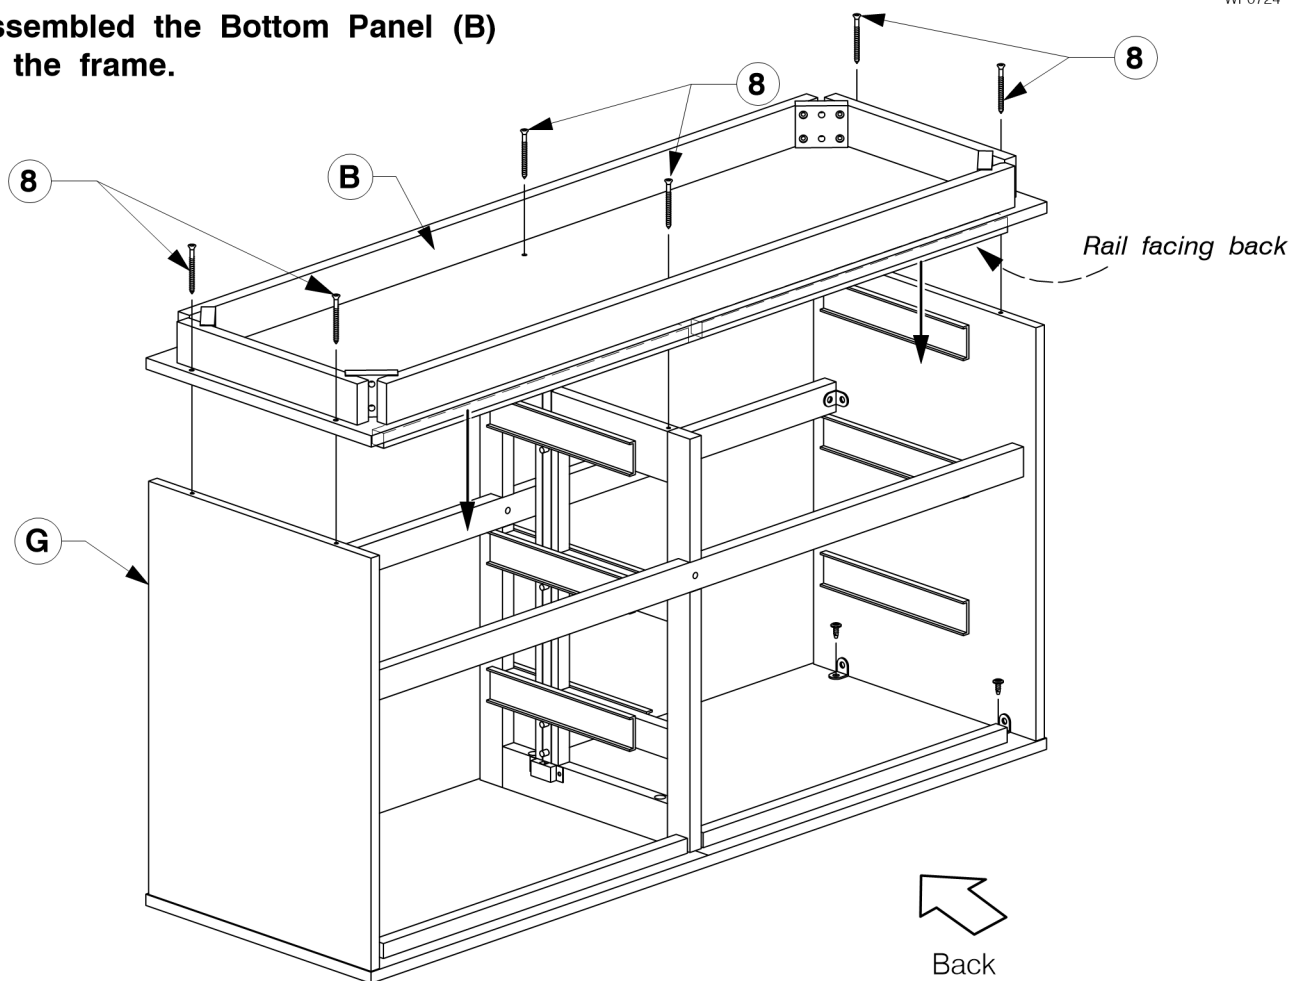

- 9** Attached the Back Panel- Wider (D) to the back of the frame.

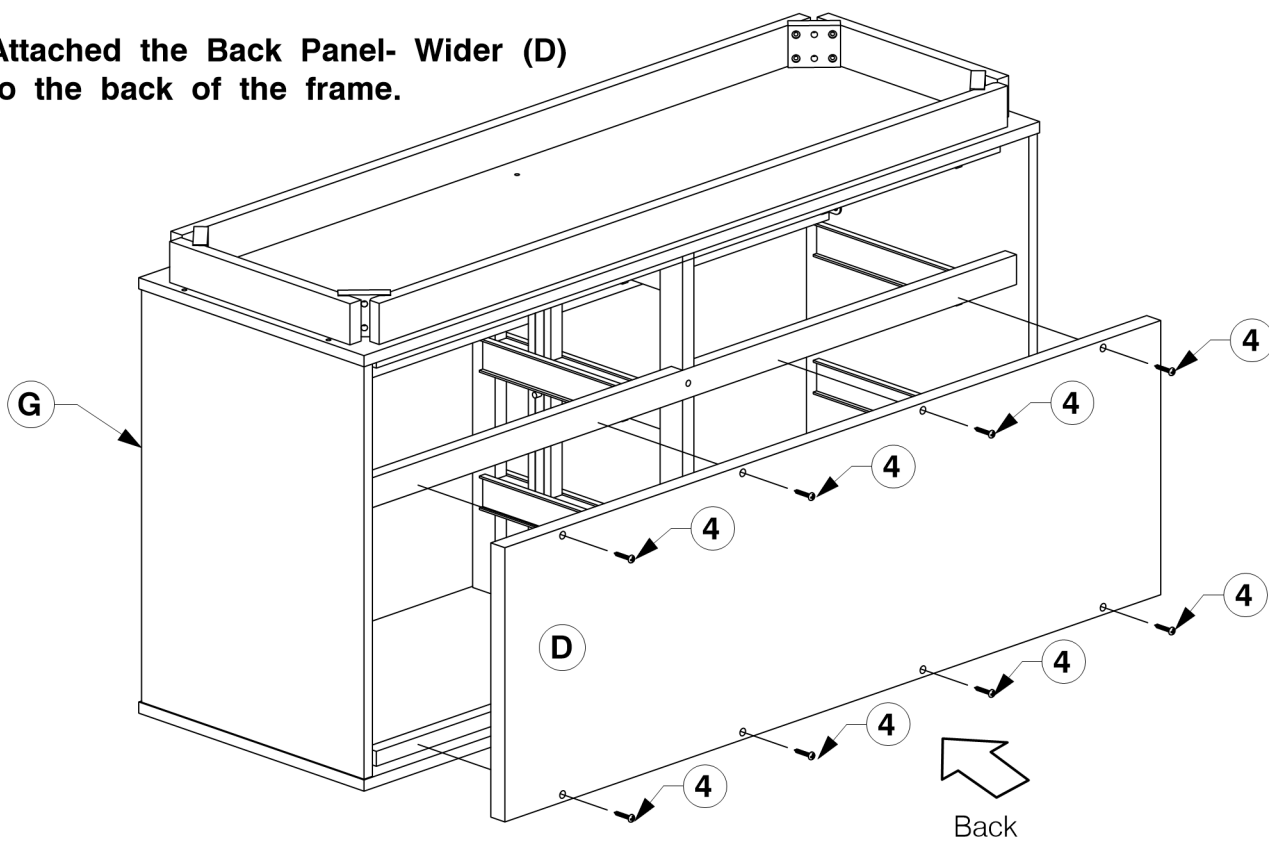


9012 6 Drawer Dresser


Assembly Instructions

WI-0724

- 10** Attached the Back Panel- Narrow (E) to the back of the frame.

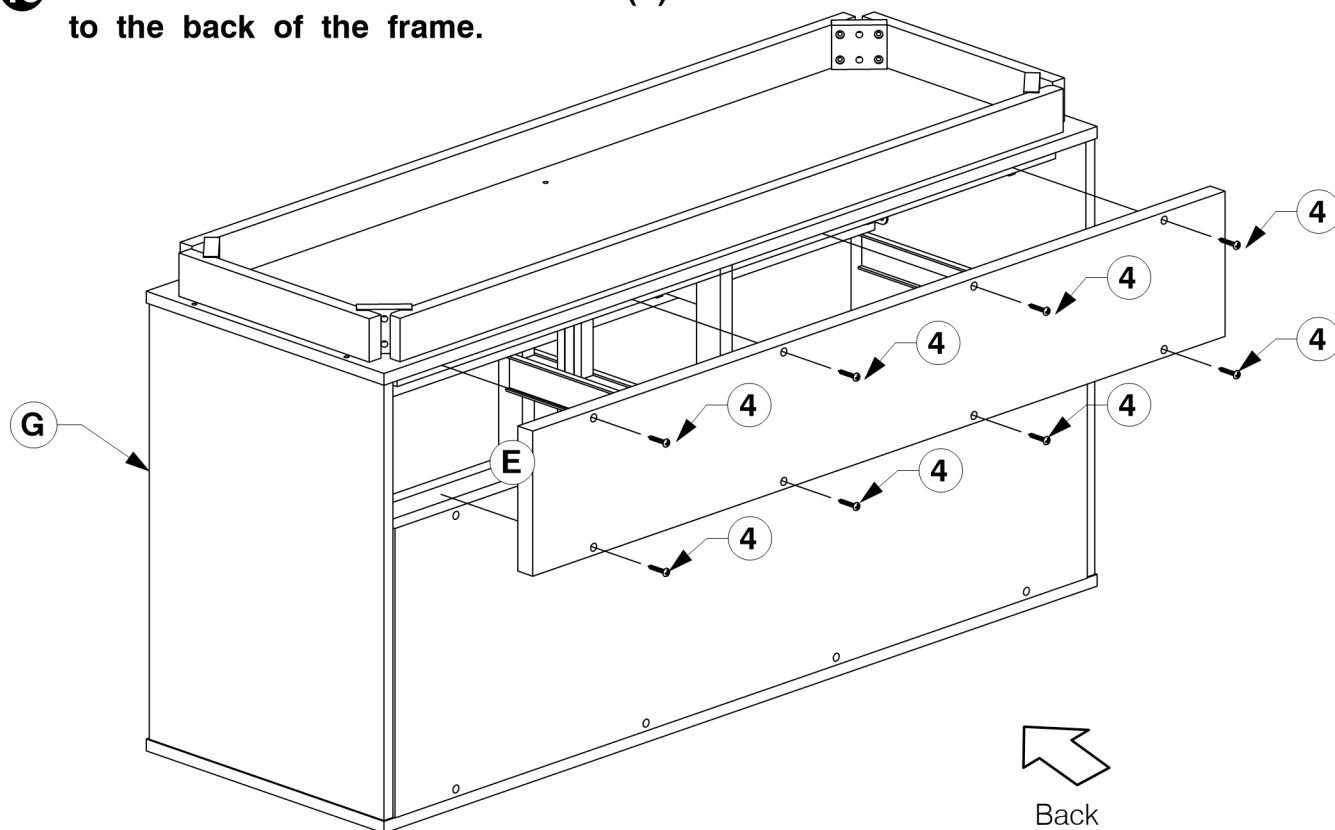

- 11** Fit the Post (F) to the Bottom Panel (B) as shown below.

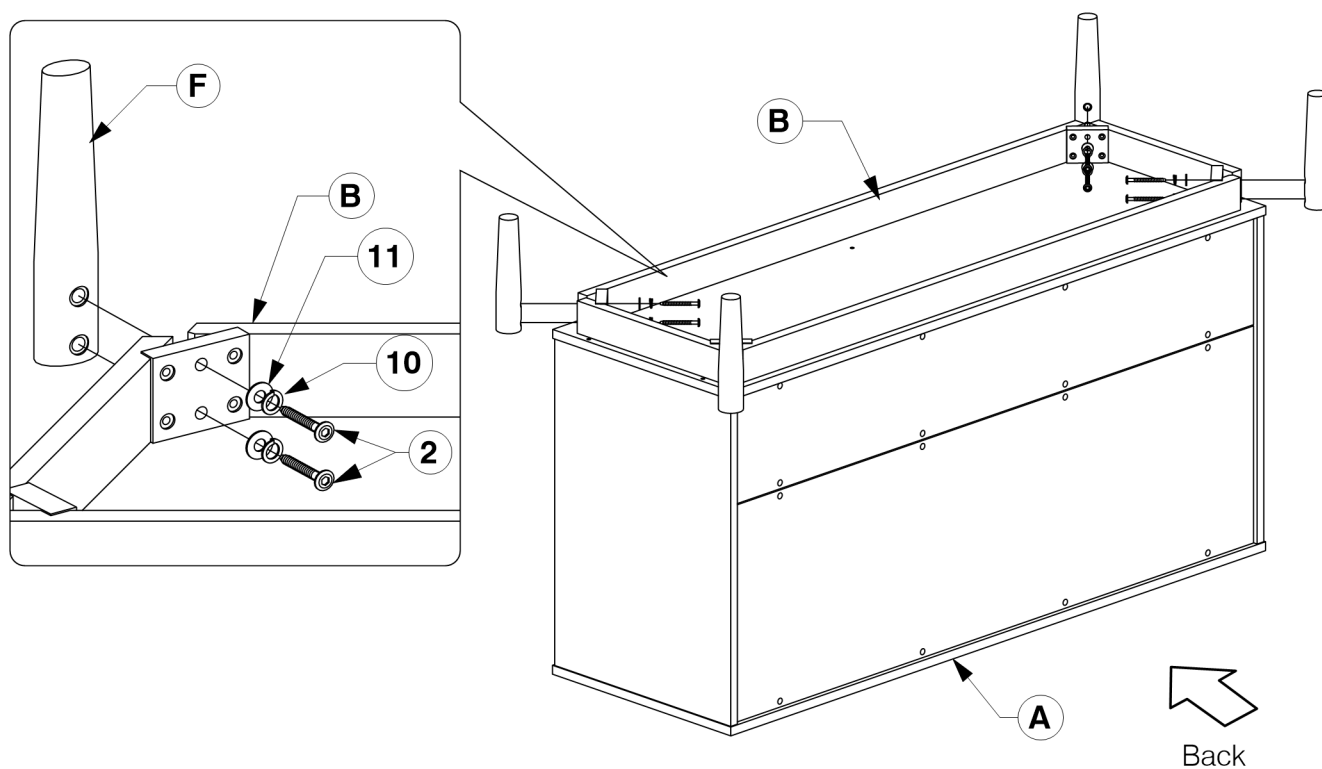



9012 6 Drawer Dresser

Assembly Instructions



WI-0724

12 Install the Drawers.



LEFT

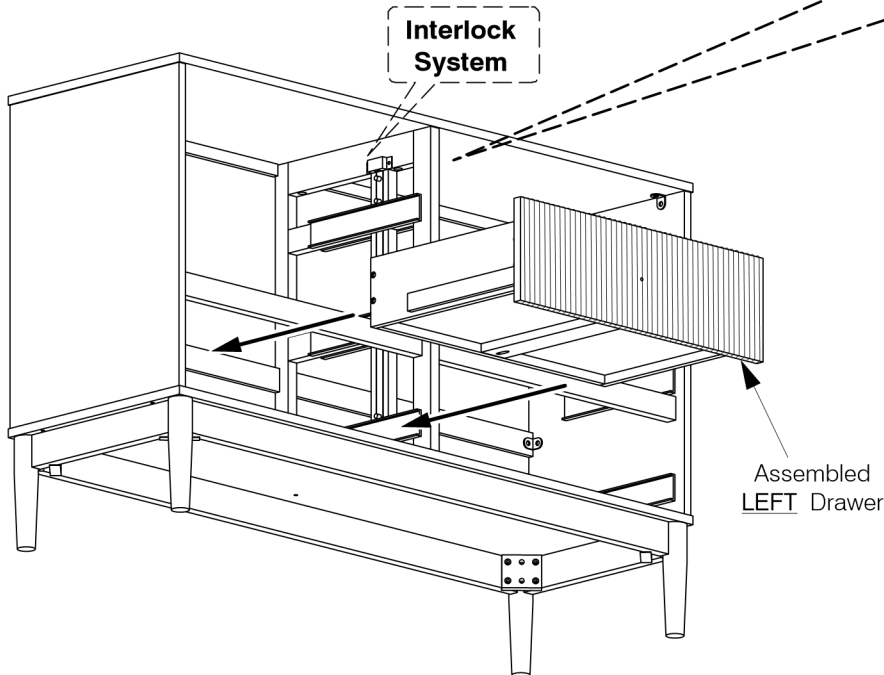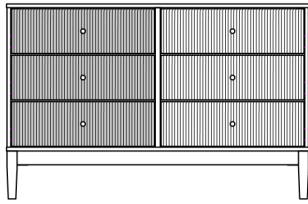



- Push the interlock bar **upwards** before inserting the drawers.

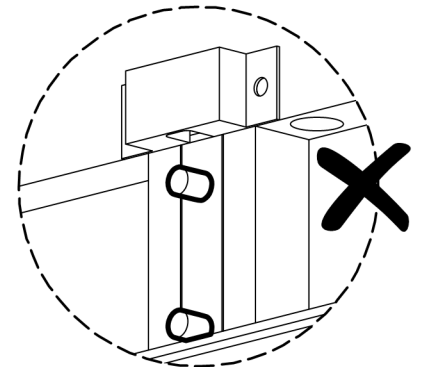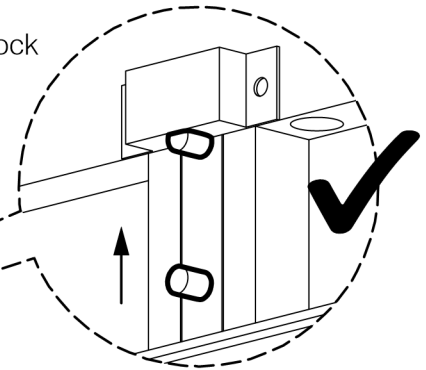

RIGHT

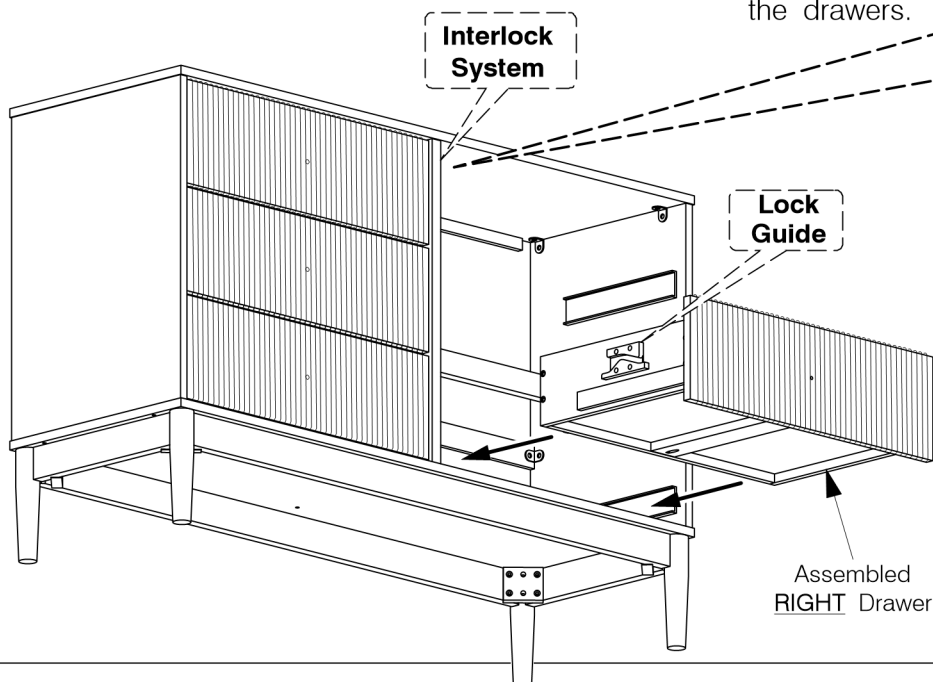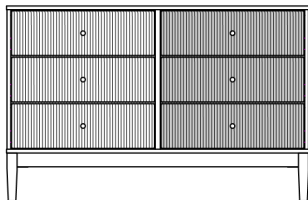

- Push the interlock bar **upwards** before inserting the drawers.

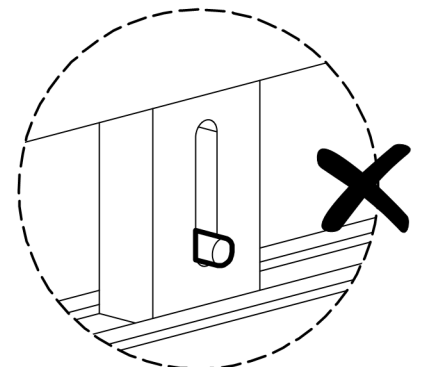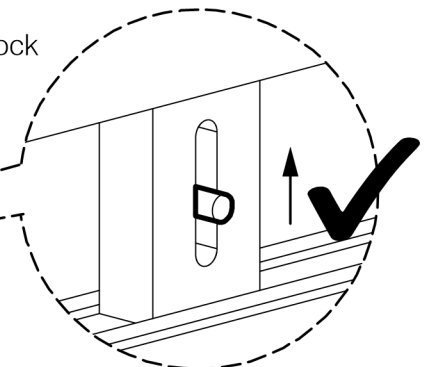


9012 6 Drawer Dresser

Assembly Instructions


WI-0724

13 Adjust the Drawer Face (K).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.


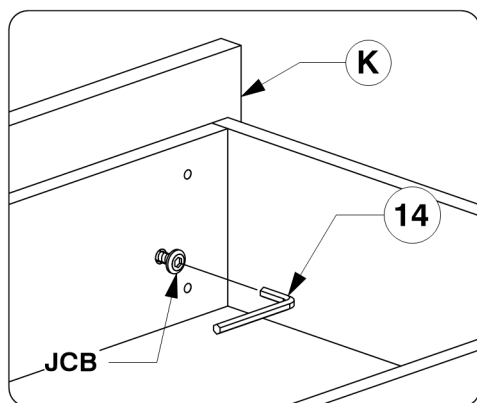


* NOTE: Only one drawer
can be open at a time.

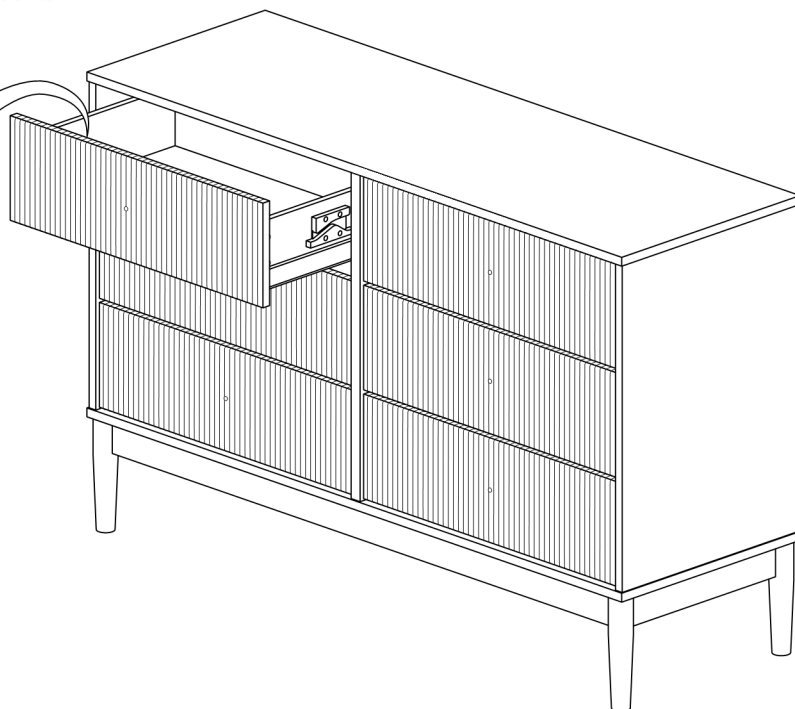

14 After the Drawer Faces (K) are aligned, secure with wood screws.

* NOTE: Only one drawer
can be open at a time.

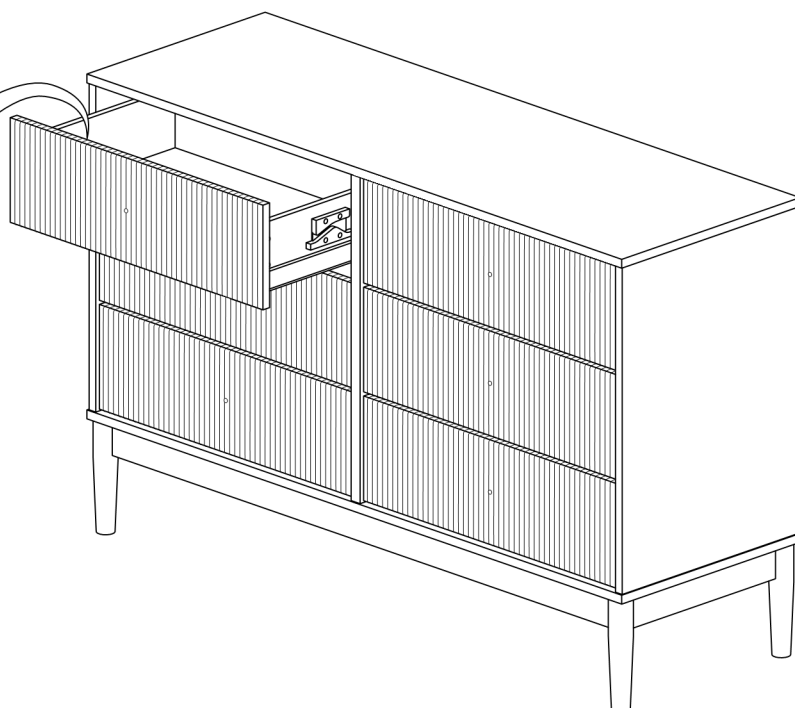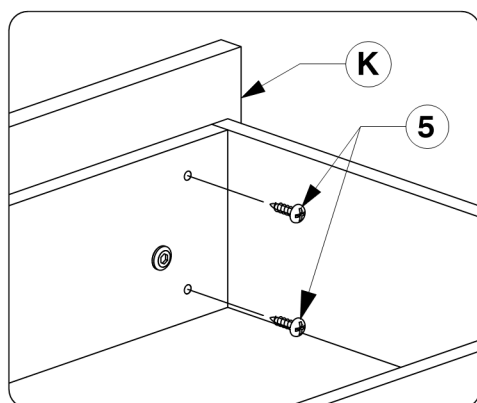



9012 6 Drawer Dresser

Assembly Instructions


WI-0724

15 Finally, fit the Handle to the Drawer Face (K).


* NOTE: Only one drawer can be open at a time.

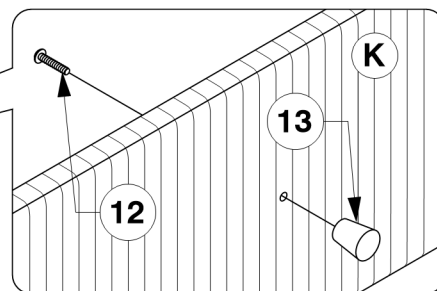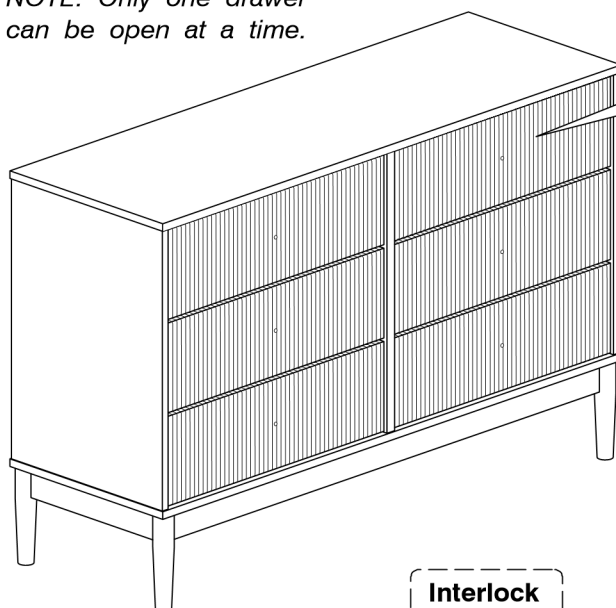



16 Remove the Drawers.

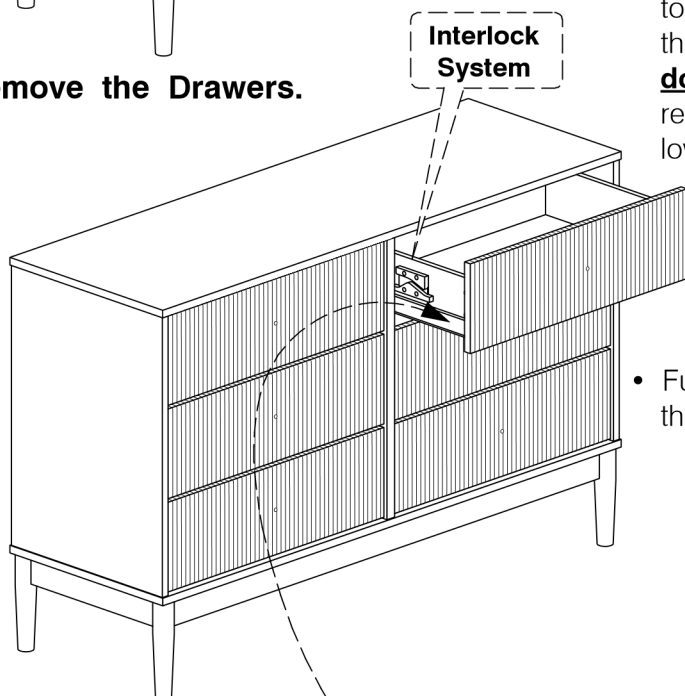


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

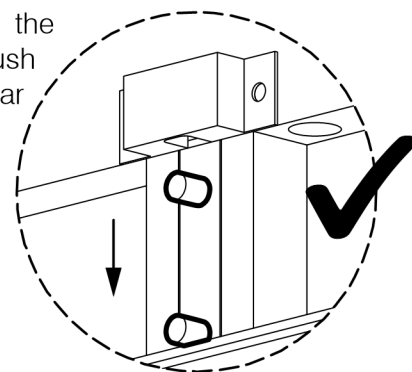

- Fully open the Drawer.

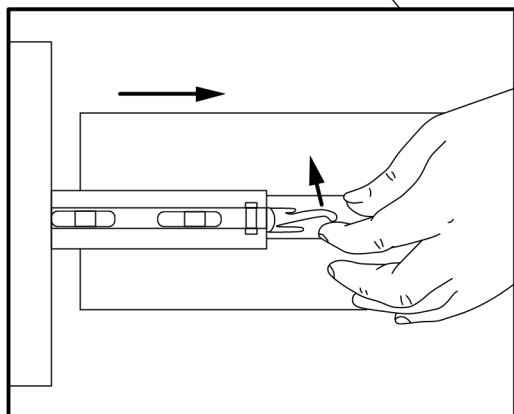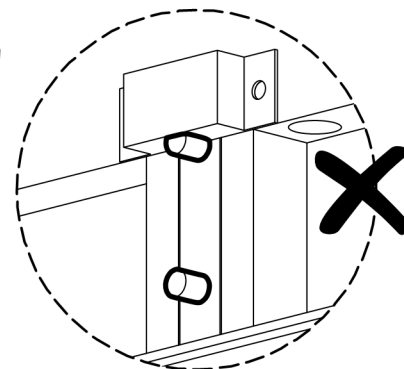

- Lift the **LEFT** side clip up.


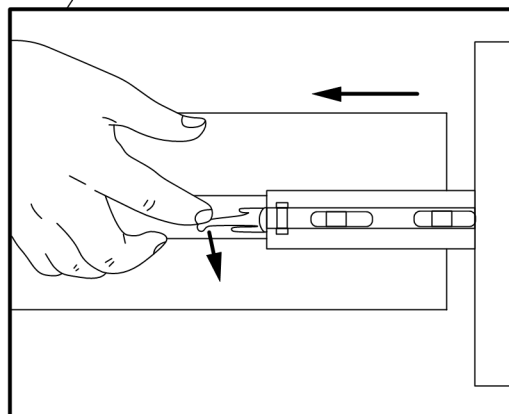


- Push **RIGHT** side clip down.

9012 2 Drawer Nightstand


Assembly Instructions

WI-0724

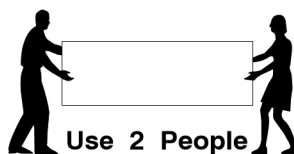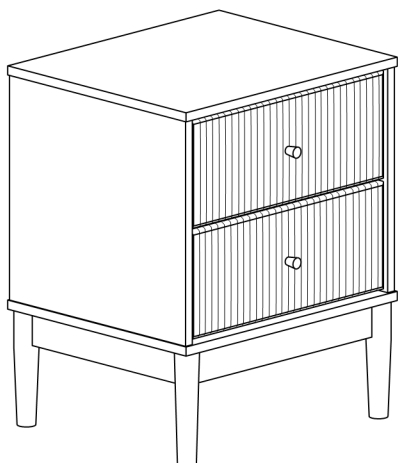


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


1 Parts List

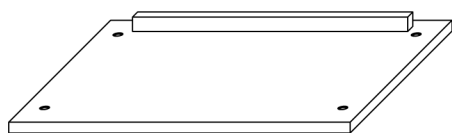


A Top Panel x 1

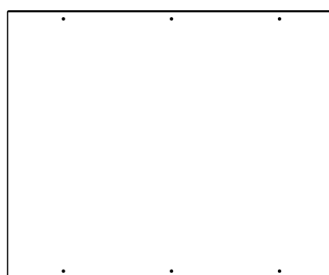

D Back Panel x 1

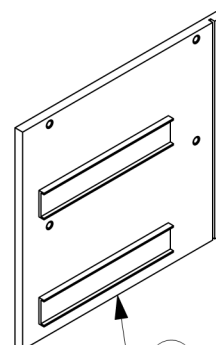

F Side Panel (Left Hand) x 1

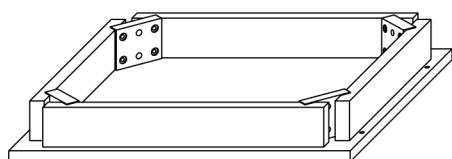


B Bottom Panel x 1




C Support Bar x 2




E Post x 4

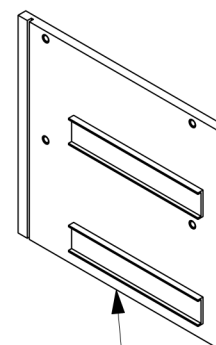


G Side Panel (Right Hand) x 1

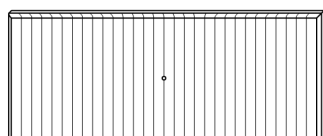


H Drawer Face x 2



J Drawer Back x 2



K Drawer Side (Left Hand) x 2



L Drawer Side (Right Hand) x 2




M Drawer Bottom x 2

9012 2 Drawer Nightstand


Assembly Instructions

WI-0724


2 Hardware List

- | | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 60mm JCB x 8 | 3 M4 x 25mm Wood Screw x 16 | 4 M4 x 20mm Wood Screw x 8 | 5 M4 x 16mm Wood Screw x 6 | 6 CSK Cap Wood Screw (M6 x 60mm) x 4 |
|  |  |  |  |  |  |
| 7 Spring Washer x 8 | 8 Flat Washer x 8 | 9 'L' Bracket (5005-3) x 8 | 10 M4 x 22mm Wood Screw x 2 | 11 Handle (1005) x 2 | 12 Allen Key x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

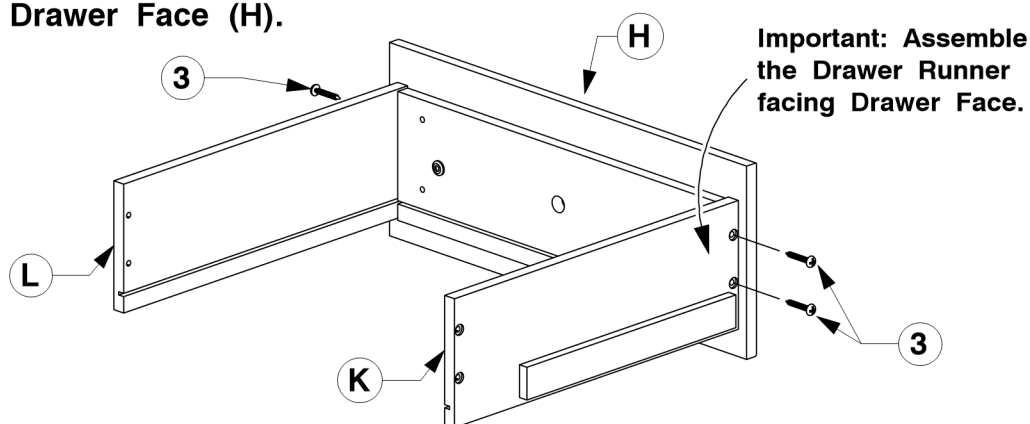

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

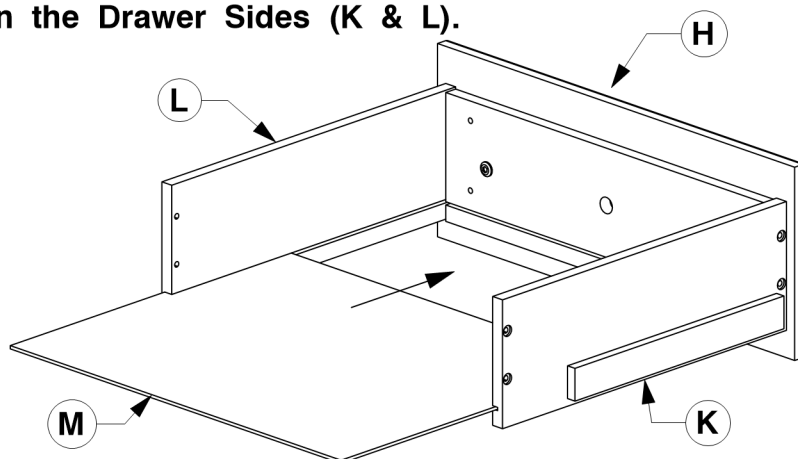

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

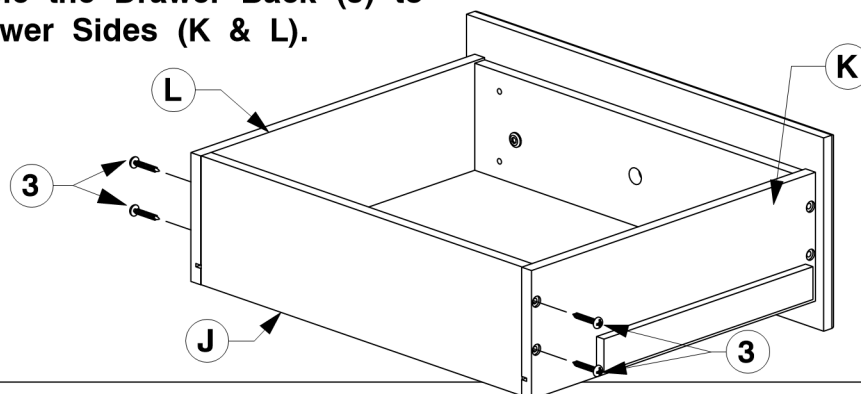


9012 2 Drawer Nightstand


Assembly Instructions

WI-0724

6 Fit the 'L' Bracket to the Side Panel (F & G).

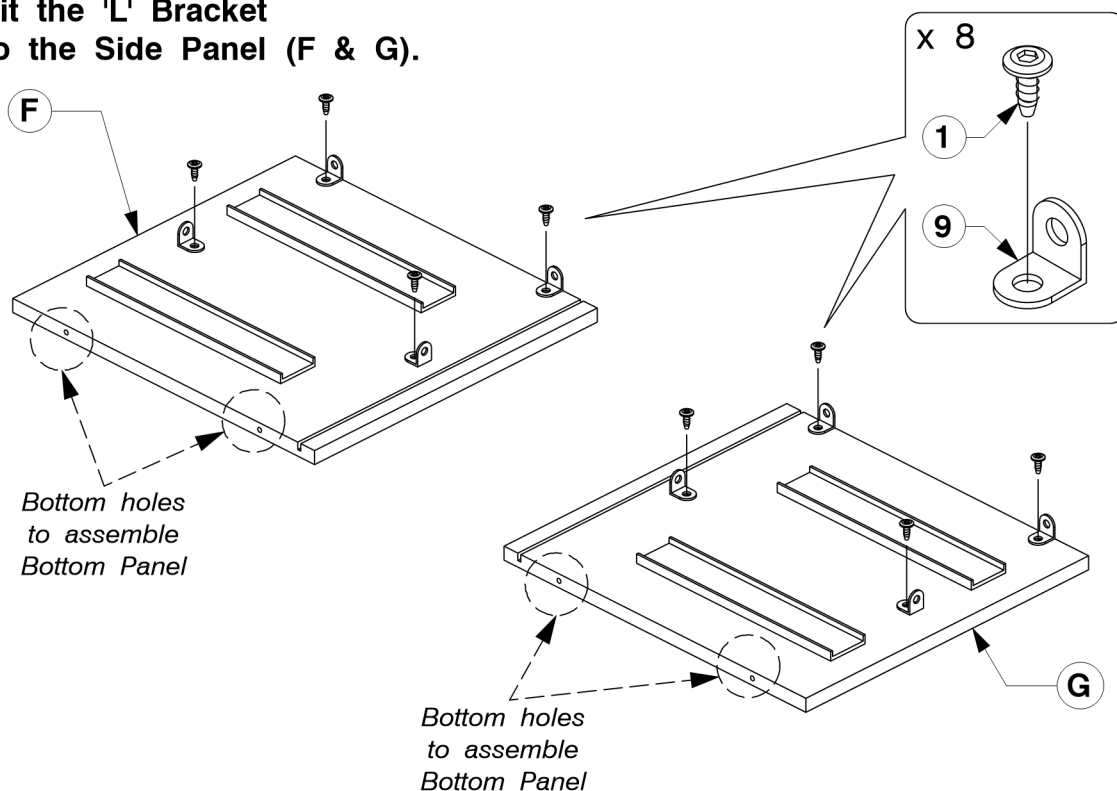

7 Assembled the Side Panel (F & G) to the Top Panel (A).

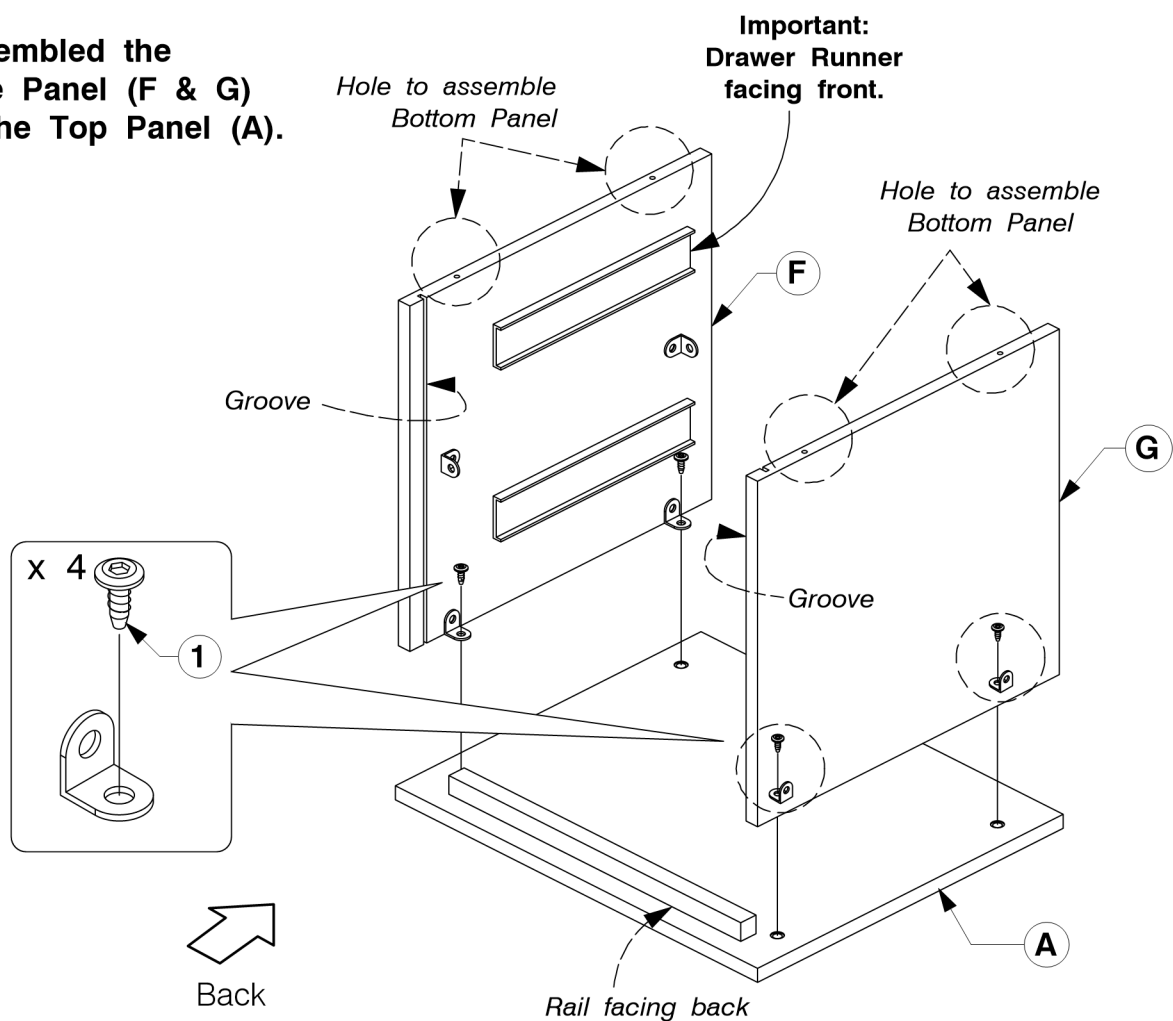


9012 2 Drawer Nightstand


Assembly Instructions

WI-0724

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

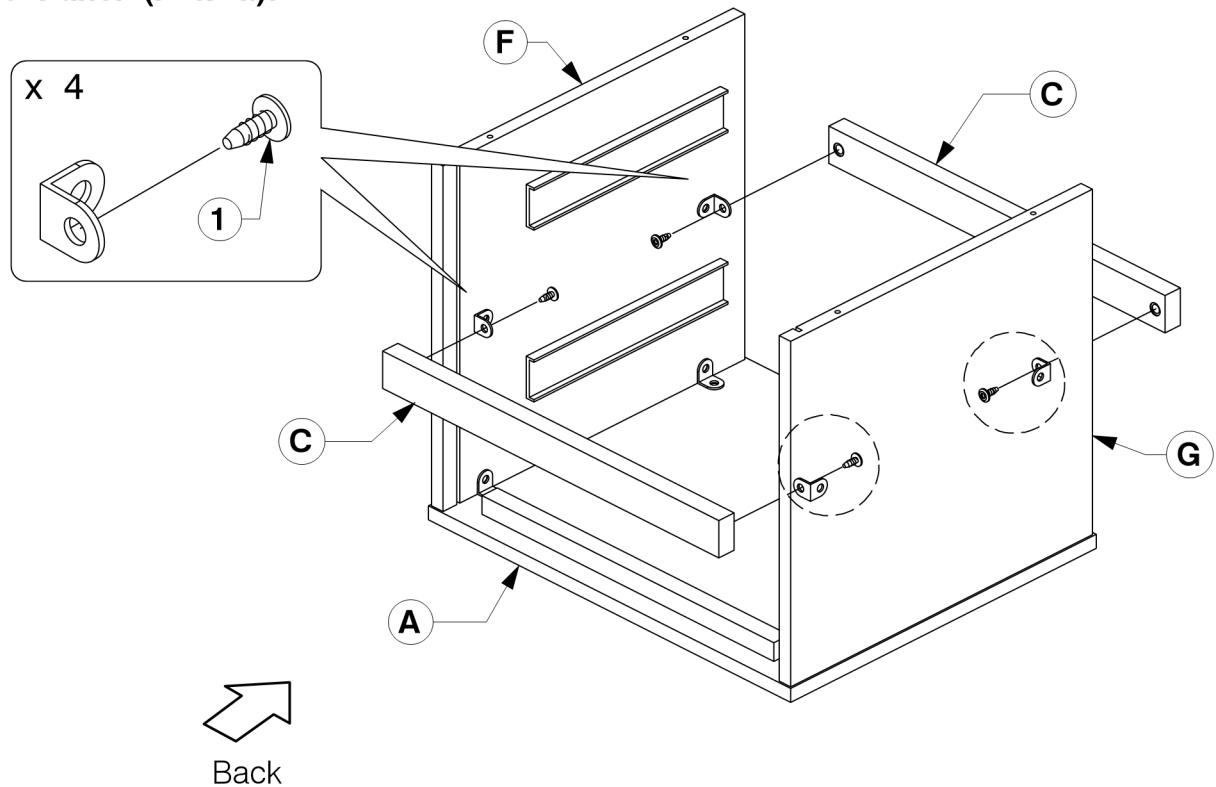

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

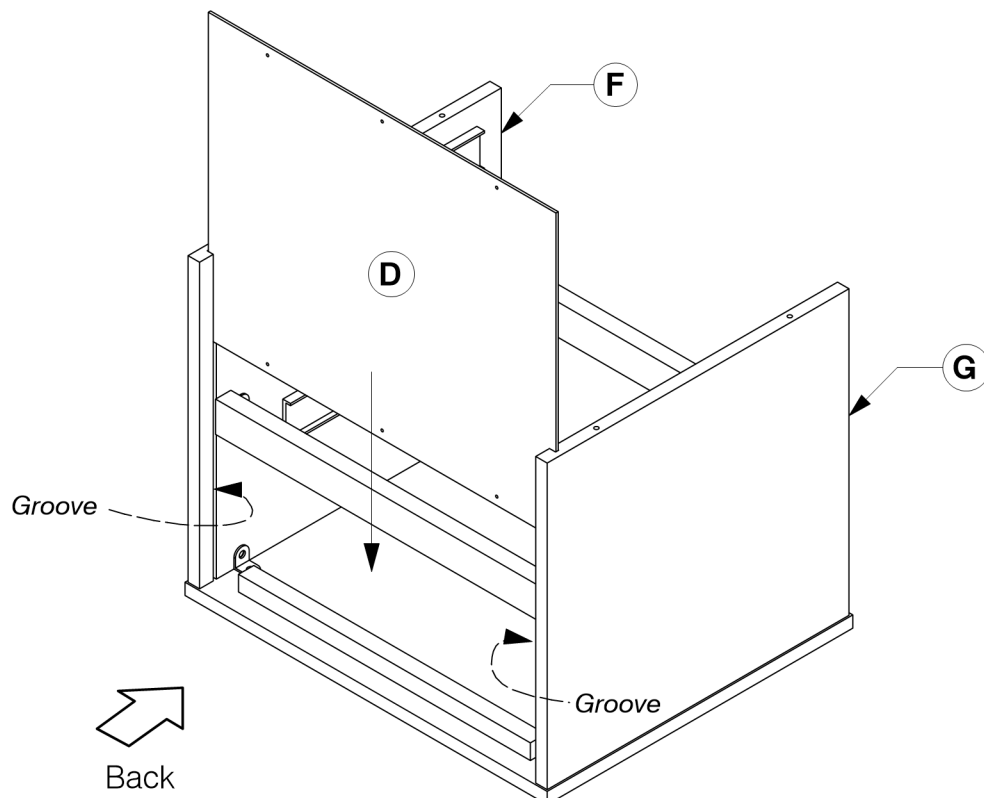


9012 2 Drawer Nightstand


Assembly Instructions

WI-0724

- 10** Fit the Bottom Panel (B) to the Bottom of the Side Panel (F & G).

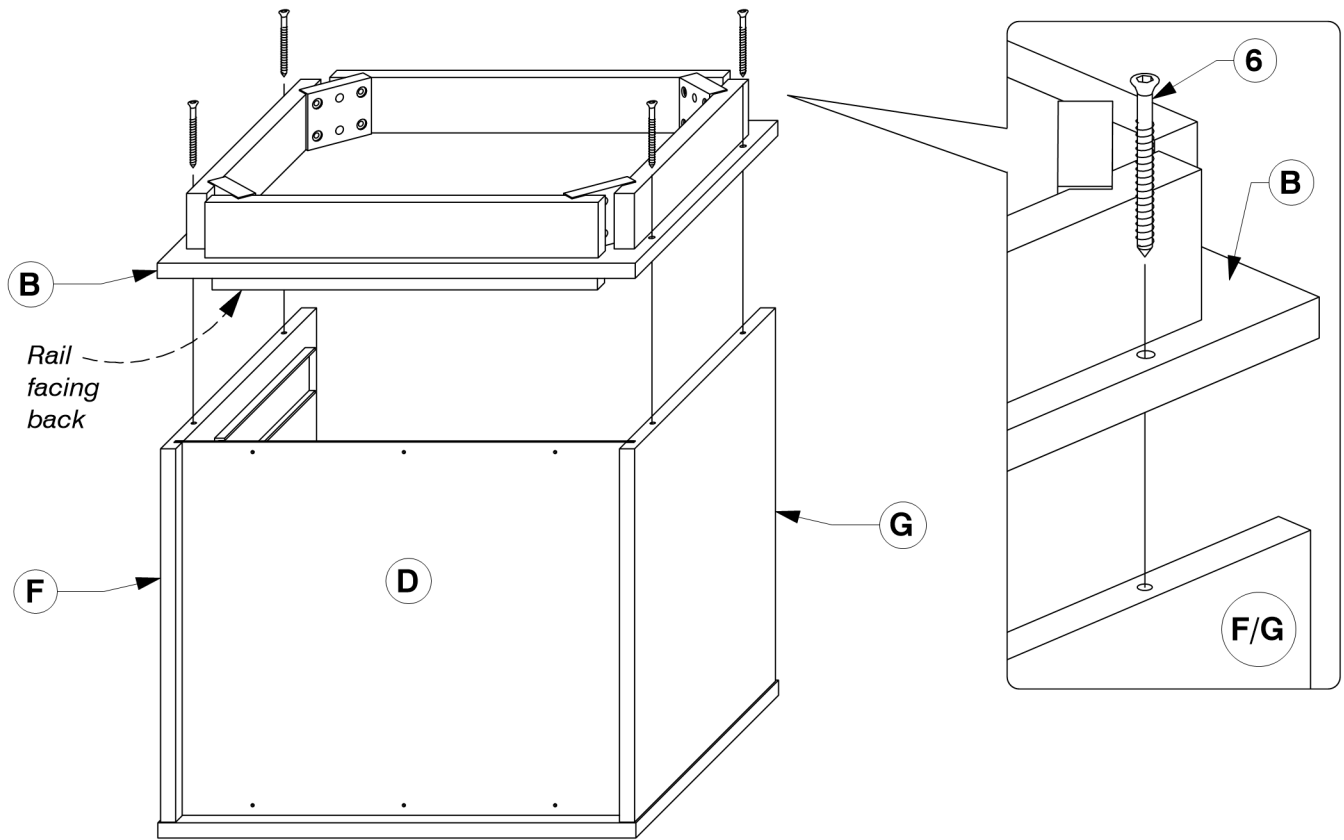

- 11** Use screws to tighten the Back Panel (D) to the back of the frame.

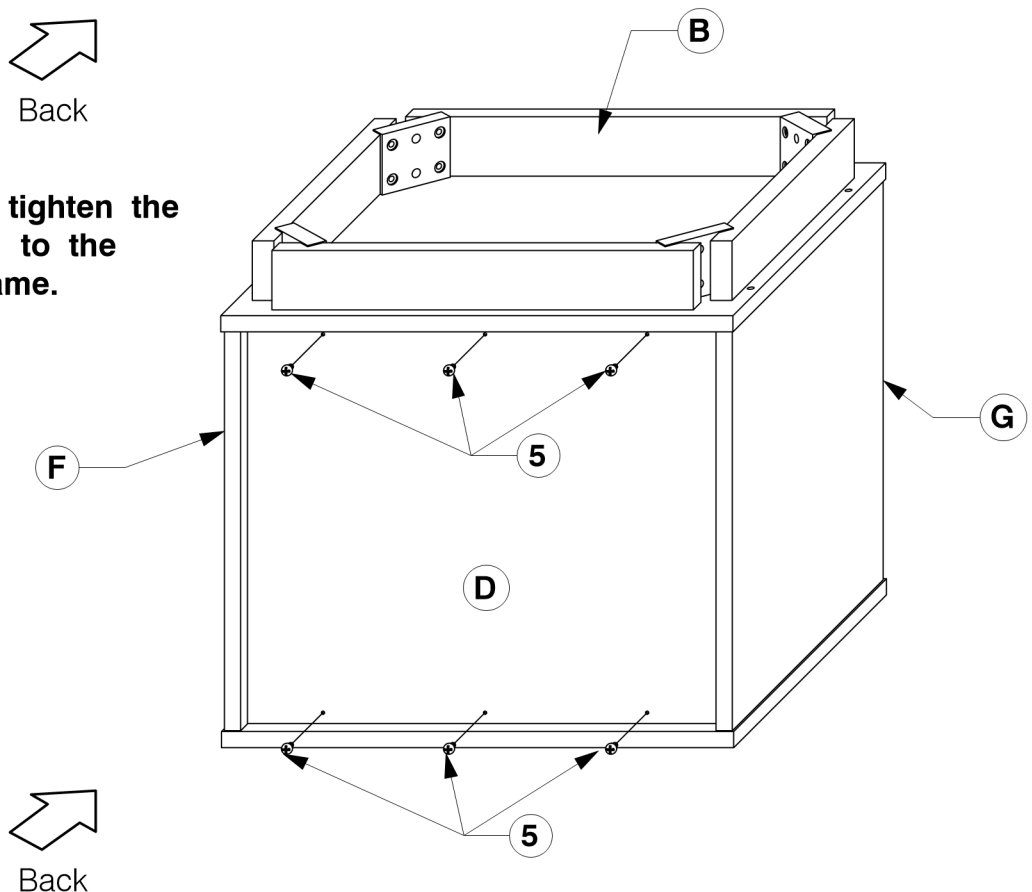


9012 2 Drawer Nightstand

Assembly Instructions


WI-0724

12 Fit the Post (E) to the Bottom Panel (B).

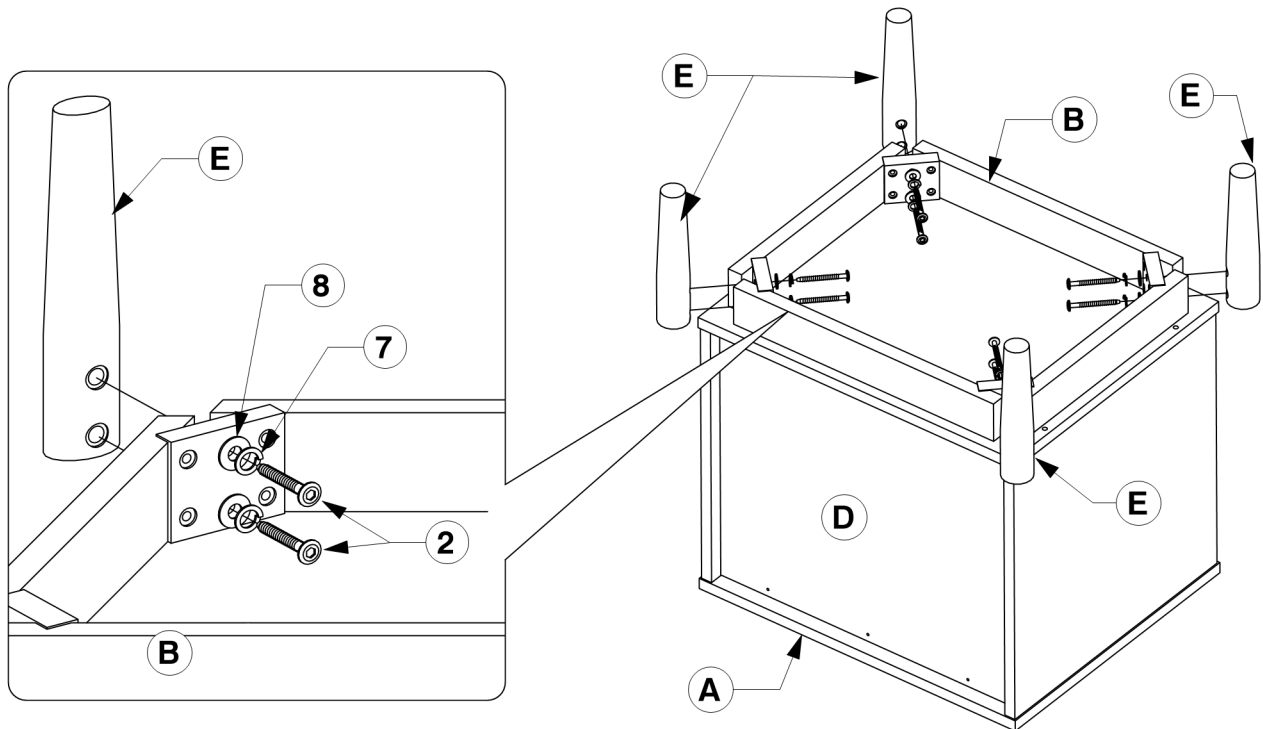

13 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

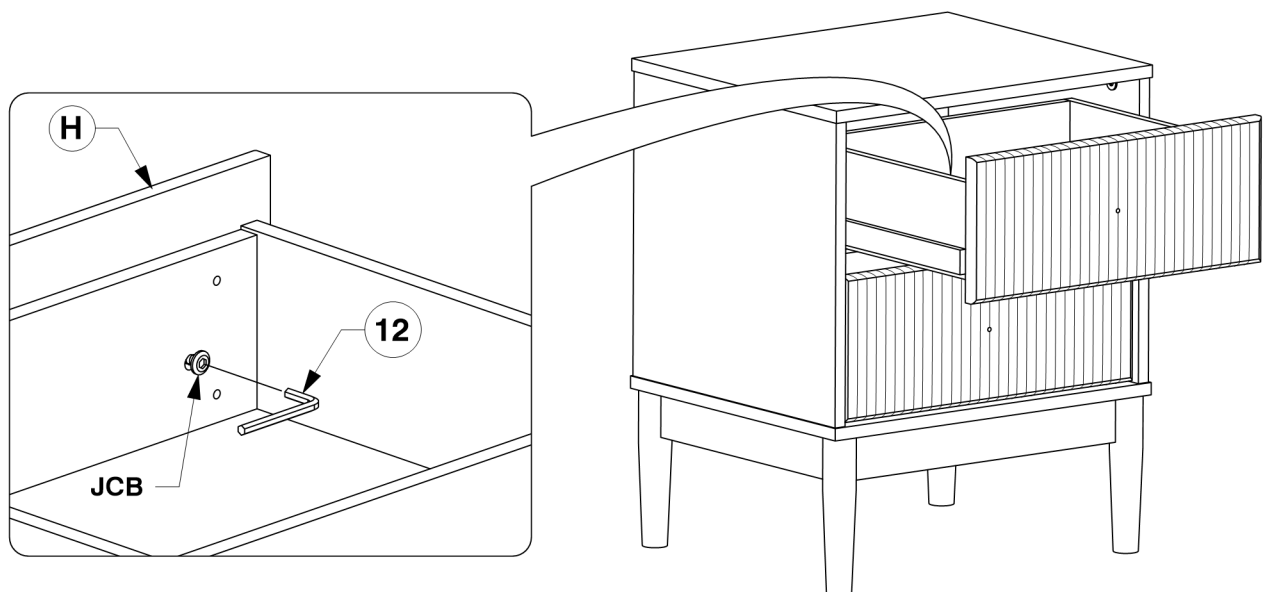


9012 2 Drawer Nightstand

Assembly Instructions

WI-1220

- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

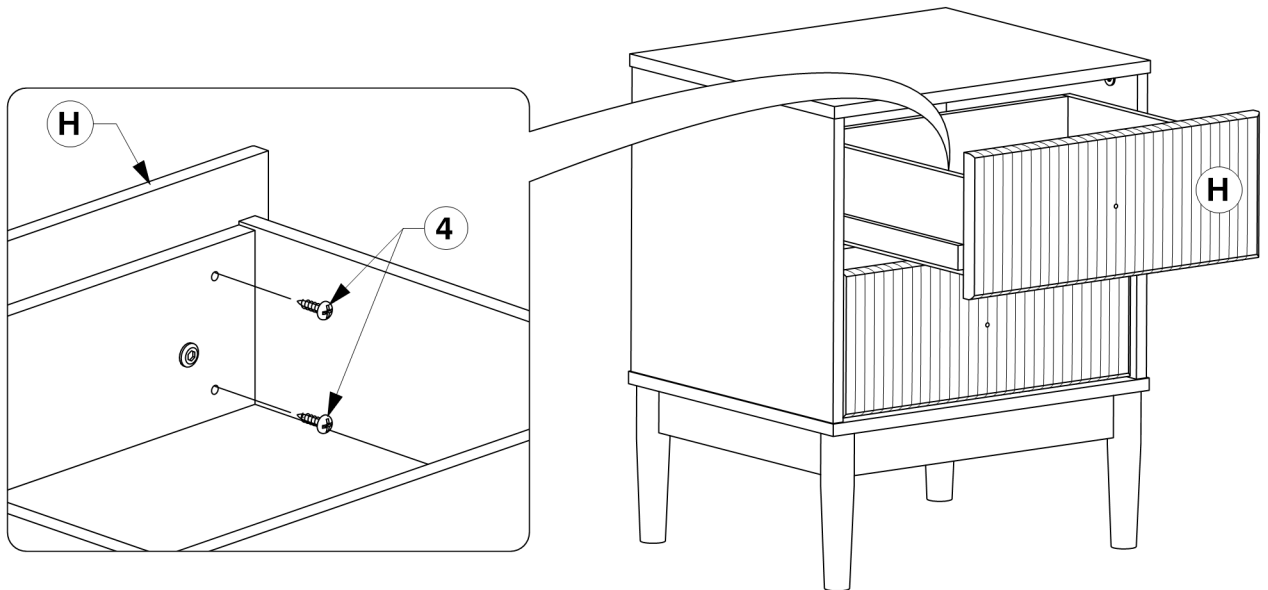

- 15** Finally, fit the Handle to the Drawer Face (H).

