ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
Tool needed : Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	BOX	QTY
A	LEG FRONT	1	2 PCS
B	LEG BACK (L/R)	1	2 PCS
C	CUSHION	1	1 PC

HARDWARE LIST (BOX : 1)		
ITEM	DESCRIPTION	QTY
1	JCBB BOLT M8 x 50mm	8 PCS
2	M8 FLAT WASHER	8 PCS
3	M8 SPRING WASHER	8 PCS
4	M5 ALLEN KEY (BALL SHAPE)	1 PC


STEP 1

Take out LEG FRONT (A) , LEG BACK (B)
for the CUSHION BOTTOM (C).

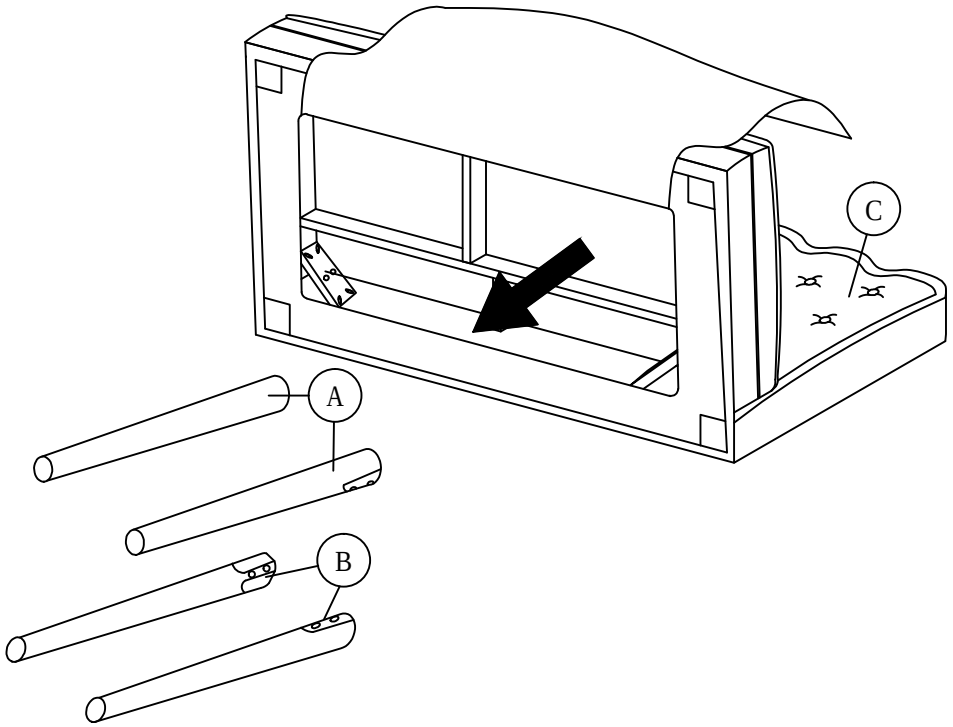


STEP 2

Assemble with the sticker.

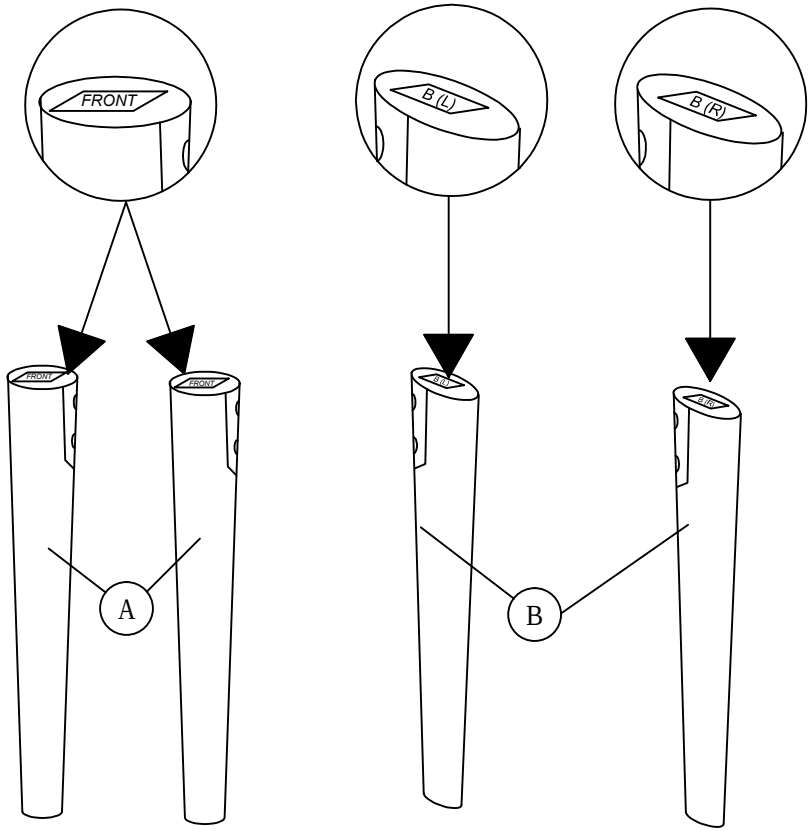


ASSEMBLY INSTRUCTIONS

STEP 3 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C).

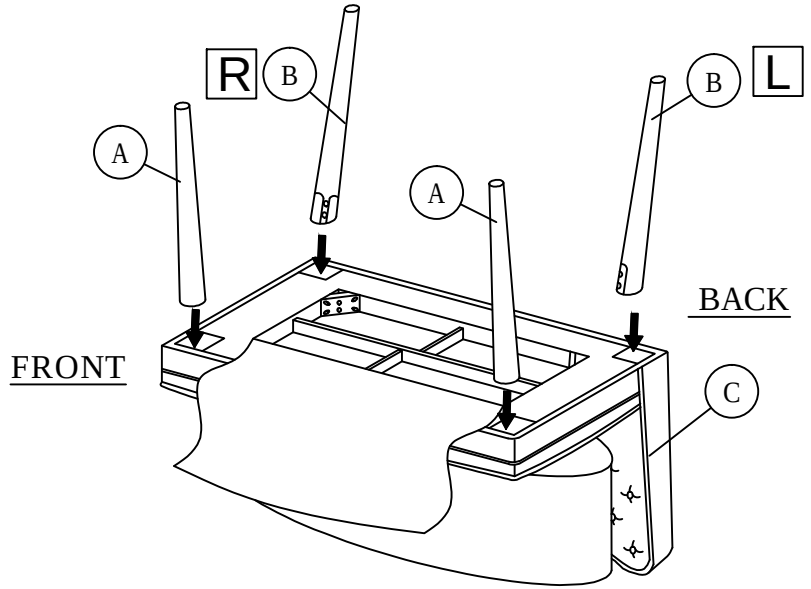


STEP 4 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C). Using hardware part 1,2,3,4.

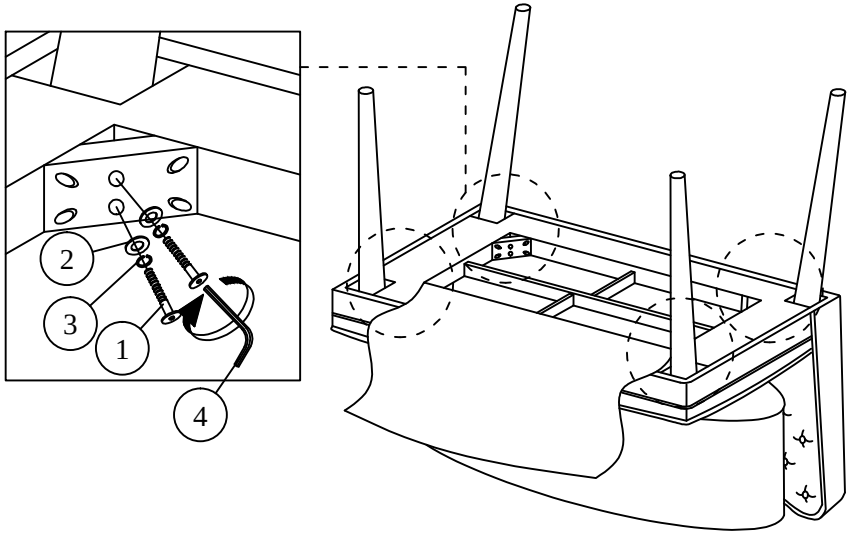

STEP 5

SOFA ASSEMBLY IS COMPLETE.

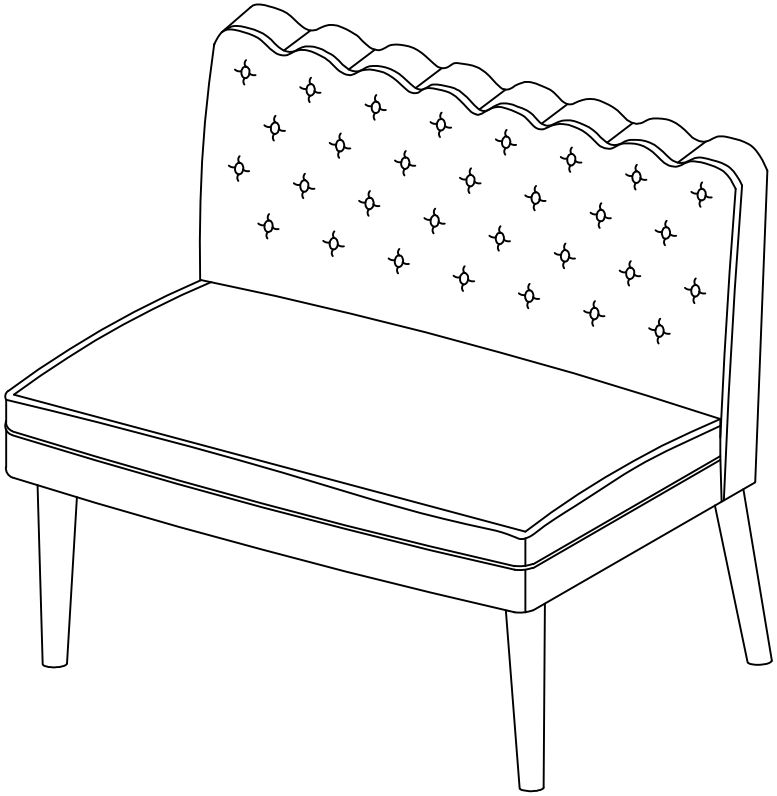

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
Tool needed : Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	BOX	QTY
A	LEG FRONT	1	2 PCS
B	LEG BACK (L/R)	1	2 PCS
C	CUSHION	1	1 PC

HARDWARE LIST (BOX : 1)		
ITEM	DESCRIPTION	QTY
1	JCBB BOLT M8 x 50mm	8 PCS
2	M8 FLAT WASHER	8 PCS
3	M8 SPRING WASHER	8 PCS
4	M5 ALLEN KEY (BALL SHAPE)	1 PC


STEP 1

Take out LEG FRONT (A) , LEG BACK (B)
for the CUSHION BOTTOM (C).

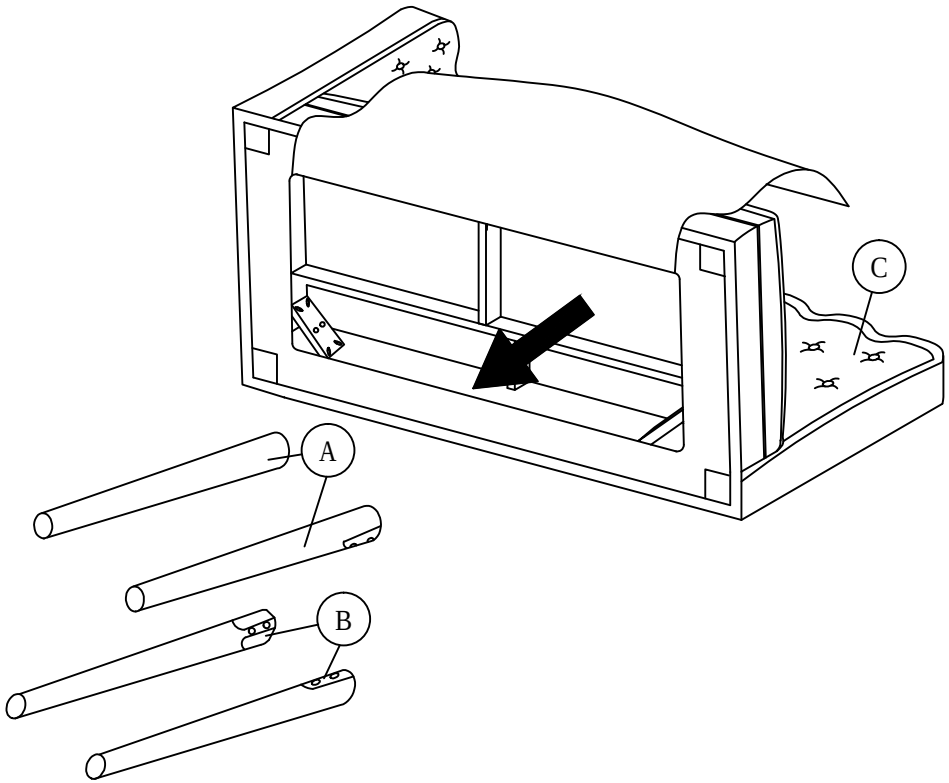


STEP 2

Assemble with the sticker.

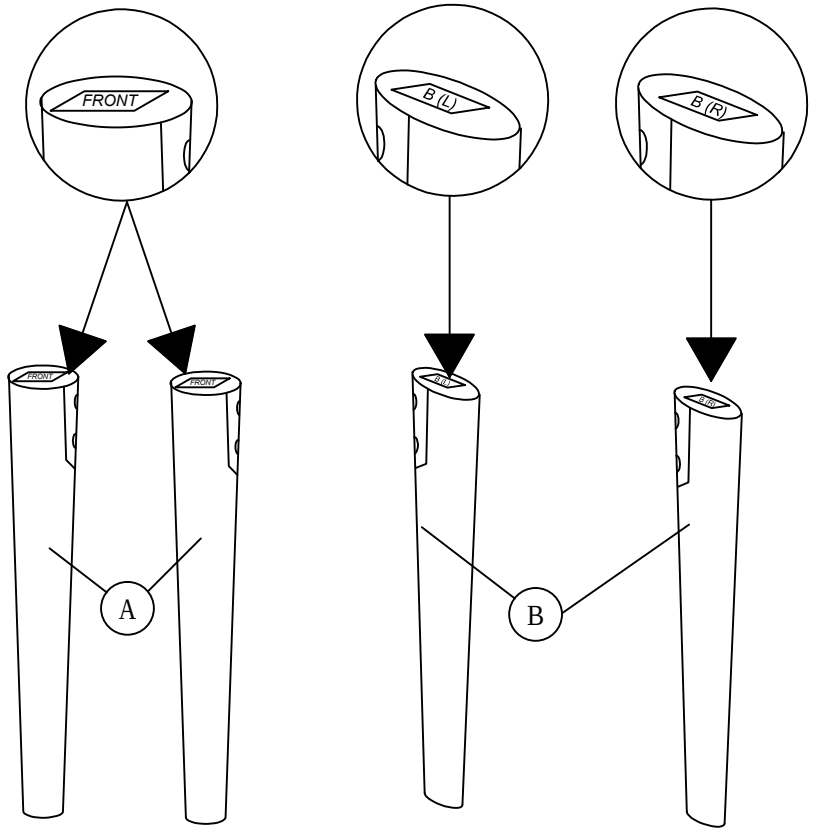


ASSEMBLY INSTRUCTIONS

STEP 3 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C).

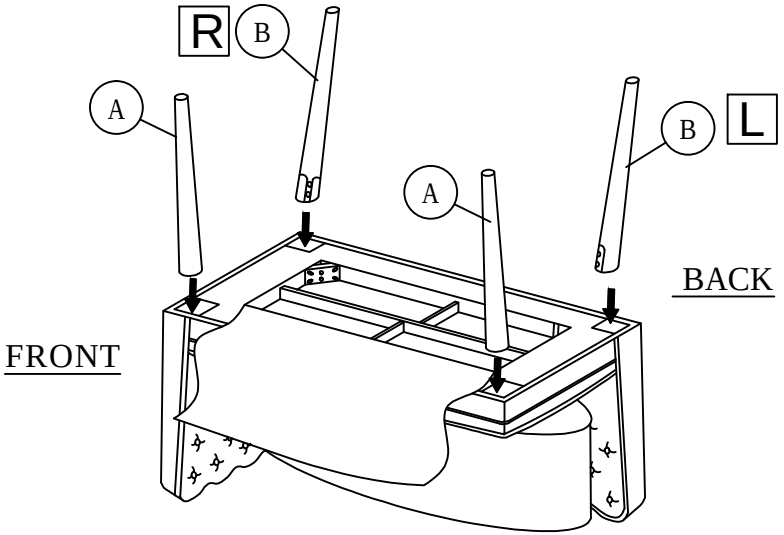

STEP 4 Follow the stickers attach the Leg Front (A) and Leg Back (B) to the Cushion (C). Using hardware part 1,2,3,4.

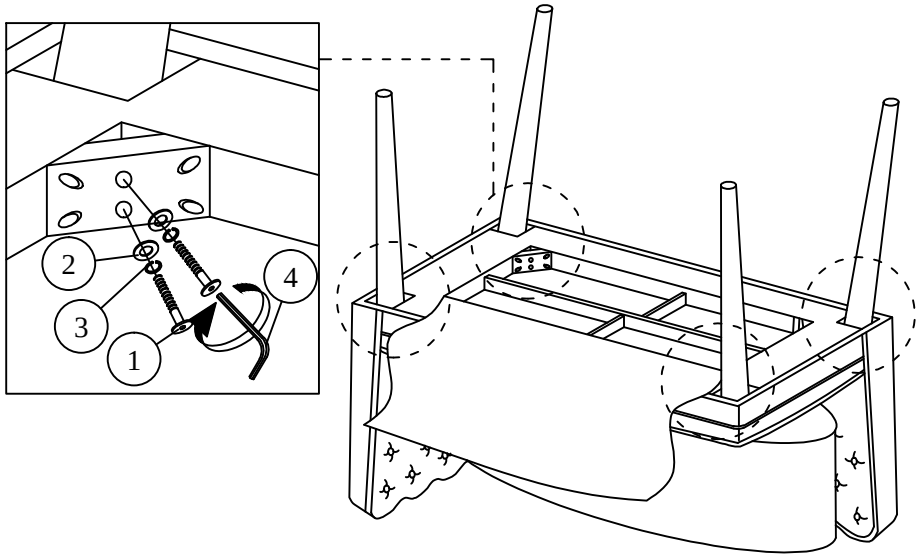

STEP 5

SOFA ASSEMBLY IS COMPLETE.

