
Assembly Instruction

A

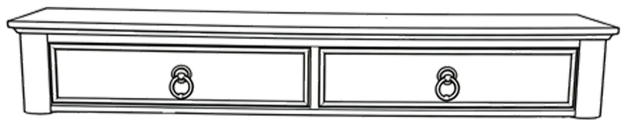


1 PC


B



1 PC

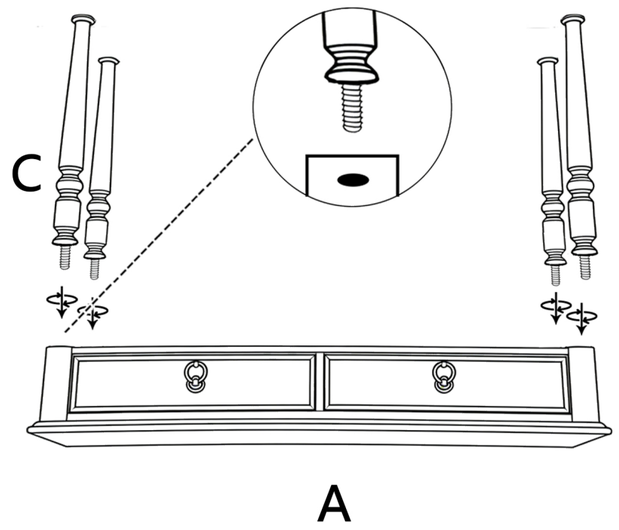

Step 1: Lay Part A with holes facing up on flat surface, then screw Parts C to Part A

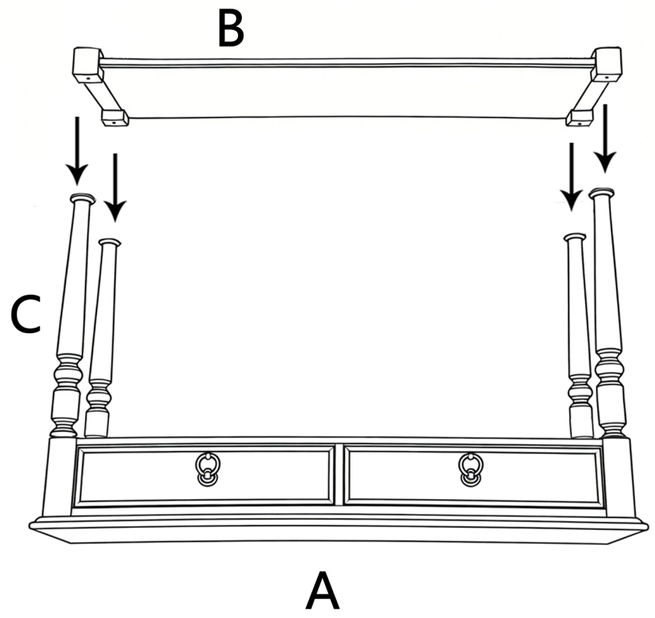


Step 2: Put Part B onto Parts C

C




4 PCS


D

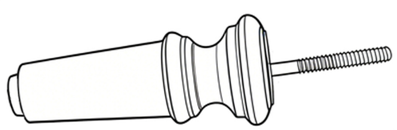

4 PCS

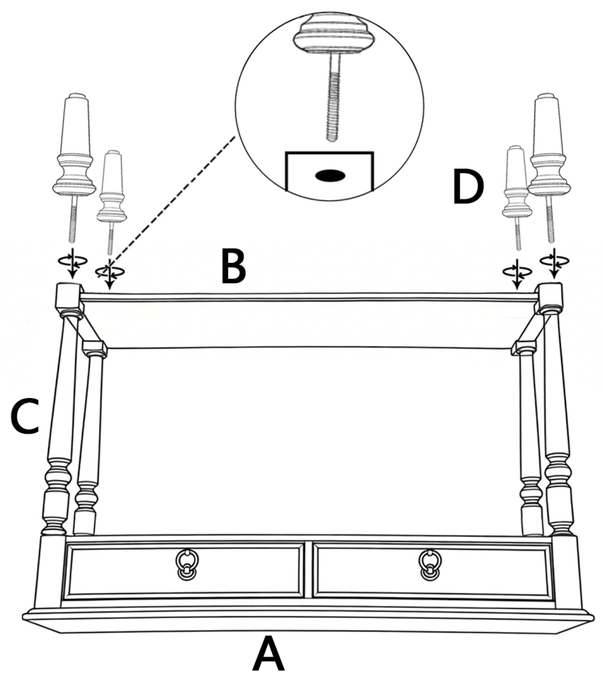

Step 3: Parts D screw to Part B

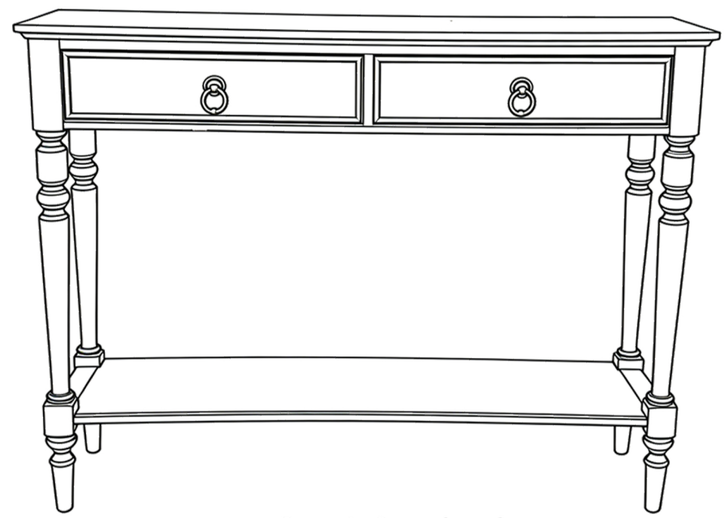

Step 4: Completed