

Assembly Instruction

A

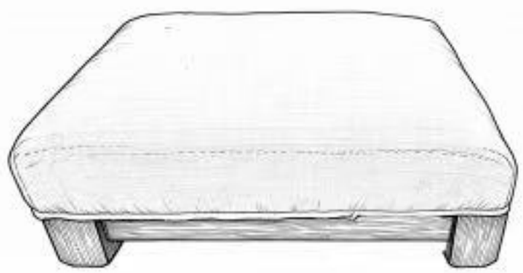


1 PC

B

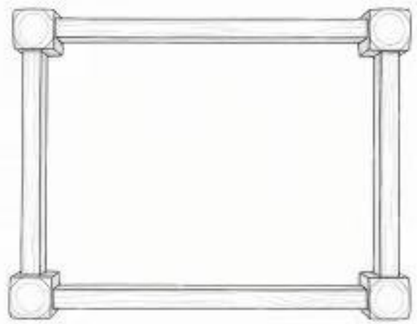


1 PC

1.

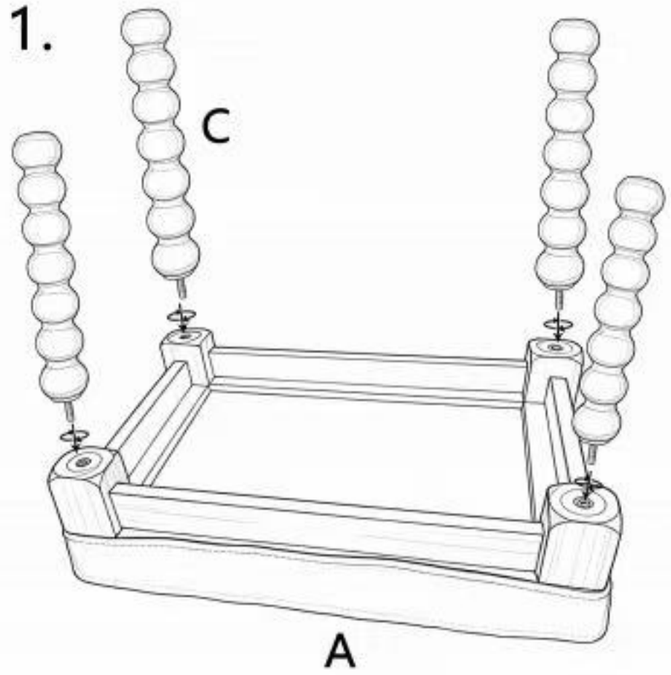


Step 1: Lay Part A with holes facing up on flat surface, then screw Parts C to Part A

2.

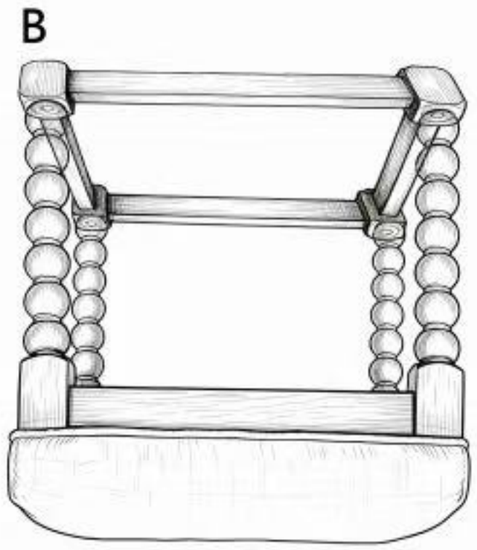

Step 2: Put Part B onto Parts C

C

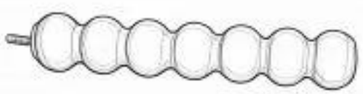


4 PCS

D



4 PCS

3.

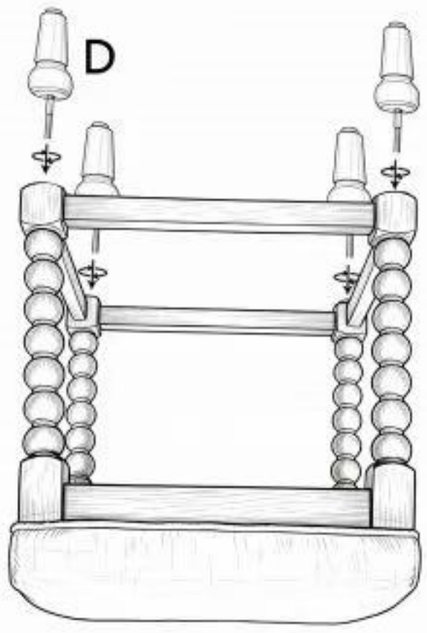

Step 3: Parts D screw to Part B

4.



Step 4: Completed