
Model: WI7496



PART LIST

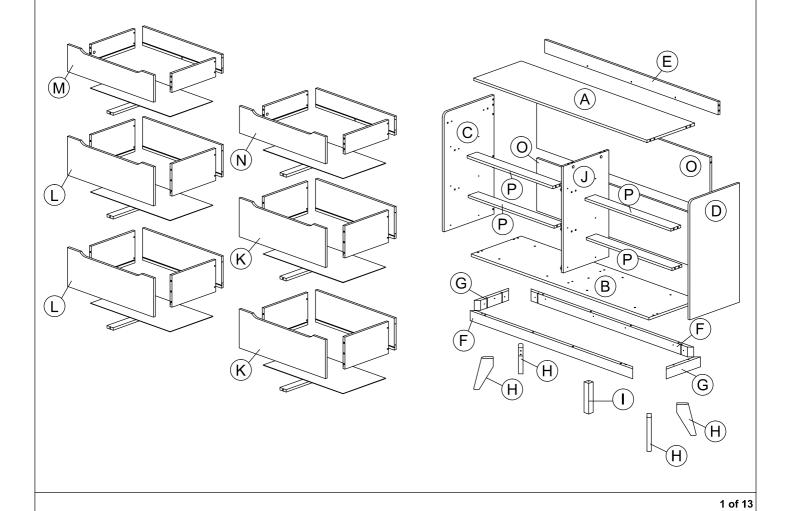



Hardware List						
No.	SHAPE	DESCRIPTION	Qty.			
1		8x25mm Wood Dowel	60Pcs			
2		15MM Myfix Minifix	28Sets			
3		M5x8mm Screw (Euro Screw)	24Pcs			
4	~~~~	M3.5x15mm Screw	96Pcs			
5	⊕	M4x38mm Screw	39Pcs			
6	<u></u>	Jcbc 'W' M6 x 40mm	9Pcs			
7	@	L Bracket	18Pcs			
8	9	Nail Leg	4Pcs			
9		Metal Drawer Slide 12" (300mm)	6 Sets			


10		Minifix Cap	12Pcs
11		Metal Corner Bracket	4Pcs
12		L Key	1Pc
13	0	Adjust Screw	1Pc
14		8x40mm Wood Dowel	2Pcs
15		15MM (DOUBLE) 63mm Myfix Minifix	2Sets

Packing Tipping Restraint


16	~~~~ ⊕	M3.5x15mm Screw	2Pcs
17	OF THE	Wall Plug	2Pcs
18	←	M4x30mm Screw	2Pcs
19		Safety Strap	2Pcs
20	0	Flat Washer 6x19x2mm	4Pcs

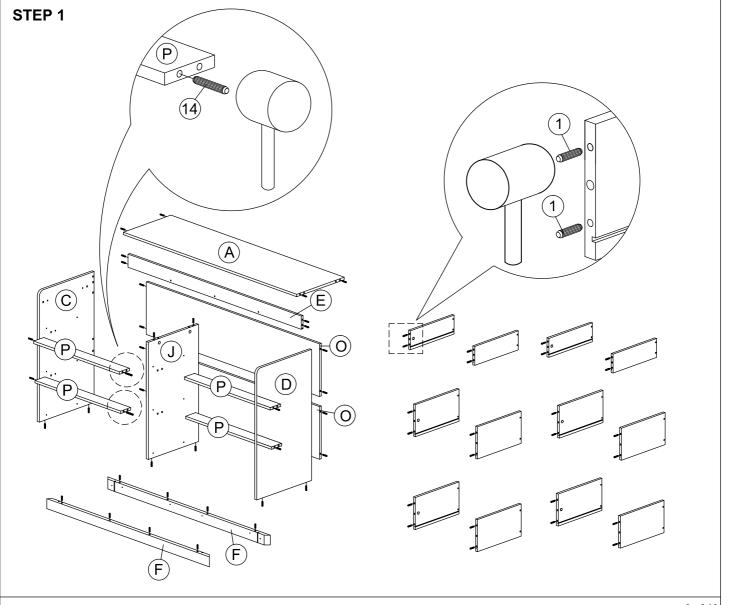


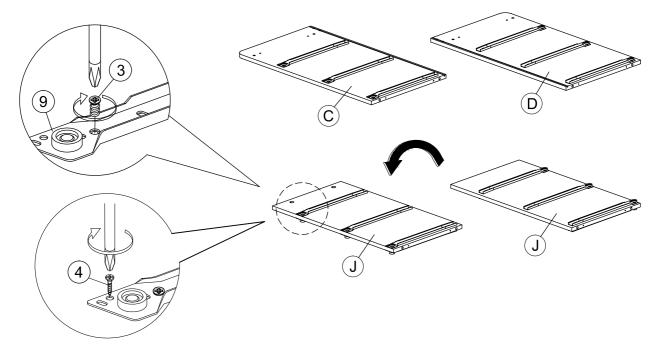


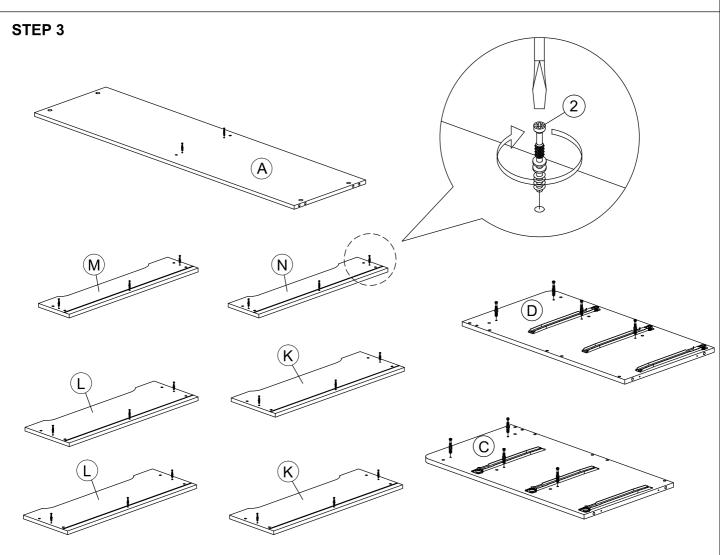


STEP 4

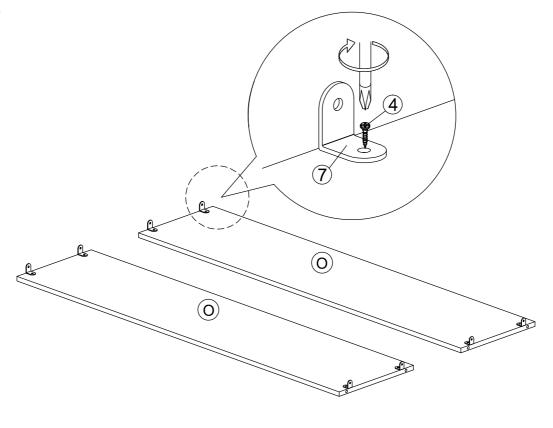


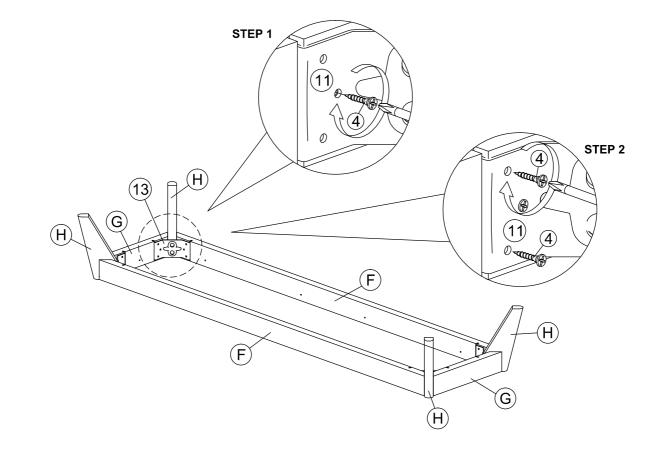


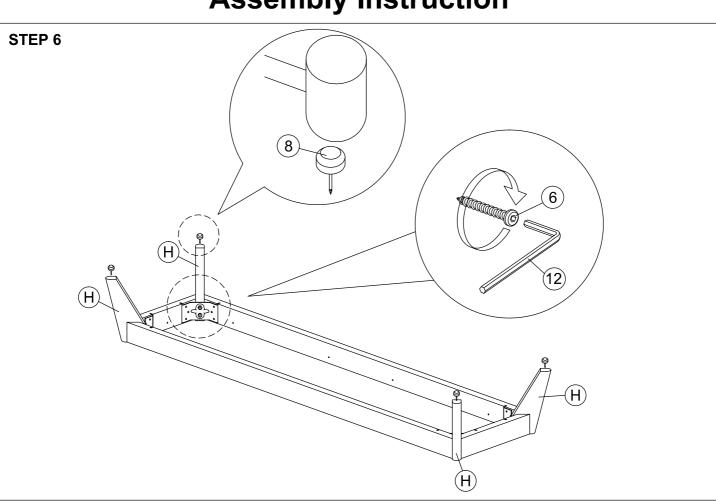


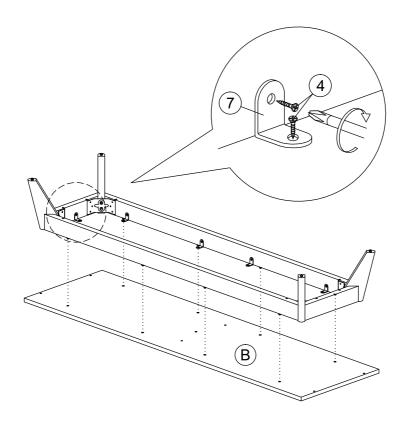


STEP 8

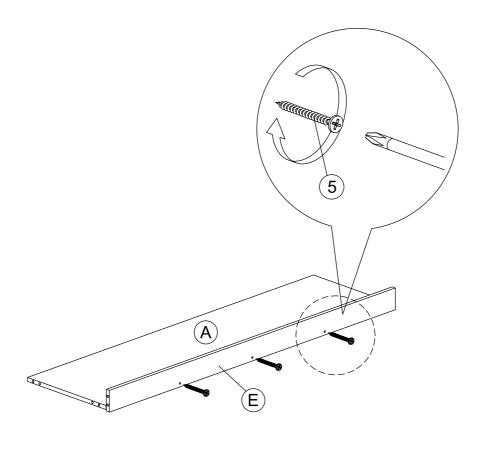


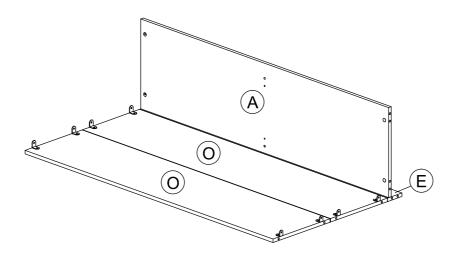

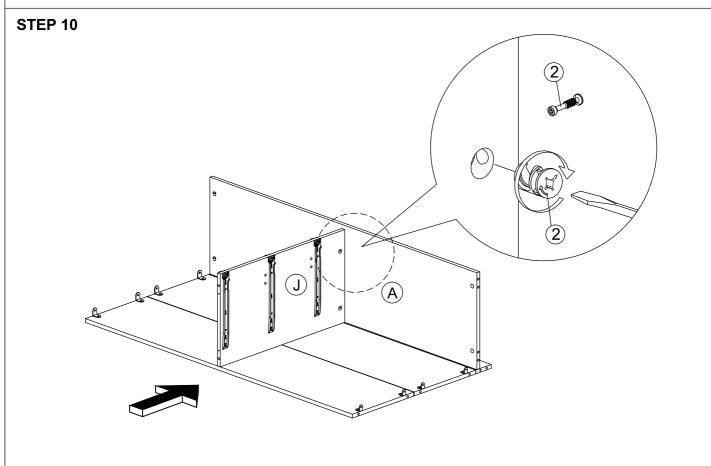


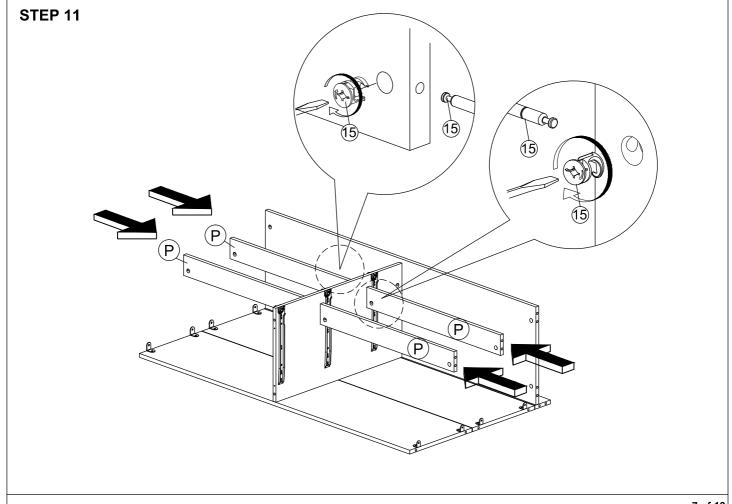


Assembly Instruction STEP 12 2 (D) STEP 13

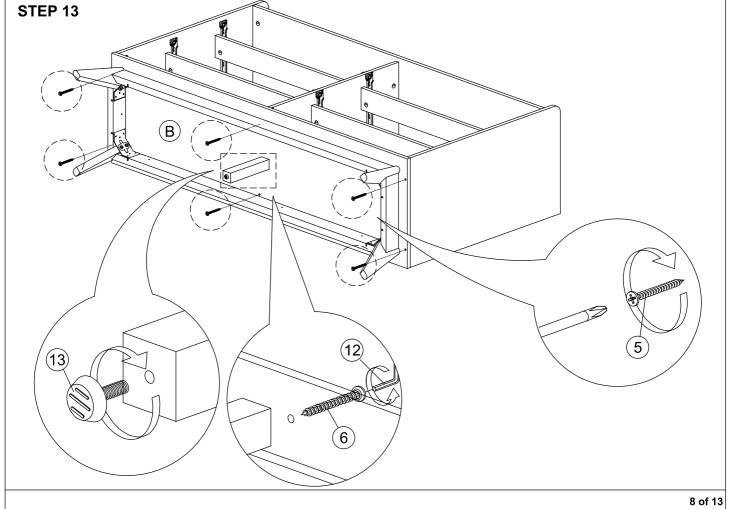


STEP 14

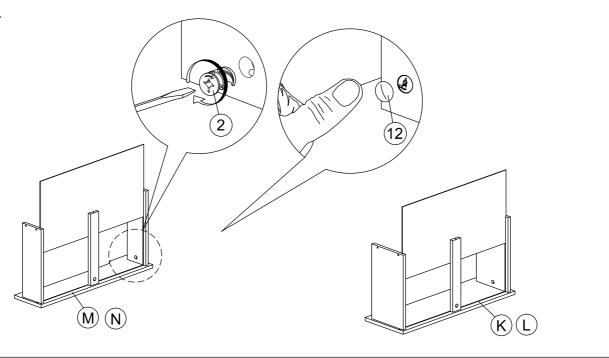


STEP 15

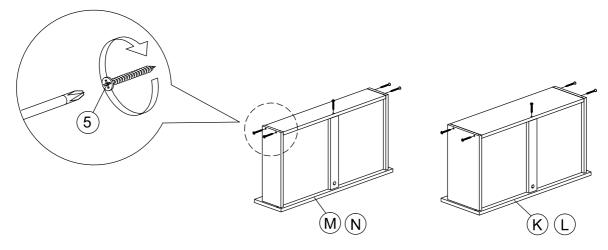

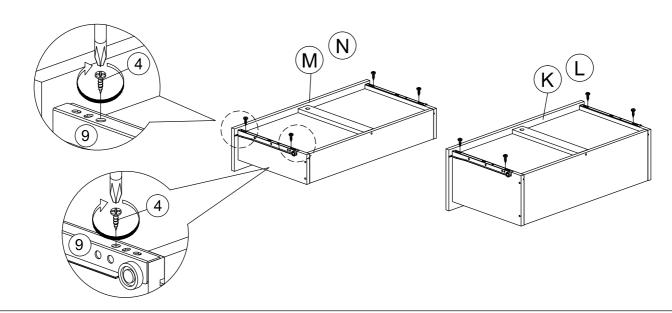

STEP 17

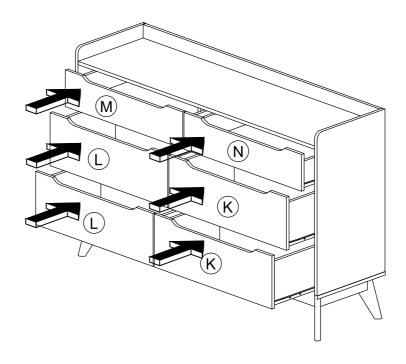


Complete




FURNITURE TIPPING RESTRAINT 1.First mark the wall with pencil as in diagram. 2. Drill small hole at the (1.57") pencil mark. 3. Insert plastic wall plug (17).


17 x2

FURNITURE TIPPING RESTRAINT

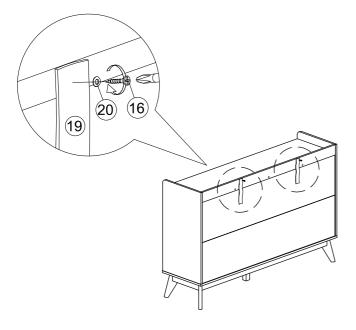


4. Add safety strap (19), washer (20) using 3.5x15mm screw (16) to back of cabinet.




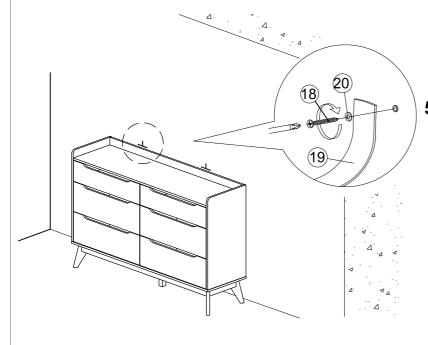

5. Finally, attach safety strap (19) and washer (20) using 4x30mm screw (18) to the wall.



20 x2

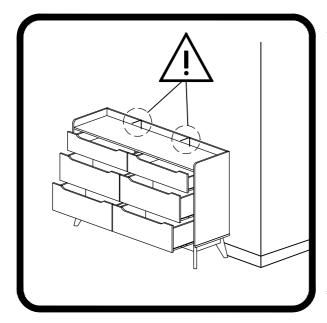



A WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- · Install tipover restraint provided.
- · Place heaviest items in the lowest drawers.
- Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not remove!



Anti-Topple hardware included for added safety and stability